



100 - 69

Operating manual

All rights reserved.

Property of Dürkopp Adler AG and protected by copyright. Reproduction or publication of the content in any manner, even in extracts, without prior written permission of Dürkopp Adler AG, is prohibited.

Copyright © Dürkopp Adler AG - 2013

1	About this operating manual	3
1.1	Scope of application of the operating manual	3
1.2	For whom is this operating manual?	3
1.3	Conventions of representation– Symbols and characters	4
1.4	Other documents	4
1.5	Liability	4
1.5.1	Transportation	5
1.5.2	Designated use	5
2	Performance description	7
2.1	Features	7
2.2	Declaration of conformity	8
2.3	Optional equipment	9
2.4	Technical data	13
3	Safety instructions	15
3.1	Basic safety instructions	15
3.2	Signal words and symbols used in warnings	16
4	Machine description 100-69	19
4.1	Sewing unit	19
4.2	Software description	20
5	Operation	21
5.1	Working methods	21
5.1.1	Working method "Production of trousers"	22
5.1.2	Working method "Breast welt pocket"	24
5.2	Swing the folding station aside.	26
5.3	Removing the fabric sliding sheet	28
5.4	Needles and threads	29
5.4.1	Recommended yarns	29
5.4.2	Changing the needles	31
5.5	Threading in the needle thread	32
5.6	Winding on the looper thread	33
5.7	Residual thread monitor	34
5.8	Slanted pocket opening (optional)	35
5.8.1	Swinging the corner knife station out / in	35
5.8.2	Setting the corner knife	37
5.9	Sewing procedure	38
5.9.1	Switching on	38
5.9.2	Reference position	39
5.9.3	Starting the sewing cycle	40
5.9.4	EMERGENCY stop	40
5.9.5	Switching off	41
5.10	Quick clamp adjustment/folder monitoring	41
5.11	Functions/operation of the optional equipment	43
5.11.1	Tape feed unit	43
5.11.2	Device for endless zippers	45
5.11.3	Downholder and Pocket bag clamp	46
5.11.4	Stacker	47
5.11.5	Roll-off device	51
5.11.6	Blow-out device	52
5.11.7	Bundle clamp	53
5.12	Maintenance	55
5.12.1	Cleaning	55
5.12.2	Oil level control	57

6	Set-up.....	59
6.1	Delivery scope	59
6.2	Installing the sewing unit.....	60
6.2.1	Transportation.....	60
6.2.2	Removing the transport securing devices.....	61
6.2.3	Setting the working height	62
6.3	Attaching the machine parts removed for shipping.....	63
6.3.1	Attaching the thread reel holder.....	63
6.3.2	Mounting the control panel	63
6.3.3	Fixing the winder.....	64
6.3.4	Table extensions (optional equipment).....	64
6.4	Electrical connection.....	66
6.4.1	Connecting the control panel DACIII	66
6.4.2	Connecting a separate winder	67
6.4.3	Checking the nominal voltage and connecting to the mains.....	67
6.4.4	Checking the nominal voltage of the vacuum device.....	68
6.4.5	Direction of rotation of the sewing motor and the vacuum blower ..	68
6.5	Pneumatic connection	69
6.6	Connction to the in-house vacuum unit	71
6.7	Oil lubrication	72
6.8	Putting into operation.....	73
6.9	Installation of the software	75
6.10	Customer service.....	77
7	Decommissioning.....	79
8	Disposal.....	81

1 About this operating manual

The operating manual for the 100-69 sewing unit was compiled with the utmost care. It contains information and notes in order to make long-term and reliable operation possible.

Should you notice any discrepancies or if you have improvement requests, then we would be glad to receive your feedback,  *chapter 6.10 Customer Service*.

Please regard the operating manual as part of the product and keep it in a safe place where it can be easily accessed. Read the operating manual completely prior to using the unit for the first time. Only pass the product on to third parties together with the operating manual.

1.1 Scope of application of the operating manual

This operating manual describes the set-up and intended use of the 100-69 sewing unit.

1.2 For whom is this operating manual?

The operating manual is intended for:

- Machine operators:
This group of employees has been trained in operating the machine and can access the operating manual. Specifically  *chapter 5 of the Operating Manual* is important for this group of employees.
- Technicians:
This group of employees has the appropriate technical training allowing them to perform maintenance on the sewing unit or to repair faults. Specifically  *chapter 6 of the Set-up Instructions* is important for this specialized staff.
Service instructions are supplied separately.

With regard to minimum qualification and other requirements to be met by the personnel, please also observe  *chapter 3 of the Safety Instructions*.

1.3 Conventions of representation– Symbols and characters

Different information is depicted or highlighted in this operating manual by the following characters for easier and quicker understanding:

Symbol/character	Meaning
•	Lists are identified by bullet points.
1. 2.	Instructions are numbered and have to be performed in the specified order.
	References to further information in this operating manual or other documents are identified by this symbol.

Safety Important warnings for the user of the machine are specifically marked. Because safety constitutes an area of major importance, hazard symbols, levels of risk, and their signal words are described separately in  *chapter 3 of the Safety Instructions*.

Location information Information on where something is positioned using the terms "right" or "left" must always be regarded from the operator's point of view if the figure gives no other obvious indication for determining the location.

1.4 Other documents

The device contains built-in components from other manufacturers. The respective manufacturers have carried out hazard assessments for these purchased parts and confirmed compliance of the design with the applicable European and national regulations. The intended use of the built-in components is described in the corresponding manuals of the manufacturers.

1.5 Liability

All information and notes in this operating manual have been compiled in accordance with the latest technology and the applicable standards and regulations.

The manufacturer cannot be held liable for any damage due to:

- Damage during transport
- Failure to observe the operating manual
- Improper use
- Unauthorized modifications to the machine
- The deployment of untrained personnel
- Using spare parts not approved

1.5.1 Transportation

Dürkopp Adler cannot be held liable for any damage during transport. Check the delivered product immediately after receiving it. Report any damage to the last transport manager. This also applies if the packaging is not damaged.

Keep the machines, devices and packaging material in the condition they were at the time when the damage was identified. That secures any claims towards the transport company.

Report all other complaints to Dürkopp Adler immediately after receiving the product.

1.5.2 Designated use

The Beisler 100-69 is a sewing unit designated for the sewing of light to medium-weight material. Such material is generally made of textile fibers, composite materials but it may also consist of leather. These materials are used in the garment industry.

In general only dry material must be sewn on this machine. The material must not contain any hard objects.

The seam is generally sewn with core thread, polyester fiber or cotton thread.

The dimensions for needle and hook threads can be taken from the table in chapter 5.4.

Before using any other threads it is necessary to estimate the consequential dangers and to take the respective safety measures, if required.

The machine may only be set up and operated in dry conditions on well-maintained premises. If the machine is operated on premises that are not dry and well-maintained, then further measures may be required which must be compatible with EN 60204-31:1999.

Only authorized/trained persons may work on the machine.

The manufacturer will not be held liable for damage resulting from improper use.

WARNING



Danger due to high voltage, crushing and sharp objects.

Improper use can result in injuries.

Please follow all instructions given in the manual.

ATTENTION

Improper use could result in material damage.

Please follow all instructions given in the manual.

2 Performance description

The 100-69 is a sewing unit for the runstitching of piped pocket, flap pocket and welt pocket openings with rectangular or slanted pocket corners.

2.1 Features

The **Beisler 100-69** is a sewing unit for automated runstitching of piped pocket, flap pocket and welt pocket openings with rectangular or slanted pocket corners.

The slanted pocket corners result from the offset of the two seam rows. It is possible to sew different slants at the seam beginning and at the seam end.

Depending on the working method different feeding devices, corner knife stations and optional equipments are used.

Machine head

- Twin needle lockstitch version
- Needle bars can be switched separately
- Vertical hook
- Externally driven center knife, speed and circuit timing programmable
- Thread trimming device for needle and hook threads
- Needle thread monitor
- Photoelectric remaining thread monitor for the hook threads
- DC direct sewing drive

Step motors for the material feed and the length adjustment of the corner trimming device

The step motor technology allows short machine times and guarantees an absolutely precise material feed and accurate corner incisions. Thus, it contributes to an unequalled pocket quality combined with high productivity.

New control generation “DAC III”

The graphic user guidance exclusively occurs via internationally comprehensible symbols and text lines in the corresponding language. The various symbols are combined in groups within the menu structure of the sewing and test programs. The user-friendly operation cuts short training times.

20 storage locations with each 6 seam programs are available. Thus it is possible to generate and store up to 6 different seam programs per storage location. Each storage location can memorize up to 6 sewing programs in any order that will be sewn in sequence.

All relevant slants can be programmed by the operator via parameters.

The comprehensive test and monitoring system **MULTITEST** is integrated in the DAC. A microcomputer does the control tasks, supervises the sewing process and indicates operating errors and malfunctions in the display.

Optional equipment

Due to a flexible system of optional equipment the sewing unit can be optimally adapted to the respective application at low cost.

Sewing equipment and folders

Please see the 100-69 parts list for details concerning sewing equipment and folders for the various applications or contact the Beisler company.

2.2 Declaration of conformity

The machine complies with the European regulations specified in the declaration of conformity or in the installation declaration.



2.3 Optional equipment

Due to a flexible system of optional equipment the sewing unit can be optimally adapted to the respective application at low cost.

- = Standard equipment
- = optional extension

Order No.	Optional equipment	100-69 (rectangular pocket)	100-69 (slanted pocket)
Knife bracket kits			
B169 590014	Kit rectangular pocket This kit contains the knife bracket and the sewing head for rectangular pockets	○	
B169 590024	Kit slanted pocket This kit contains the knife bracket and the sewing head for rectangular and slanted pockets		○
Stacking devices			
1970 593144	Throw-over stacker To be position near the machine for stacking to the side.	○	○
0745 427524	Universal stacking device (grip stacker) To be positioned for stacking to the side.	○	○
1970 593194	Bundle clamp (incl. table) For the bundling of trousers parts	○	○
0745 597604	Blow-out device For blowing out the finished workpieces	○	○
0745 597954	Roll-off device The roll-off device is used to transport short pieces into the stacker or to eject the pieces to be processed. The speed and the working cycle of the roll-off device can also be programmed.	○	○
Zipper feeders			
1970 593414	Cutter with pull-off device Device for the processing of endless zippers Only to be deployed in conjunction with the folders RV 1970 595564 – 1970 595704.	○	○
1970 593444	Zipper guide stop for single and double piping (Interior or exterior pocket processing, manual position- ing of the trimmed zipper)	○	○

Order No.	Optional equipment	100-69 (rectangular pocket)	100-69 (slanted pocket)
Breast welt processing			
B169 590094	Kit breast welt processing Consists of flap clamp for the breast welt processing, second photocell rotatable to the left, as well as 5 laser marking lamps with attachments. (only in conjunction with the kit slanted pockets 1970 596944, rapid clamp adjustment left 1970 593154 and clamp set 200 mm B169 590034)		○
Laser add-on kits			
0745 598144	Two-pack laser add-on kit For extending the standard 3 laser marking lamps to a maximum of 5 laser marking lamps. For an easy replacement the laser lights are equipped with a short cable and a plug.	○	○
0745 597934	Three-pack laser add-on kit For extending the existing 5 laser marking lamps to 8 laser marking lamps. An extension to 16 switchable laser lights is possible (additional cable 0745 597974 and PCB 9850 001073 needed). For an easy replacement the laser lights are equipped with a short cable and a plug.	○	○
Trays			
1970 593104	Rest table (small) Size about 450mm x 700mm	○	○
1970 593114	Rest table (large) Size about 600mm x 800mm	○	○
Light barriers			
B169 590114	Second photocell Second photocell for the automatic flap scanning (for the alternating processing of jackets and trousers switchable via program)	○	○
Vacuum			
B169 590084	Vacuum device For an exact positioning of the workpieces, to be connected to the in-house vacuum unit Remark: If there is no in-house vacuum unit, a vacuum generator has to be ordered additionally.	○	○

Order No.	Optional equipment	100-69 (rectangular pocket)	100-69 (slanted pocket)
1970 593314	Vacuum (side channel blower) For an exact positioning of the workpieces without in-house vacuum unit, a side channel blower can be adapted into the stand.	☐	☐
Miscellaneous			
0745 598134	Sewing light with transformer	☐	☐
0745 598254	Set of castors Set of transport castors in order to move the sewing unit without external appliances.	☐	☐
B169 590074	Tape feed automatic cutting (driven by step-motor) Automatic feeding and cutting of a reinforcement strip pulled from a roll. Start time and cutting time can be programmed corresponding to the pocket.	☐	☐
1970 593154	Pneumatic clamp adjustment left For an automatic adjustment of the left clamp when changing the folder	☐	☐
1970 593164	Pneumatic clamp adjustment right For an automatic adjustment of the right clamp when changing the folder	☐	☐
1970 593214	Special clamp (sandwich clamp) Special clamp feed system for difficult materials (needed for piped pockets in car seats, articles made from leather or synthetic materials) Only for needle distances of 10 and 12 mm. Not combinable with the tape feed.	☐	☐
1970 593334	Shaped guide lining loop triangle 90° processing of interior jacket pockets	☐	☐
1970 593344	Clamp stop Clevis clamp stop for button hole strap (processing of trousers)	☐	☐
1970 593364	Blow-out device left For the blowing on of the piping with large piping projections	☐	☐
1970 593374	Blow-on device right For the blowing on of the piping with large piping projections	☐	☐
B169 590104	Downholder and Pocket bag clamp Downholder for the smoothing out of the fullness caused by the darts with a clamping device for the pocket bags.	☐	☐

Order No.	Optional equipment	100-69 (rectangular pocket)	100-69 (slanted pocket)
Clamps			
B169 590034	Set of clamps 200 mm Universal clamp right with folding plate, without flap clamp for jackets, trousers and linings. Seam length without flap 200 mm, with flap 180 mm.		
B169 590044	Flap clamp right for 200 mm clamp (max seam length with flap 180 mm)		
B169 590054	Flap clamp left for 200 mm clamp (max seam length with flap 180 mm)		
B169 590064	Set of clamps 240 mm Contains right and left clamp for a seam length of 240 mm without flap and 220 mm with flap. Includes right and left flap clamp.		

2.4 Technical data

Technical data	100-69
Sewing stitch type	301/Double lockstitch
Number of needles	2
Needle system	2134-85
Needle size: [Nm]	80-100
Number of stitches (programmable) [min ⁻¹]	3000
Number of stitches at factory setting: [min-1]	2500
Stitch length (programmable) [mm]	0.5-3,0
Number of condensed stitches [n] (programmable)	1-10
Number of bartack stitches [n] (programmable)	0-5
Seam distance [mm]	4.8, 8, 10, 12, 14, 16, 18, 20, 22, 24, 26, 30
Pocket length [mm]	20-200 (240 mm optional)
maximum seam offset [mm]	+/- 13
Operating pressure [bar]	6
Air consumption per working cycle about [NL]	5
Height of table without castors [mm] - min - max	797 1076
Height of table with castors [mm] - min - max	859 1138
Length, width, height [mm]	1440, 780, 1200
Weight [kg]	about 280 (depending on equip- ment)
Nominal voltage [V]	1 x 190-240
Frequency [Hz]	50/60

3 Safety instructions

This section contains basic instructions for your safety. Read the instructions carefully before setting up or operating the machine. Make sure to follow the information included in the safety instructions. Failure to do this can result in serious injury and damage to the machine.



3.1 Basic safety instructions

The machine may only be used as described in this operating manual.

The operating manual must be available at the machine's location at all times.

Work on live components and equipment is prohibited. Exceptions are defined in the specifications in DIN VDE 0105.

For the following work, the machine must be disconnected from the power supply using the main switch or by disconnecting the power plug:

Replacing the needle or other sewing tools

Leaving the workplace

Performing maintenance work and repairs

Incorrect or defective spare parts could impair safety and damage the machine. Therefore only use original spare parts from the manufacturer.

Transportation When the machine is being transported, use a lifting carriage or a forklift. Raise the machine max. 20 mm and secure it against slipping off.

Set-up The connecting cable must have a power plug approved in the specific country. The power plug may only be connected to the power cable by a qualified specialist.

Operator's obligations Observe the country-specific safety and accident prevention regulations and the legal regulations concerning industrial safety and the protection of the environment .

All warnings and safety signs on the machine must always be in legible condition and must not be removed. Missing or damaged labels have to be replaced immediately.

Requirements to be met by the personnel

The machine may only be set up by qualified specialists.

Maintenance work and repairs may only be carried out by qualified specialists.

Work on electrical equipment may only be carried out by qualified specialists.

Only authorized persons may work on the machine. Every person who works on the machine must have read the operating manual first.

Operation

Inspect the machine while in use for any externally visible damage. Interrupt your work if you notice any changes to the machine. Report any changes to your supervisor. A damaged machine must not be used any more.

Safety devices

Safety equipment must not be removed or put out of service. If this cannot be avoided for a repair operation, the safety equipment has to be refitted and put back into service immediately afterwards.

3.2 Signal words and symbols used in warnings

Warnings in the text are distinguished by color bars. The color scheme is oriented towards the severity of the danger. Signal words specify the severity of a danger:

Signal words Signal words and the endangerment that they describe:

Signal word	Endangerment
DANGER	Resulting in death or serious injury.
WARNING	Death or serious injury possible.
CAUTION	Moderate to minor injuries possible.
ATTENTION	Damage possible.

Symbols In the case of dangers to personnel, the following symbols indicate the type of hazard:

Symbol	Type of danger
	General danger
	Danger due to electric shock
	Danger due to sharp objects
	Danger due to crushing

Examples Examples of the layout of the warnings in the text:

DANGER



Type and source of the danger

Consequences in the event of noncompliance

Measures for avoiding the danger

This is what a warning looks like for a hazard that will result in serious injury or even death if not complied with.

WARNING



Type and source of the danger

Consequences in the event of noncompliance

Measures for avoiding the danger

This is what a warning looks like for a hazard that could result in serious injury or even death if not complied with.

CAUTION



Type and source of the danger

Consequences in the event of noncompliance

Measures for avoiding the danger

This is what a warning looks like for a hazard that could result in moderate or minor injury if the warning is not complied with.

ATTENTION

Type and source of the danger

Consequences in the event of noncompliance

Measures for avoiding the danger

This is what a warning looks like for a hazard that could result in material damage if not complied with.

ATTENTION



Type and source of the danger

Consequences in the event of noncompliance

Measures for avoiding the danger

This is what a warning looks like for a hazard that could result in environmental damage if not complied with.

4 Machine description 100-69

The 100-69 is a sewing unit for the runstitching of piped pocket, flap pocket and welt pocket openings with rectangular or slanted pocket corners.

The correct operating principle involves a sequence of different steps and requires precise knowledge of all operating controls.

4.1 Sewing unit

The illustration below shows the sewing unit 100-69.

Fig. 1: Complete overview of the 100-69




4.2 Software description

The software and all its setting possibilities is explained in detail in the Programming instructions. The Programming instructions are available together with the Service Instructions.

At this point only a short overview of the control panel with its keys and corresponding functions is added.

Fig. 2: Control panel of the 100-69

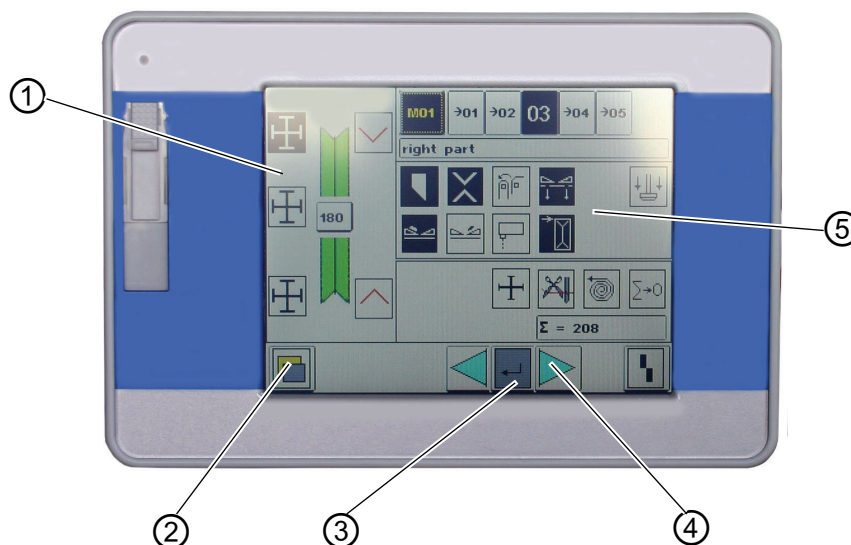

(1) - Color display
(2) - Escape key
(3) - OK key

(4) - Cursor key
(5) - Icon indicating the function

Key groups and their function:

Key/keygroup	Function
Icons indicating the function	Directly select function/parameter.
Cursor keys	Select function/parameter. $\leftarrow, \rightarrow$: Select icon the of requested function/parameter $\uparrow, \downarrow$: Switch the function/parameter on and off, select the previous/next parameter value level, activate the test program
Escape key	Display the former value again.
OK key	- Open the window for the setting of the selected function/parameter. - Adopt the set value.

5 Operation

The Beisler 100-69 is a sewing unit for the runstitching of piped pocket, flap pocket and welt pocket openings with rectangular or slanted pocket corners.

Fault-free operation is necessary in order to achieve a good sewing result. In order to achieve this, all relevant operations on the 100-69 will be explained below.

5.1 Working methods

DANGER



Danger of being crushed!

Do not reach under the downholder, the feeding clamp and the folder during the positioning process.

ATTENTION

Material damage!

The steps of the positioning process are dependent on the equipment of the respective sewing unit. Thus, the positioning steps described in the examples only apply for sewing units with identical equipment.

The individual working methods for trousers and men's jackets are described on the following pages.
The description is structured as follows:

Feeding positions

This item indicates the feeding points for the different workpieces (e.g. left and right parts).

Aligning the positioning aids

Here you will find a description how to adjust and align the positioning aids (e.g. positioning marks, marking lamps, guides etc.).

Feeding and starting the sewing process

The steps of the feeding process are dependent on the equipment of the respective sewing unit.

5.1.1 Working method "Production of trousers"


Possible processing variants

- Front trousers pockets with underlaid pocket bag.
- Hind trousers pockets with or without flap, with underlaid pocket bag.
- Hind trousers pockets with or without flap, with automatically fed reinforcement strip.

Positioning method

Example: Hind trousers without flap, with pocket bag positioned underneath


Fig. 3: Production of trousers 1st step

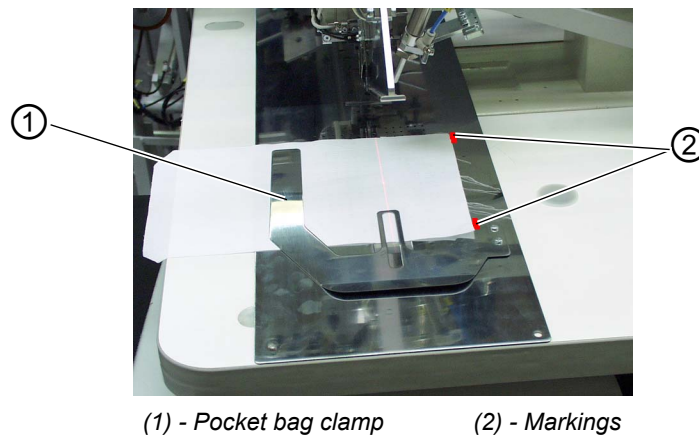

1st step:

1. Select the pocket program at the control panel.
2. Push the pocket bag under the pocket bag clamp (1) and position it at the markings (2). For example adhesive strips fitted on the fabric sliding sheet may serve as markings.

Fig. 4: Production of trousers 2nd step

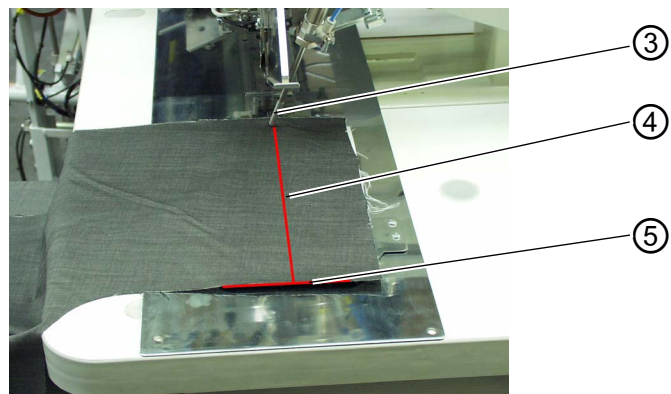


(3) - Fabric downholder
 (4) - Marking

(5) - Center positioning point

2nd step:

1. Position the hind trousers at the center positioning point (5) and the marking (4).
2. Actuate the central foot switch.
The hind trousers is clamped by the fabric downholder (3) in its position.
3. Smooth out the clamped hind trousers in the dart area.
4. If the machine is additionally equipped with vacuum:
Actuate the left foot switch.
The vacuum is switched on.

Fig. 5: Production of trousers 3rd step

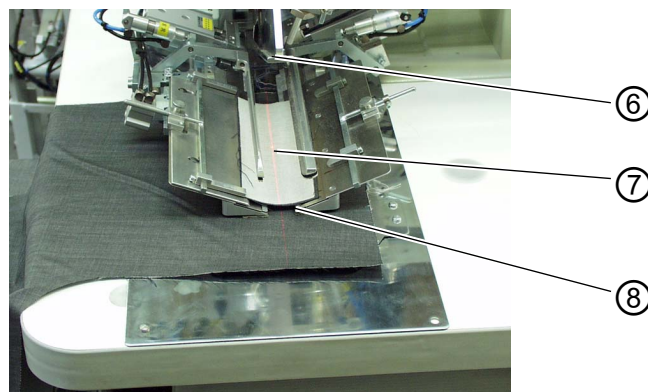

(6) - Folder
 (7) - Piping strip

(8) - Front edge

3rd step:

1. Step on the central pedal.
The transport clamps move to the front and lower on the workpiece.
2. Position the piping strip (7) on the feeding clamps flush with the front edges (8).

A detailed description of the alignment of the different types of piping on the feeding clamp follows.

See "Positioning of piping strips".

3. Actuate the central foot switch.
The folder (6) lowers.
4. Actuate the central pedal once again.
The sewing cycle starts.

5.1.2 Working method "Breast welt pocket"

Sewing patterned or plain goods

When processing plain goods without pattern it is not necessary to align jacket front part and breast welt as per pattern.


This results in a faster working method for plain goods.

- Aligning the positioning aids

Positioning method

Example: Men's jacket front part with breast welt pocket, patterned


Fig. 6: Breast welt pocket 1st step

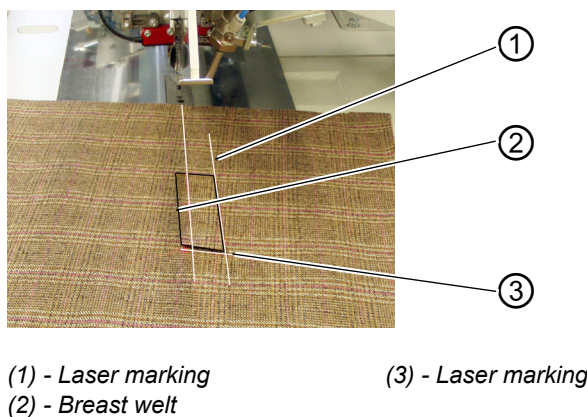

1st step:

1. Select pocket program **No. 7** at the control panel.
2. Position breast welt (2) on the jacket front as per the stripes.
3. Align the breast welt of the jacket front at the laser markings (1) and (3) (right and transversal laser).
4. Step on the start pedal.
The vacuum is switched on.
The jacket front is aspirated.


Fig. 7: Breast welt pocket 2nd step

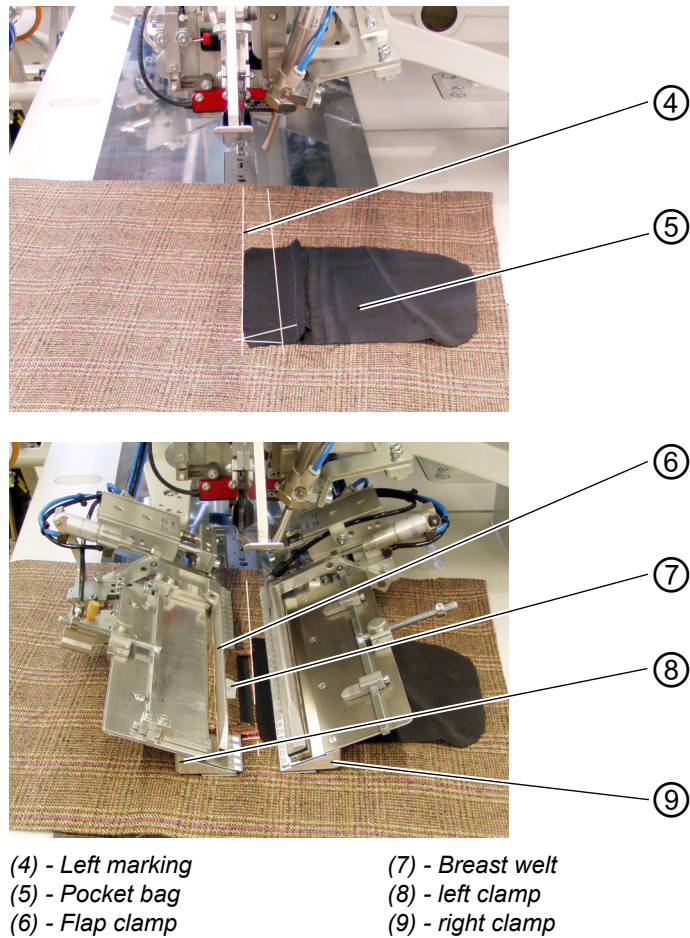

2nd step:

1. Remove the breast welt (7).
2. Position the pocket bag (5) at the left laser (4).
3. Step on the central pedal.
 The fabric clamps move to the front.
 The right clamp (9) clamps the jacket front.
 The left clamp (8) remains without pressure

Fig. 8: Breast welt pocket 3rd step

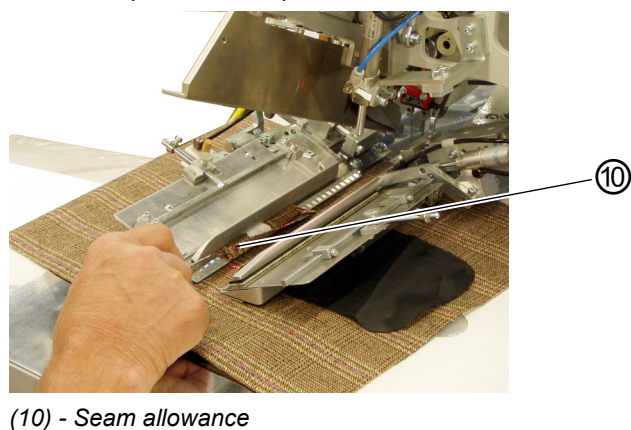

3rd step:

1. Position the breast welt (7) at the stop of the left fabric clamp (at the front laser).
2. Fold back the seam allowance (10) at the clamp and check the course of the pattern in longitudinal direction.
Correct the course of the pattern by slightly pulling the jacket front or by shifting the flap clamp (6).
3. Step on the central pedal.
Pressure is applied on the left fabric clamp (8).
4. Actuate the central pedal.
The folder lowers.
5. Actuate the central pedal once again.
The sewing cycle starts.

5.2 Swing the folding station aside.


ATTENTION

Material damage!

After being swung back the folding station must click into lock (1).

For interventions at the sewing point (threading the needle threads, needle change etc.) the entire folding station with folder and laser lamps can be swiveled to the right.

Fig. 9: Folding station swung out

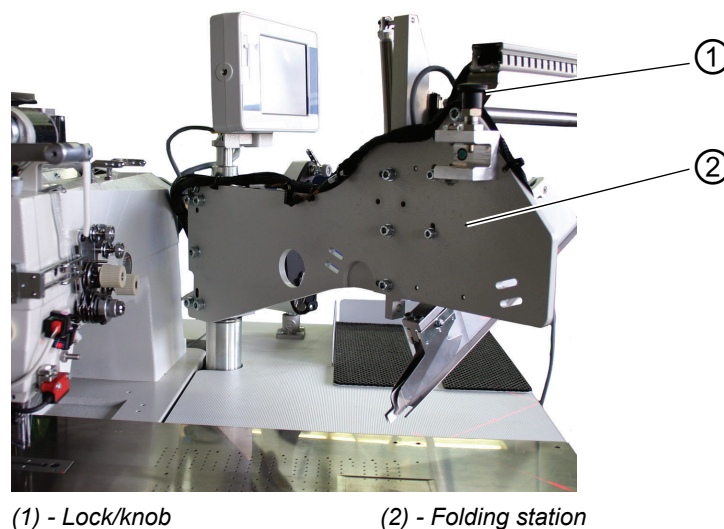


(1) - Lock/knob

(2) - Folding station

1. Pull the lock (1) upwards.
2. Swing the complete folding station (2) with folder to the right. The sewing point is freely accessible.

With the sewing unit switched on, a safety message appears on the screen of the control panel.


Fig. 10: Safety message

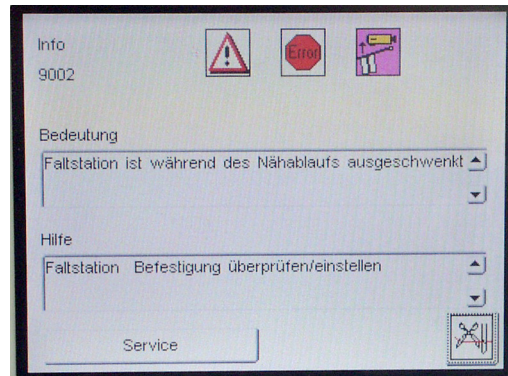

Swinging the folding station back

Swing back the folding station (2) until lock (1) clicks into place.

Fig. 11: Folding station lock

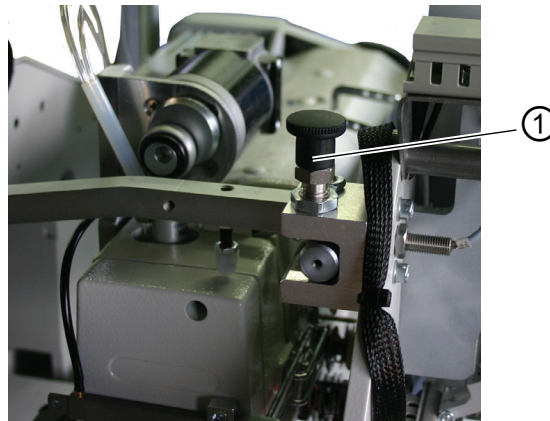

(1) - Lock/knob

5.3 Removing the fabric sliding sheet

DANGER



Risk of injury


Turn the main switch off.

Remove the fabric sliding sheet only with the sewing unit switched off.

Changing the hook thread bobbins:

1. Turn the main switch off
2. Lift the fabric sliding sheet (2) in the area of the recess (1) on the table top and swing it to the left.


Fig. 12: Removing the fabric sliding sheet

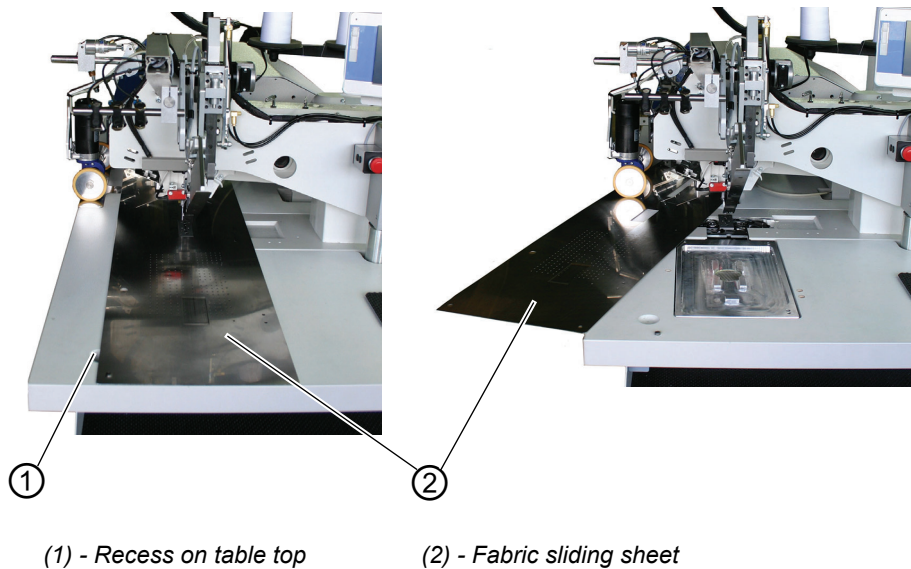

Removing the hook thread bobbins (for maintenance work and adjustments):

1. Turn the main switch off
2. Completely lift the fabric sliding sheet at the rear pin (3).

Fig. 13: Completely removing the fabric sliding sheet

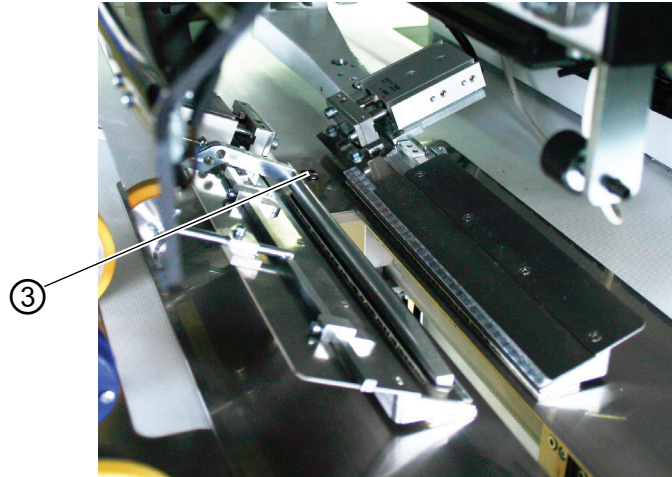

(3) - Pin

5.4 Needles and threads

In order to achieve the optimal sewing result, the appropriate needles and yarns should be employed.

5.4.1 Recommended yarns

Needle system	2134-85
Recommended needle size	Nm 90 for thin material
Recommended needle size	Nm 100 for medium-weight material
Recommended needle size	Nm 110 for heavy-weight material

High sewing security and good sewability are achieved with the following core threads:

- Two-ply polyester endless polyester core-spun(e.g. Epic Poly-Poly, Rasant x, Saba C, ...)
- Two-ply polyester endless cotton core-spun(e.g. Frikka, Koban, Rasant, ...)

If these threads are not available, the polyester fibre or cotton threads listed in the table can also be sewn.

Often two-ply core threads are offered by the thread manufacturers with the same designation as three-ply polyester fibre threads (3cycl.-spun). This causes uncertainty with regard to twisting and thread thickness.

When in doubt, unravel the thread and check whether it is twisted 2- or 3-ply. The label no. 120 on the thread reel of a core thread corresponds e.g. to the thread size Nm 80/2 (see table values in brackets).

In case of monofilament threads you can use needle threads and hook threads of the same thickness. The best results are achieved with soft and elastic threads (software) of the thread thickness 130 Denier.

Recommended thread thicknesses:

Needle size Nm	Core thread		Core thread	
	Needle thread	Hook thread	Needle thread	Hook thread
	Polyester endless Label no.	Polyester spun Label no.	Polyester endless Label no.	Cotton spun Label no.
90	120 (Nm 80/2)	120 (Nm 80/2)	120 (Nm 80/2)	120 (Nm 80/2)
100	100 (Nm 65/2)	100 (Nm 65/2)	100 (Nm 65/2)	100 (Nm 65/2)
110	75 (Nm 50/2)	75 (Nm 50/2)	75 (Nm 50/2)	75 (Nm 50/2)

Needle size Nm	Polyester fibre thread (3cycl.-spun)		Cotton thread	
	Needle thread	Hook thread	Needle thread	Hook thread
90	Nm 80/3-120/3	Nm 80/3-120/3	NeB 50/3-70/3	NeB 50/3-70/3
100	Nm 70/3-100/3	Nm 70/3-100/3	NeB 40/3-60/3	NeB 40/3-60/3
110	Nm 50/3-80/3	Nm 50/3-80/3	NeB 40/4-60/4	NeB 40/4-60/4

5.4.2 Changing the needles

WARNING



Risk of injuries from cuts and stitches!

Turn the main switch off.

Change the needles only with the main switch switched off.


Do not reach into the area of the centre knife (3) when changing the needles.

ATTENTION

Material damage!

After changing to another needle size the needle protection on the hook has to be readjusted, Service Instructions.

Fig. 14: Changing the needles

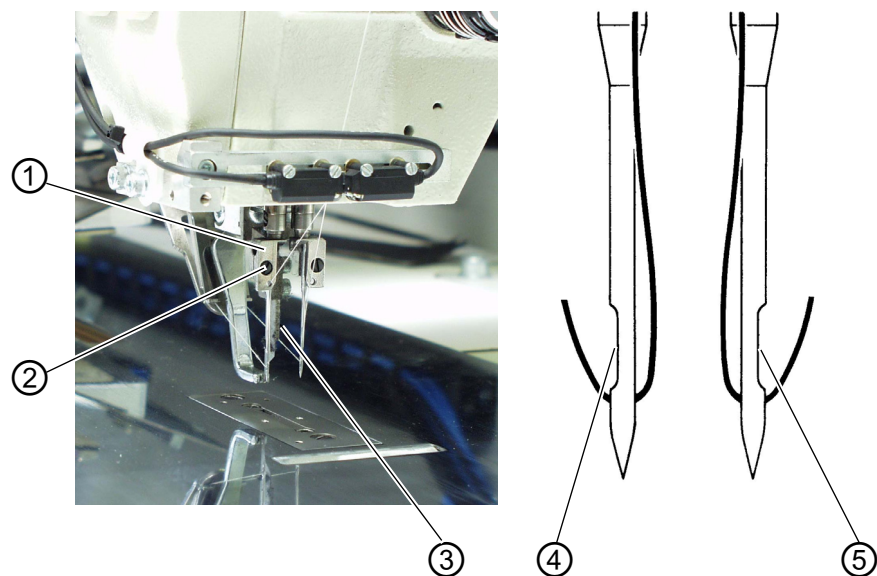

(1) - Needle holder

(2) - Screw

(3) - Center knife

(4) - Needle scarf left needle

(5) - Needle scarf right needle

1. Swing the folding station aside, chapter 5.2.
The needles are freely accessible.
2. Loosen screw (2) and remove the needle from the needle holder (1).
3. Push the new needle into the drill-hole of the needle holder (1) as far as it will go.
Seen from the operator's side the scarf (4) of the left needle must point to the left and the scarf (5) of the right needle must point to the right (see sketch).
4. Tighten screw (2).

5.5 Threading in the needle thread


WARNING



Risk of injury

Turn the main switch off.
Thread in the needle thread only with the sewing unit switched off.

Fig. 15: Threading in the needle thread

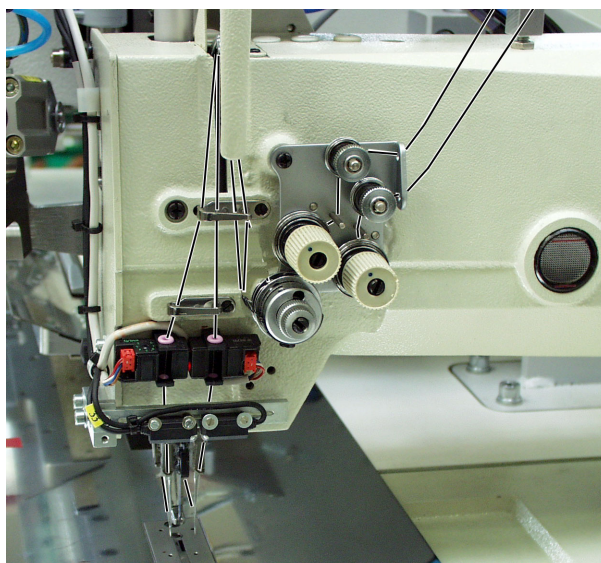


Thread in the needle thread as shown in the picture.

5.6 Winding on the looper thread

The separate bobbin winder makes it possible to wind the hook thread independently from the sewing operation.

Fig. 16: Separate winder

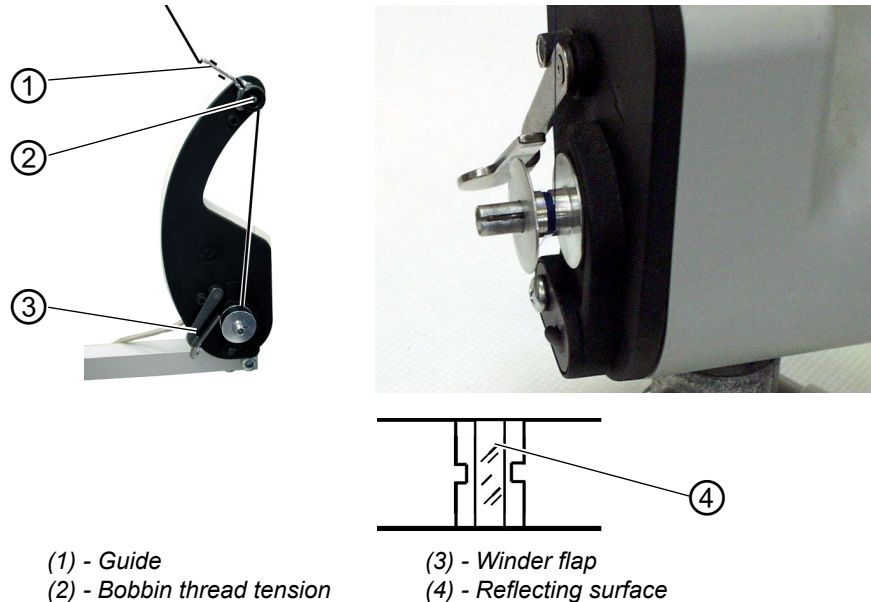

1. Remove remaining thread from the bobbin hubs before winding.
 2. Put the thread reel on the thread reel holder.
 3. Guide the thread through the drill-hole of the unwinding arm.
 4. Guide the thread through guide (3).
 5. Guide the thread through the bobbin thread tension (2).
 6. Prewind the thread to the right in the central reserve groove of the bobbin hub.
The filled reserve groove guarantees a safe winding on, also with mono-filament threads. With the thread reserves in the reserve grooves the sewing of pocket opening can be finished safely, even after the residual thread monitor has issued the message "empty bobbin".
The reflecting surface (4) of the bobbin hub is to be kept clean.
 7. Press the winder flap (3) against the bobbin hub.
- 🔊 The winder starts.
After reaching the set bobbin filling level the winder shuts off automatically.

For the setting of the bobbin filling level, 📖 *Service Instructions*.

5.7 Residual thread monitor

WARNING




Risk of injury

Turn the main switch off.
Clean the lenses of the light barriers only with the sewing unit switched off.

The residual thread monitor monitors the left and right hook thread bobbin with the infrared reflected light barriers (1) and (2).


Fig. 17: Residual thread monitor:

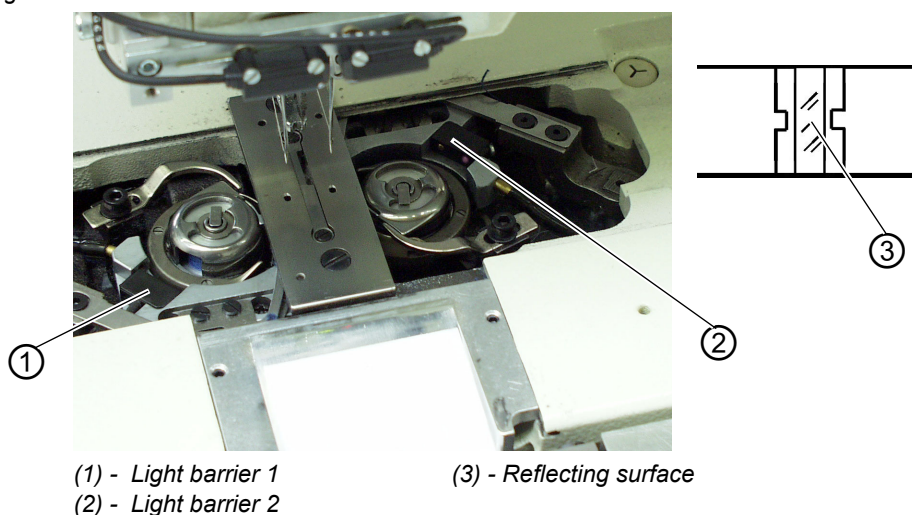

When the bobbin is empty, the light beam transmitted by the light barrier (1) or (2) is reflected by the exposed reflecting surface (3) of the bobbin hub.

The screen of the control unit will display the following message.

Fig. 18: Message display

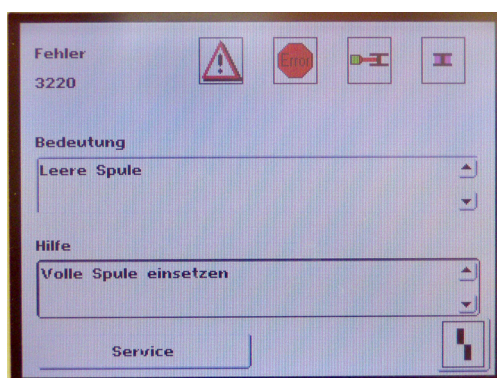

The sewing of the pocket opening is safely finished with the thread remaining in the reserve groove of the bobbin hub.
The transport carriage stops in its rear end position.

1. Turn the main switch off.

Clean the lenses of the light barrier with a **soft** cloth after every bobbin change.

2. Turn the main switch on.
3. Start a new sewing cycle.

5.8 Slanted pocket opening (optional)

The 100-69 is optionally equipped with an automatic corner knife station guaranteeing a precise incision of the corners of slanted pockets.
For this purpose the machine head is equipped with disengageable needle bars.

Corner knife station

The setting of the corner knives with regard to the pocket length is programmable and is effected via step motor.

The slanted pocket corners result from the offset of the two seam rows programmable in steps of 1 mm.

The programmable pocket corner incision - adjustable via two step motors - can be freely selected for the seam beginning and seam end and amounts to a maximum of +/- 13 mm in relation to the right seam.

The lateral distance between the corner knives and the seam can be adjusted manually.

The complete unit can be swung out for setting and service operations.

5.8.1 Swinging the corner knife station out / in

WARNING




Risk of injury

Turn the main switch off.
Swing out the corner knife station only with the sewing unit switched off.

The corner knife station (1) can be swung out completely.

Fig. 19: Swinging the corner knife station

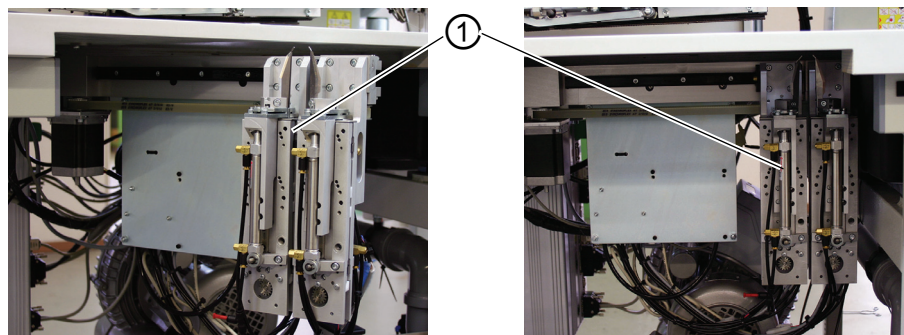

(1) - Corner knife station

Swivelling the corner knife station out

Swing out the corner knife station (1) to the left. The knives are accessible for adjusting and servicing.

Swivelling the corner knife station in

Swing the corner knife station (1) back under the sewing unit and make sure it locks.

ATTENTION


Material damage!

The corner knife station must audibly lock when being pushed in.

Note:

If the corner knife station (1) is swung out with the sewing unit switched on, the following message appears:

Fig. 20: Message display

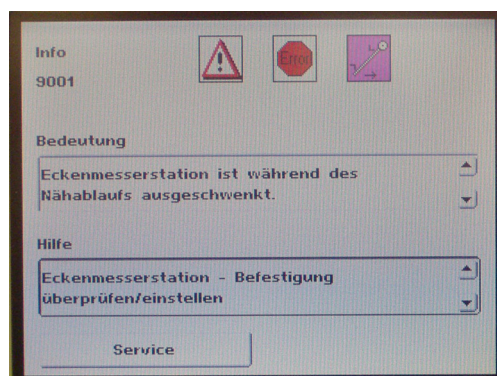

5.8.2 Setting the corner knife

WARNING



Caution: Danger of injury!


Turn the main switch off.

Set the corner knife station only with the sewing unit switched off.

Swinging out the corner knife station



Fig. 21: Setting the corner knife

rectangular corners

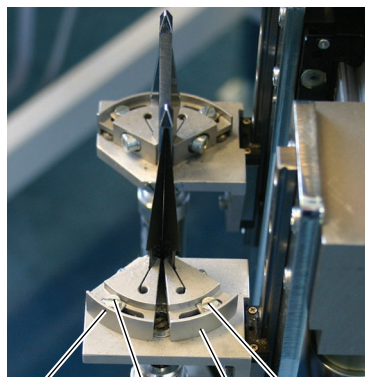

(1) - Knife carrier
(2) - Screw

 slanted corners

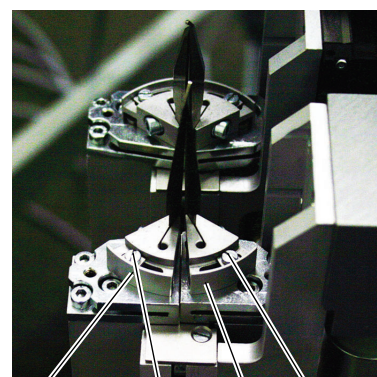

(3) - Knife carrier
(4) - Screw

Setting the angle of the corner knife station

The angle of the corner knife is set by twisting the knife carriers (1) and (3).


1. Loosen the screws (2) and (4).
2. Twist the knife carriers (1) and (3) symmetrically.
3. Tighten screws (2) and (4).
4. Set the angle on the other knife set accordingly.

Height of the corner knives

The height of the corner knives cannot be adjusted. The knives always completely cut through.

Swinging the corner knife station in.

Fig. 22: Cut sketch

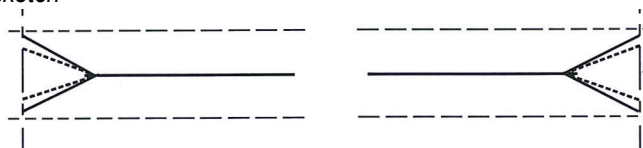

Rectangular pocket corners:

The right and the left corner knife incision are parallel

Slanted pocket corners:


The left corner knife incision is displaced of +/- 13 mm in relation to the incision on the right side

5.9 Sewing procedure

In order to achieve a good sewing result, the machine must be operated correctly. In the following the different operation steps will be explained.

5.9.1 Switching on

Fig. 23: Switching on the sewing unit

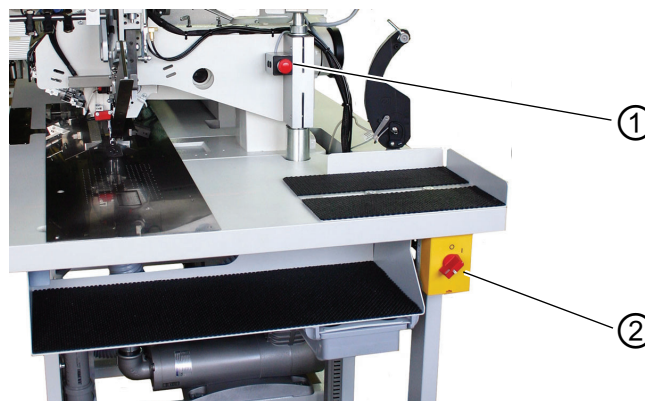


(1) - EMERGENCY-stop

(2) - Main switch

1. Turn the main switch (2) on (turn in clockwise direction).
The control unit loads the machine program.
The start screen appears in the display of the control panel and indicates the following message:

Fig. 24: Message display

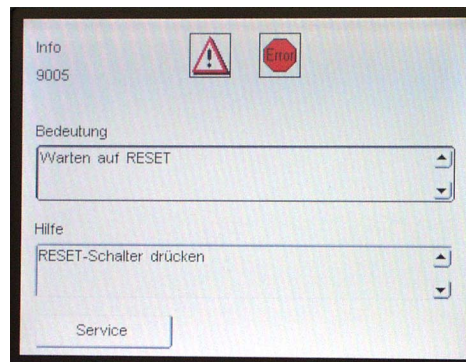

2. Press the EMERGENCY-stop (1).
If the transport clamps are not at the reference position, a reference run is made.

5.9.2 Reference position

WARNING




Danger of being crushed!

Do not reach between the folder and the folding table!

The reference position is necessary to reach a defined initial position. When the sewing unit is switched on, the control checks whether the transport carriage is in its rear end position. If this is not the case, the display shows the following message:

Fig. 25: Message display

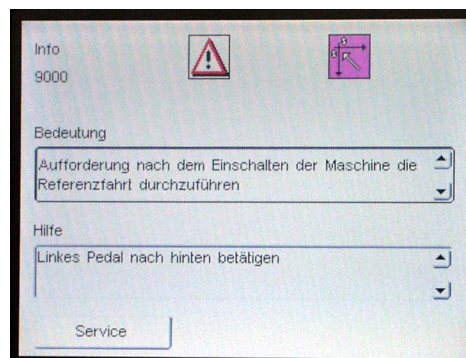

1. Press the EMERGENCY-stop.
A reference run is started.
The transport carriage stops in its rear end position.
2. The display changes to the main screen of the sewing unit.

5.9.3 Starting the sewing cycle


1. Actuate the left foot switch.
By actuating the central foot switch repeatedly the different steps of the feeding process are started one after the other. The individual steps depend on the working method and on the equipment of the sewing unit.
For positioning correction:
Actuate the right foot switch or press the reset key.
The last step of the positioning process is undone.
The workpiece can be fed anew.
2. Step the central foot switch to the front.
The sewing procedure is started.

5.9.4 EMERGENCY stop

For an immediate switch-off of the sewing unit in case of operating errors, needle breakage, material accumulation etc. the safety system of the 100-69 will react as follows:

1. Press the EMERGENCY-stop (1).
The sewing process is stopped immediately.


Fig. 26: EMERGENCY stop

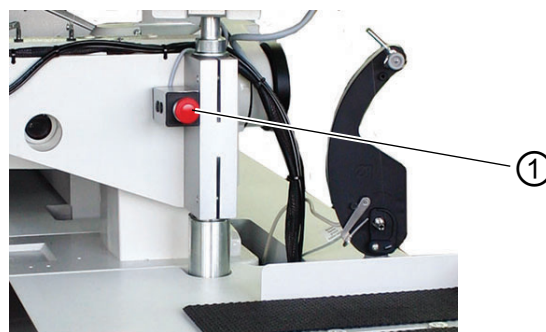

(1) - EMERGENCY-stop

5.9.5 Switching off

Fig. 27: Switching off the sewing unit

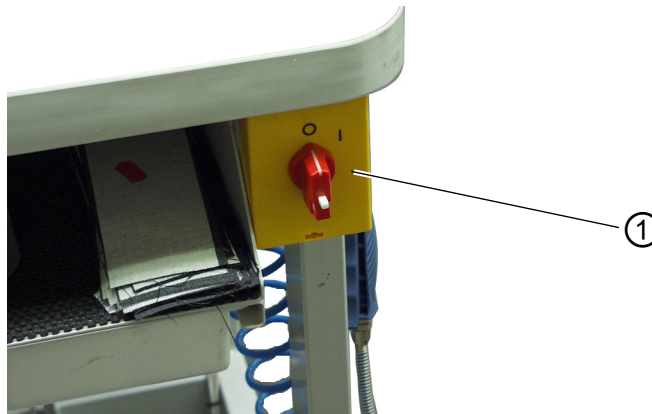


(1) - Main switch

Switch off the main switch (1) (turn counter-clockwise).

5.10 Quick clamp adjustment/folder monitoring

The lateral position of the transport clamps is influenced by the solenoid switches S12 and S11.


Fig. 28: Folder coding

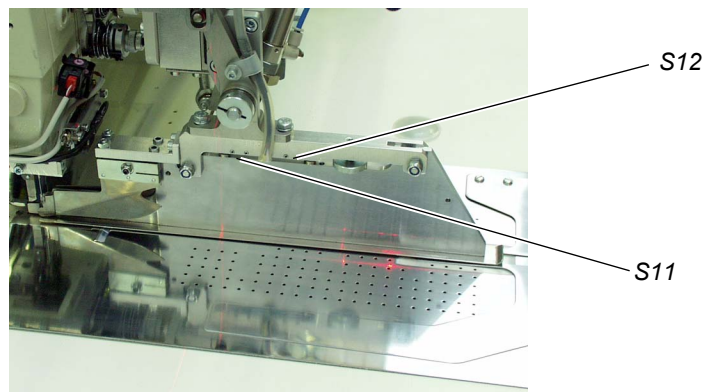

According to the equipment the solenoids are fitted on the folders in different positions.

Depending on the selected folder the clamps will be adjusted automatically between two preset positions.

Fig. 29: Different folders

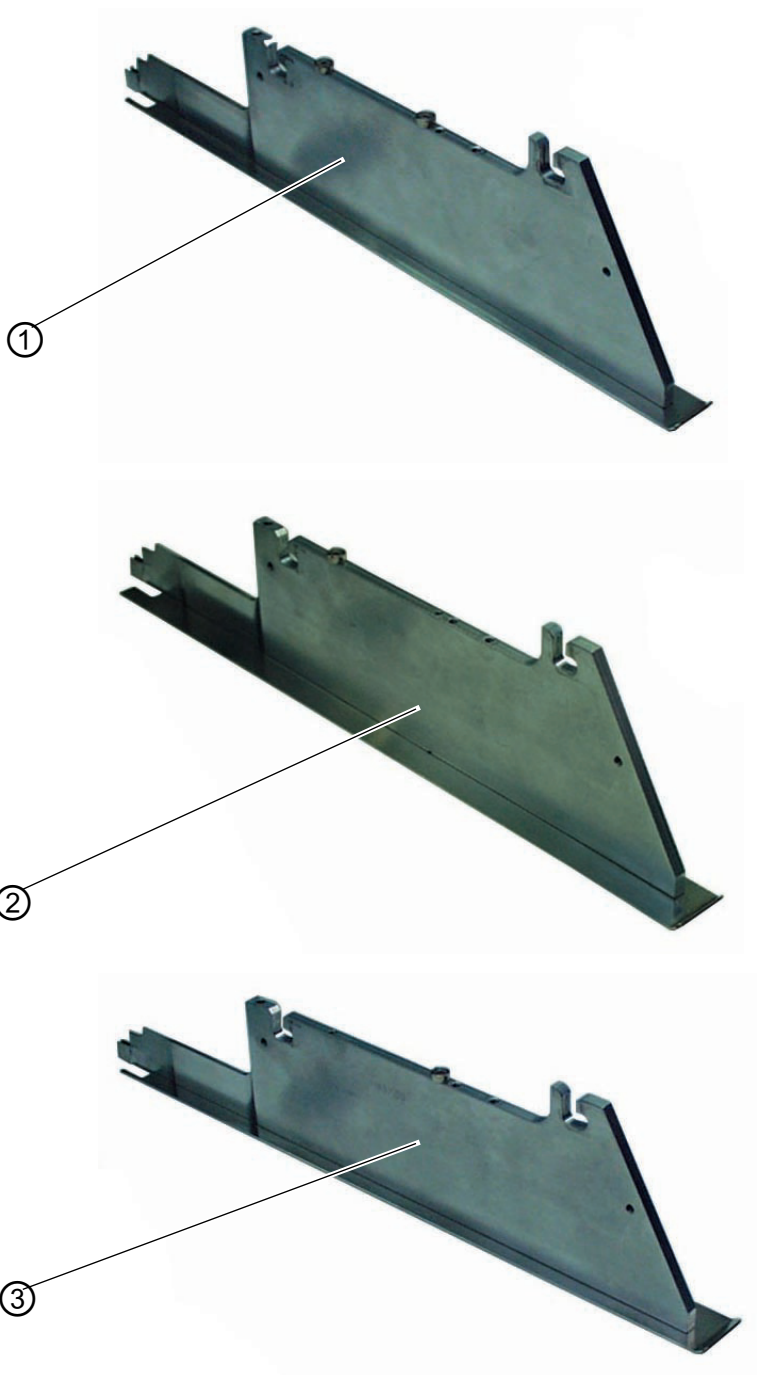

(1) - for double pipings
(2) - for simple piping left

(3) - for simple piping right

5.11 Functions/operation of the optional equipment

This chapter explains the functions and the operation of the most important optional equipment.

5.11.1 Tape feed unit

The step motor- and length-controlled tape feed with automatic trimming transports the reinforcement strip under the pocket opening and cuts it off at the seam end (e.g. when sewing inside and outside pockets of men's jackets).

A sensor supervising the tape feed is integrated in the tape feeding unit.

The complete process is carried out during the cycle time. No further positioning and auxiliary times are required.

If the tape is not correctly fed during the sewing process, f. e. due to jamming or wrong threading, the control unit issues a message.


Activating the tape feed and switching it on

1. Activate the tape feed at the control panel in the menu item "Seam functions".
2. Press the icon.




Inserting the reinforcement strip

Fig. 30: Tape feed

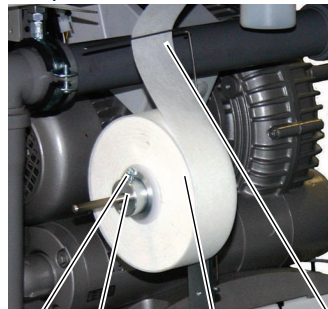

① ② ③ ④


- (1) - Screw
 (2) - Setting ring
 (3) - Adapter (inside)
 (4) - Wire bow

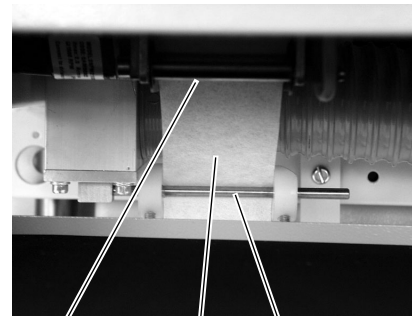

⑤ ⑥ ⑦

- (5) - Guide
 (6) - Reinforcement strip
 (7) - Guide


Fig. 31: Tape feed in detail (depicted without tape roll)

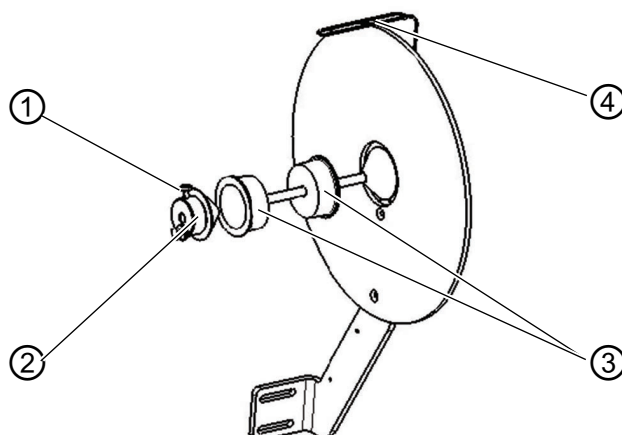

(1) - Screw
(2) - Setting ring


(3) - Adapter (inside)
(4) - Wire bow

Fig. 32: Setting

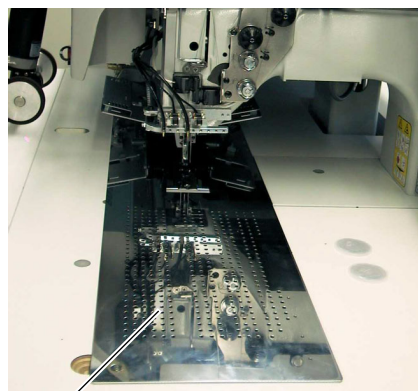

(8)

(8) - Fabric sliding sheet
(9) - Cover

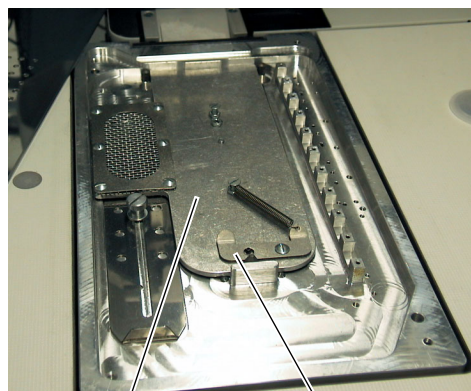

(9)

(10)

(10) - Damper slide

1. Loosen screw (1) and pull off the setting ring (2) from the shaft.
2. Remove the empty tape roll including the adapter (3).
3. Insert the adapter (3) into a new tape roll on both sides (right and left).
4. The full tape roll has turn while unwinding.
5. Push the setting ring (2) back onto the shaft and tighten screw (1) again.
6. Guide the reinforcement strip consecutively through guide (7) and (5).
7. Swivel the fabric sliding sheet (8) aside.
8. Press the damper slide (10) to the rear and lift off the cover (9).
9. The reinforcement strip is cut off and moved to the initial position.
10. Swivel the fabric sliding sheet (8) back again.



11.-Press the icon.

The reinforcement strip is cut and pushed to the initial position.

Function and operation

Before the next sewing cycle the transport roller of the feeding device advances the reinforcement strip a little.

When sewing the pocket opening the reinforcement strip is seized and sewn in according to the set sewing length.

The tape projection at the seam beginning and seam end can be set in the menu item "Seam parameters" with the parameters 21 and 22 (see Programming Instructions).

5.11.2 Device for endless zippers


WARNING



Risk of injury

Do not reach into the range of moving parts during the processes of swiveling and cutting!

Fig. 33: Device for endless zippers

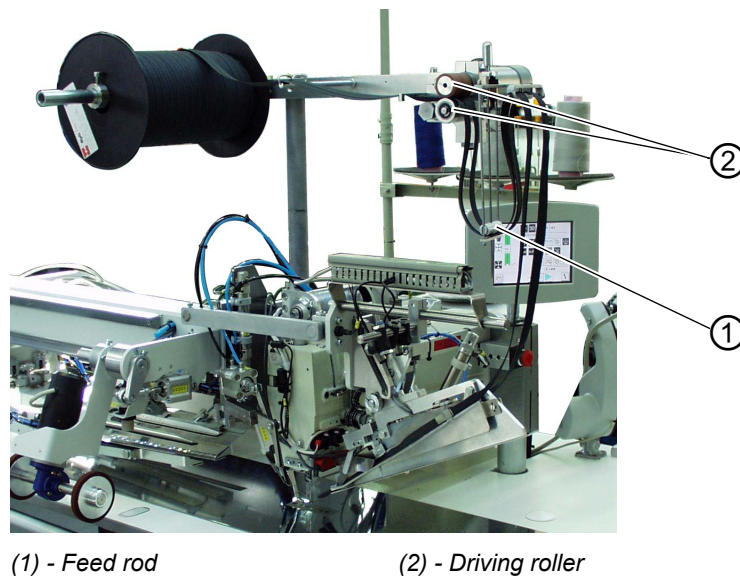

(1) - Feed rod

(2) - Driving roller

Function

When the zipper halves are pulled along by the transport clamps during the sewing process, the feed rod (1) is pulled upwards by the zipper getting shorter.

The feed rod switches on the zipper feed and the driving rollers (2) continue to feed the zipper until the switch rod drops down and switches the feed off again.

This procedure ensures that there is always enough zipper material available for a warp-free sewing.

Activating and switching the zipper device on



1. Press the icon.
The zipper device is activated.

5.11.3 Downholder and Pocket bag clamp

With these equipment hind trousers and pocket bags are safely held when smoothing out the fullness caused by the dart.

The devices consist of the following components:

- Downholder (2)
- Pocket bag clamp (1)

Fig. 34: Holding devices



① ②

(1) - Pocket bag clamp

(2) - Downholder

WARNING



Caution: Danger of injury!

Do not reach under the downholder (2) during the positioning process.

Function


1. Push the pocket bag under the pocket bag clamp (1) and align it.
2. Align the hind trouser.
3. Step forward on the left pedal.
- ↳ The downholder (2) lowers and locks the hind trouser in its position.
4. Smooth out the clamped hind trousers laterally and to the front.

5.11.4 Stacker

The grip stacker or the throw-over stacker can both be deployed at the 100-69.

Both stackers are inserted in the seat (1) shown below and locked (2) in place.

Fig. 35: Stacker seat

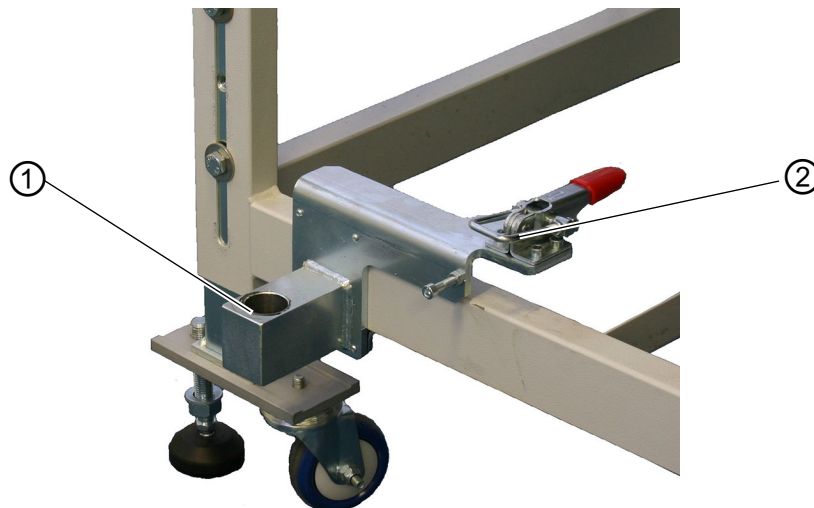

(1) - Seat for stackers

(2) - Lock

Grip stacker With the grip stacker the finished workpieces from the sewing unit are deposited on the rack.

Activate the stacker:

- Activate the grip stacker via the control panel in the menu "Machine parameters", *Programming Instructions*. The parameter signals to the control unit that the sewing unit is equipped with a grip stacker.


Switching the stacker on

- Switch on the grip stacker in the menu "Pocket parameters",
 *Programming Instructions*.

Basic position

1. Stacker shackle (1) at the front, stacker grip (2) open.
 The opened stacker grip (2) should be positioned 20-25 mm in front of the table top, so that the workpieces can be passed.
2. With the stop signal the stacker grip (2) moves to the front and seizes the workpiece.
3. The stacker shackle (1) swings to the back and pulls the workpiece off the table.
4. Set the movement of the stacker shackle (1) with the throttles so that it moves smoothly without jerk.
5. The stacker grip (2) opens.
6. The workpiece is deposited on top of the stacker board (3).
 The stacker board height has to be set in a way that allows for a safe depositing of the workpiece.
7. The stacker shackle (1) swings to the front.

Fig. 36: Grip stacker

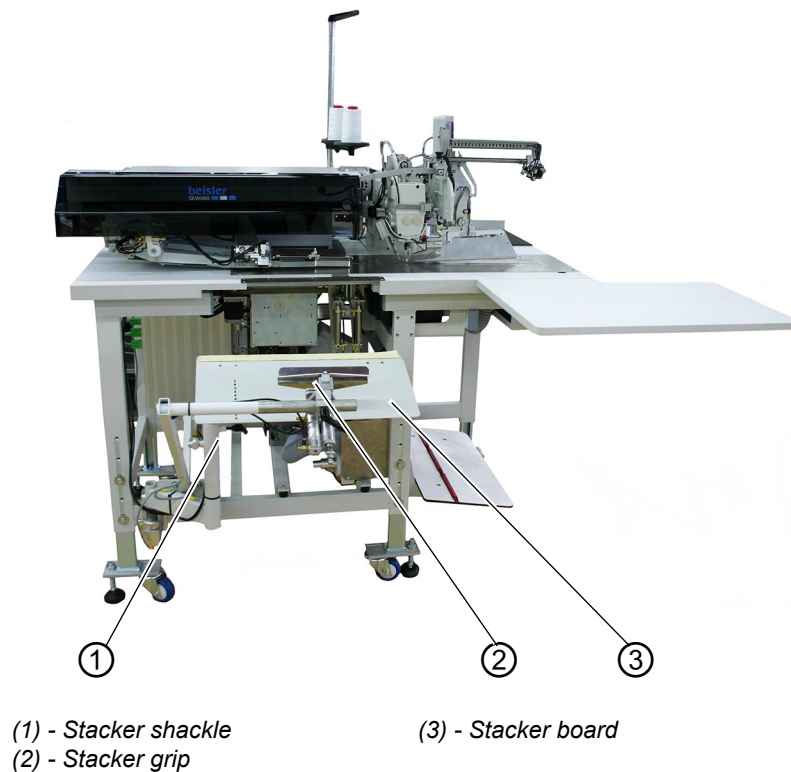

Throw-over stacker The finished workpieces are stacked on the throw-over stacker.
The stacked and clamped workpieces can be removed when actuating the foot switch.
The throw-over stacker is driven by a trigger and controlled automatically.


Activate the stacker:

- Activate the throw-over stacker via the control panel in the menu "machine parameters",  *Programming Instructions*. The parameter signals to the control unit that the sewing unit is equipped with a throw-over stacker.

Switching the stacker on

- Switch on the throw-over stacker in the menu "Pocket parameters",  *Programming Instructions*.


Fig. 37: Throw-over stacker locked

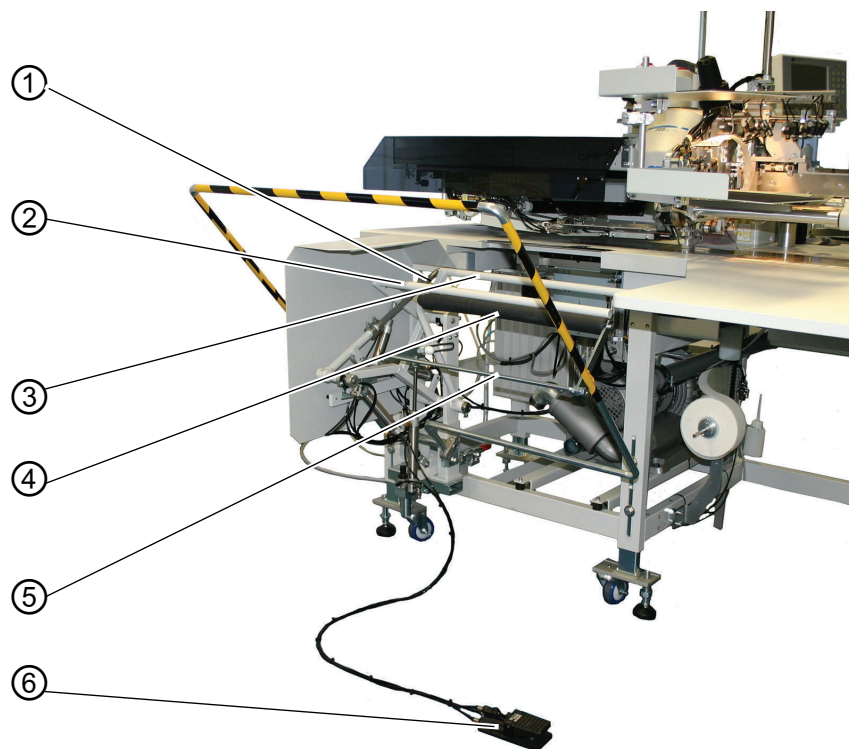

(1) - Smoother
(2) - Clamping pipe
(3) - Clamping pipe

(4) - Stacked goods stand
(5) - Holder
(6) - Foot pedal

Fig. 38: Throw-over stacker swung-out

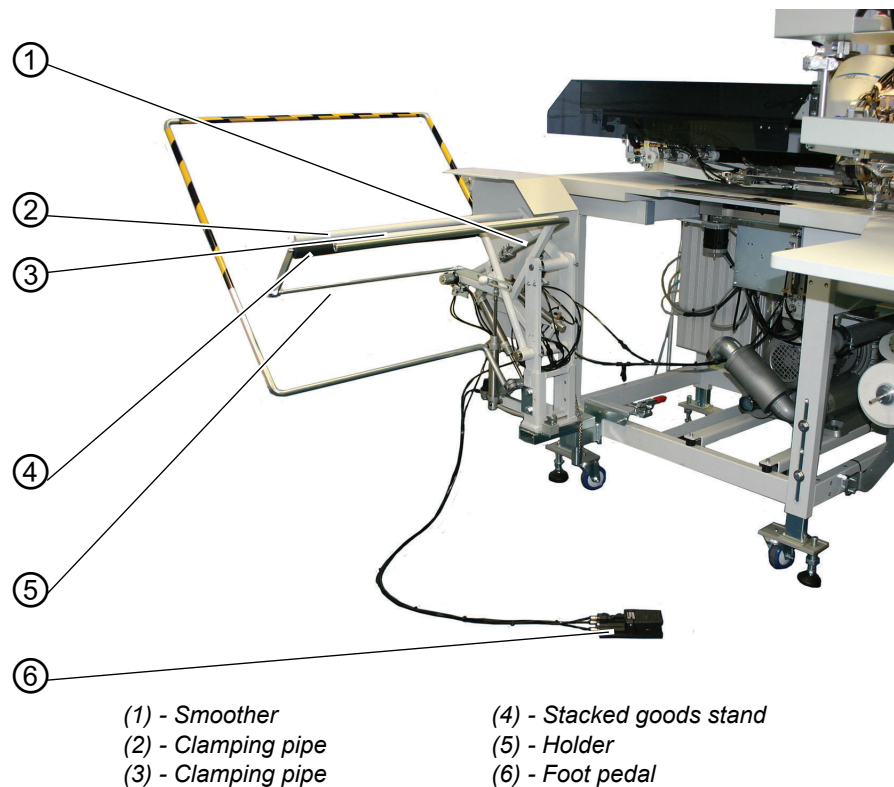

Function sequence

- During the sewing cycle the material runs into the opening between the stacked goods stand (4) and the clamping pipe (3).
- After the incision of the corners and the lifting of the feed clamps, the stacking process is triggered by a control pulse. The clamping pipe (3) and the smoother (1) swivel against the stacked goods stand (4).
The work piece is clamped.
- A pneumatic cylinder retains the clamping pipe (3) at the stacked goods stand (4).
- The clamping pipe (2) opens.
For this it swivels away from the stacked goods stand (4).
- The smoother (1) lifts and smoothes out the workpiece above stacked goods stand (4) and holder (5) and then moves to its initial position.
- The clamping pipe (2) closes.
For this it swivels back against the stacked goods stand (4) and clamps the stacked workpiece.
- The clamping pipe (3) and the smoother (1) swivel back together to their basic position. The clamping pipe (2) is thereby retained at the stacked goods stand (4).

Removing the stacked workpieces

1. Actuate the foot switch (6) and hold it down.
 The stacked goods stand (4) is lowered.
2. Remove the stacked workpieces.

5.11.5 Roll-off device

The stacker extension is used in conjunction with the throw-over stacker.

The transport rollers (1) convey the workpiece into the stacker opening. This is necessary for all workpieces positioned in transverse direction or for those which are too short for being seized by the throw-over stacker (e.g. when sewing linings of inside pockets).

The workpiece must have a minimum length of 200 mm from the middle of the pocket opening to the left edge so that it can be safely seized by the transport rollers (1).

The transport rollers (1) are driven via an electronically adjustable drive. The roller speed and the on-time can be separately set to several grades at the control panel of the control unit.

Activating and switching on the stacker extension

ATTENTION

Material damage!

During the rolling-off the solenoid valves have a dual function.

Stacker switched on: Roll-off device serves as stacker extension

Stacker switched off: Roll-off device serves as ejector




- Activate the roll-off device at the control panel in the menu item "Seam parameters",  *Programming Instructions*. The parameter indicates to the control unit that the sewing unit is equipped with a roll-off device.



- Switch on the throw-over stacker and the stacker extension in the menu "Seam parameters",  *Programming Instructions*.

Function

Fig. 39: Transport rollers of the stacker

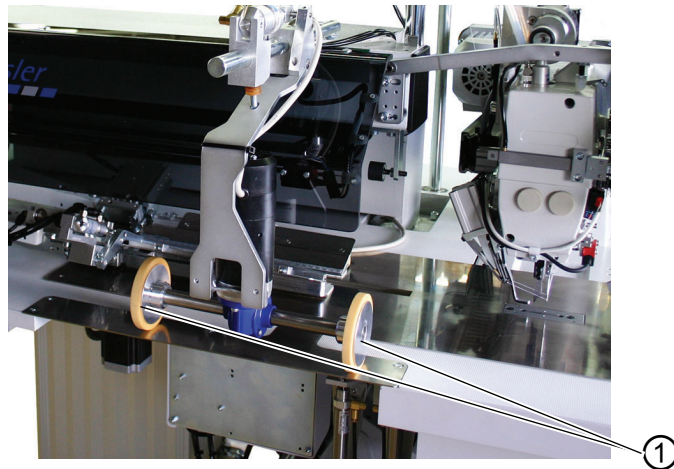


(1) - Transport rollers

- With the lifting of the feeding clamps after the sewing and cutting sequence, the transport rollers (1) lower.
- The transport rollers (1) convey the small workpiece into the stacker opening.
- The stacking process follows.

5.11.6 Blow-out device

The blow-out device (1) is used in conjunction with the bundle clamp. The blower pipe conveys the workpiece out of the sewing area.

Fig. 40: Blow-out device

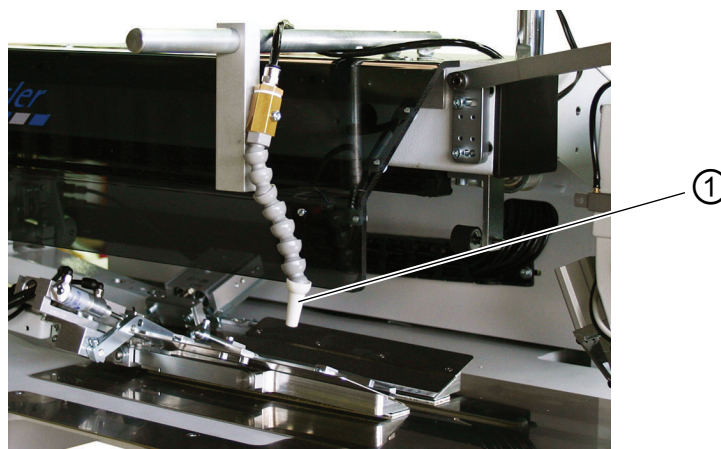

(1) - Blow-out device

Switching the blow-out device on

- Switch on the blow-out device in the menu item “Seam parameters”,
 *Programming Instructions*.

Note:

The blower pipe continues blowing until the light barrier at the stapler control is free.

5.11.7 Bundle clamp


The bundle clamp including the positioning table is designed for the production of trousers. The bundles are deposited on the table and stuck in the bundle clamp. After sewing they are removed with the smoother or the blow-out device and drop down while being held by the bundle clamp.

In order to optimize the bundle array, a smoother device (produced on customer demand) can be deployed.

WARNING**Caution: Danger of injury!**

Risk of suffering bruising between the arms of the bundle clamps.

Fig. 41: Bundle clamp

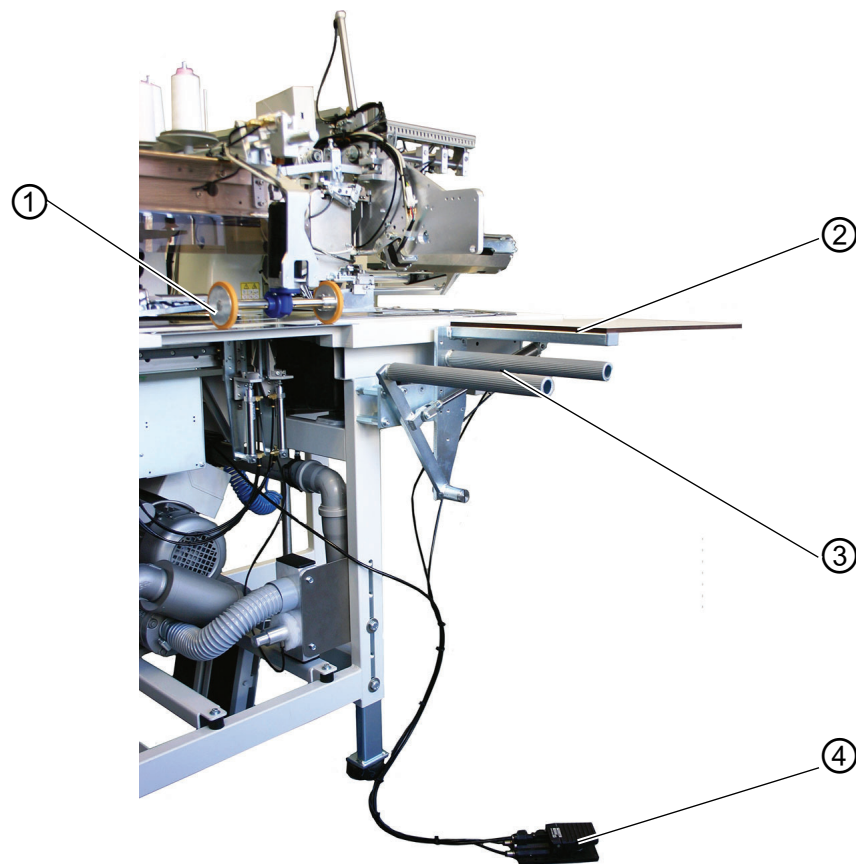

(1) - Transport rollers
(2) - Table extension

(3) - Bundle clamp
(4) - Foot switch

Function and operation

1. Step the foot switch (4) down and hold it down.
 - ↳ The bundle clamp (3) opens.
2. Insert the hind trousers parts into the bundle clamp (3).
3. Release the foot switch.
 - ↳ The bundle clamp (3) closes.
4. Deposit the clamped hind trousers parts on the table extension (2).
 - ↳ With the lifting of the feeding clamps after the sewing and cutting sequence, the transport rollers (1) lower.
 - ↳ The transport rollers (1) convey the hind trousers part out of the sewing unit.

The hind trousers part will then dangle down on the bundle clamp (3).

5.12 Maintenance

DANGER



Risk of injury

Turn the main switch off.

The maintenance of the sewing machine must only be done when the machine is switched off.

ATTENTION

Material damage!

Do not use any solvents for washing out the filter tray and the filter element!

They destroy the filter tray.

5.12.1 Cleaning


A clean sewing unit protects from malfunctions!

Clean and check daily:

Fig. 42: Cleaning



- (1) - Light barrier
- (2) - Hook
- (3) - Hook

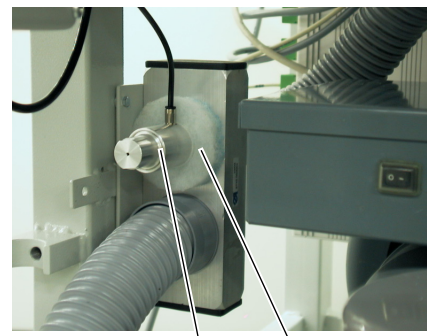


- (4) - Light barrier
- (5) - Vacuum valve
- (6) - Filter ring

1. Clean the area around the hooks (2) and (3) with the compressed air pistol.
2. Clean the lenses of the light barriers (1) and (4) of the remaining thread monitor with a soft cloth each time the bobbin is changed.
3. Cleaning of the filter ring (6) at the vacuum valve (5):
Blow out with a compressed air pistol.

The filter ring can be ordered as spare part.

Clean and check daily:

Fig. 43: Cleaning

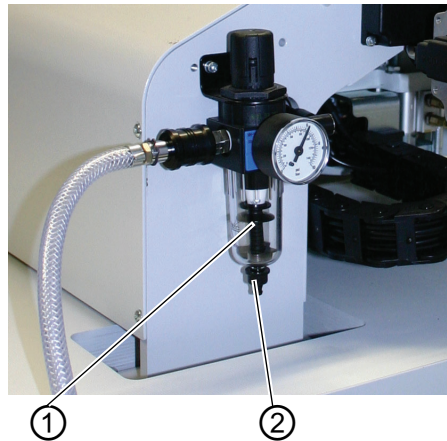

(1) - Water separator

(2) - Drain screw

1. Check the water level in the pressure regulator.
The water level must not reach the filter element.
2. After screwing in the drain screw (2) blow the water with pressure out of the water separator (1).
The filter element separates dirt and condensed water. After a certain time of operation wash the dirty filter tray and the filter element with benzine and blow them clean with the compressed air pistol.

ATTENTION

Material damage!

Do not use any solvents for washing out the filter tray and the filter element!

They destroy the filter tray.

5.12.2 Oil level control


For filling up the oil reservoirs use nothing but DA 10 lubricating oil or an equivalent oil with the following specification:

- Viscosity at 40° C: 10 mm²/s
- Ignition point: 150° C

DA 10 is available from the DÜRKOPP ADLER AG sales offices under the following parts numbers:

Amount	Parts number
250- ml container	9047 000011
1-liter container	9047 000012
2-liter container	9047 000013
5-liter container	9047 000014

Fig. 44: Checking the oil level

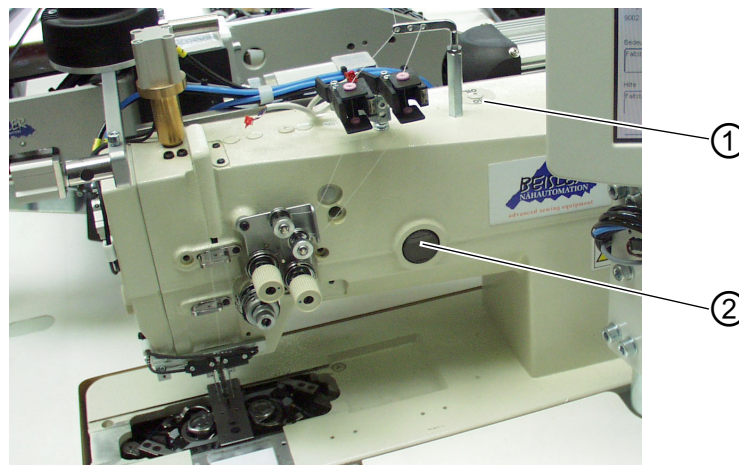

(1) - Drill-hole

(2) - Oil reservoir

Checking the oil level for the lubrication of the machine head

The oil level in the oil reservoir (2) must not drop below the marking "Min". If necessary, fill oil through the drill-hole (1) up to the upper marking "Max".

6 Set-up

In the following, the steps are listed in chronological order. The structure of the chapter is oriented towards this sequence.

The manufacturer will not be held liable for damage resulting from improper use.

WARNING



Danger of injury due to insufficient technical knowledge

During the installation of the machine, insufficient technical knowledge can lead to serious injuries. The machine should be installed **ONLY** by trained personnel.

DANGER



Risk of injury due to electric power!

Unprotected contact with electric power can cause dangerous injuries to life and limb.

All work on the electrical equipment may **ONLY** be carried out by qualified electricians or other appropriately trained persons.

ALWAYS disconnect the power plug before carrying out work at the electrical equipment.

6.1 Delivery scope

What items are supplied depends on your order. Prior to set-up, please check that all parts required are present.

- Standard equipment
- Optional equipment
- Small parts in the accessories

6.2 Installing the sewing unit

6.2.1 Transportation

CAUTION



Risk of injury due to incorrect transportation!

Do NOT lift the sewing unit at the table tops.

ALWAYS use an elevating platform truck or a forklift

CAUTION



Risk of injury due to unstable footing!


Before commissioning the sewing unit screw out the stand feet until a secure footing is achieved.

Lifting the sewing unit

- Only with an elevating platform truck or a forklift.


**Stand
without castors**

Fig. 45: Sewing unit with stand without castors

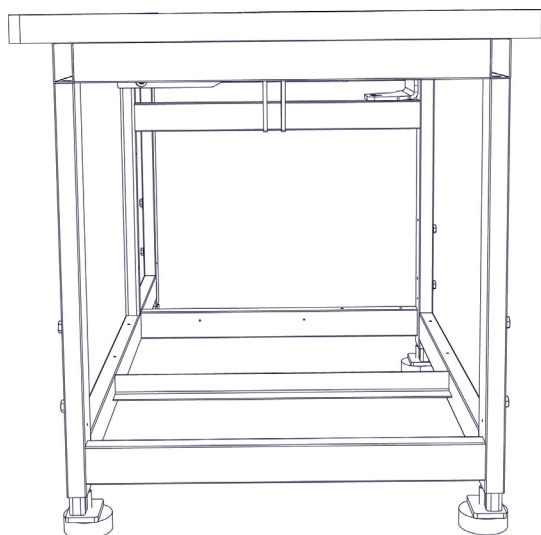

Stand with castors For in-house transport the stand can be equipped with four castors.

Fig. 46: Stand with castors

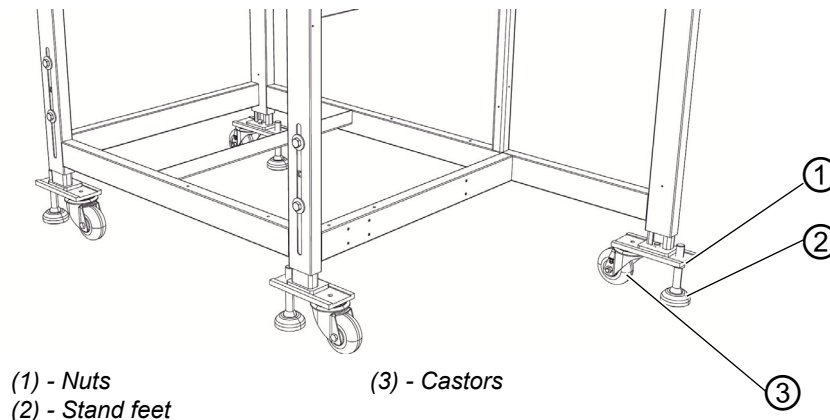

(1) - Nuts

(2) - Stand feet

(3) - Castors

Rolling the sewing unit (optional)

1. For transport purposes unfasten the nuts (1) of the stand feet (2) and screw in the stand feet (2).
2. After transport secure the sewing unit by turning the stand feet (2) out until the castors lift off the ground (3).
3. Tighten the nuts (1).

6.2.2 Removing the transport securing devices

Before installing the sewing unit, you have to remove all the securing devices.

All movable parts have to be unlatched.

- Transport carriage
- Plate depending on sewing method
- Corner knife station
- Feeding device
- Extensions like f. e. stacker

If the sewing unit has to be transported to another place, you have to attach the securing devices again.

Before removing/fixing the security devices, please consult the supplementary sheet delivered with the machine.

6.2.3 Setting the working height

The working height is adjustable between 797 and 1138 mm (measured to the upper edge of the table plate).


The sewing unit is set to the lowest working height of 797 mm at delivery.

CAUTION



Be careful when loosening the attachment screws.
The sewing unit may keel over when the tubular feet of the frame are pulled out.

Fig. 47: Setting the working height

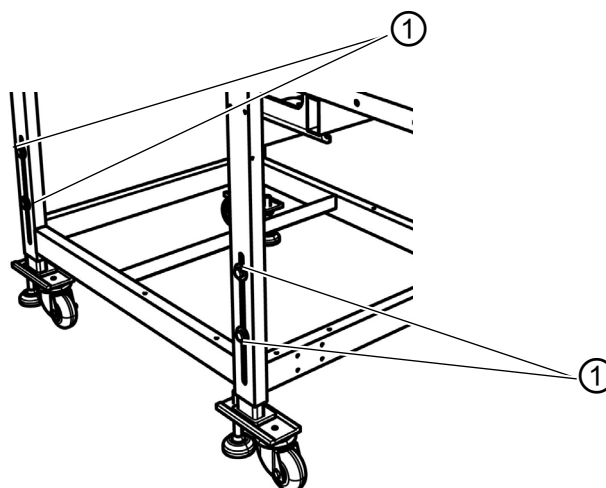

(1) - Screws


Set the height of the sewing unit by pulling equally the tubular feet of the frame.

1. Loosen screws (1) (4x).
2. Level out the table top at the desired working height.
To avoid a jamming, pull out resp. push in the tubular feet equally on both sides.
3. Tighten screws (1).

6.3 Attaching the machine parts removed for shipping

6.3.1 Attaching the thread reel holder

Fig. 48: Attaching the thread reel holder

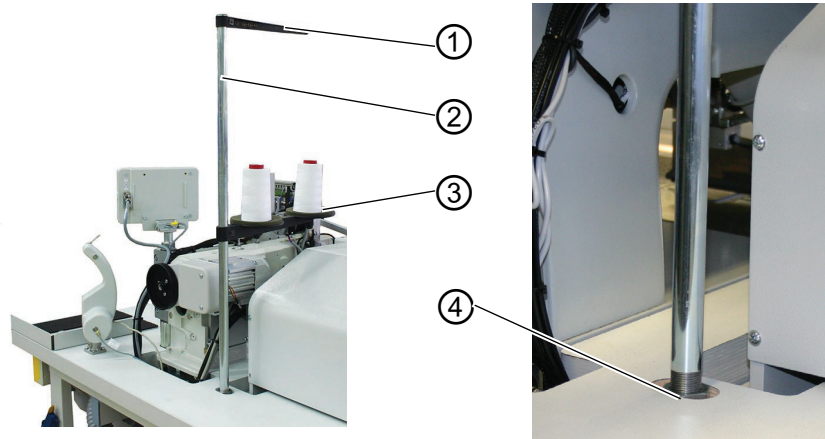


(1) - Unwinding arm
(2) - Thread reel holder

(3) - Reel plate
(4) - Drill-hole

1. Insert the thread reel holder (2) in the drill-hole (4) of the table top and fasten it with a nut underneath the table top.
2. Mount and align the reel plate (3) and the unwinding arm (1) as shown in the illustration.

6.3.2 Mounting the control panel

Fig. 49: Mounting the control panel

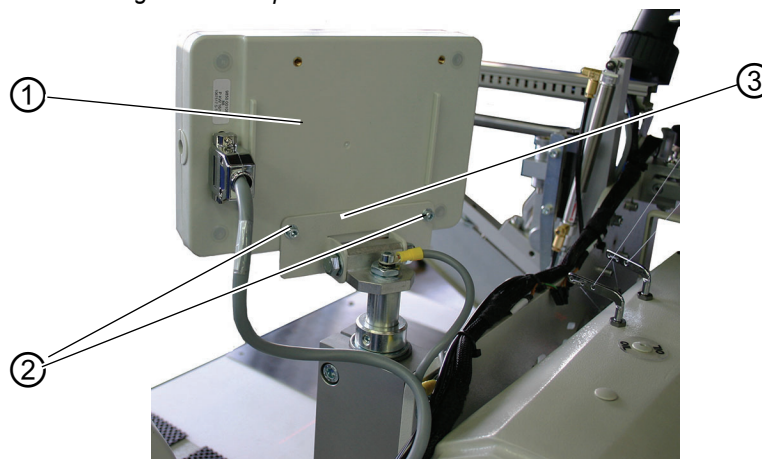


(1) - Control panel
(2) - Screw

(3) - Holder

1. Fix the control panel (1) with screws (2) on holder (3).

6.3.3 Fixing the winder

Fig. 50: Fixing the winder

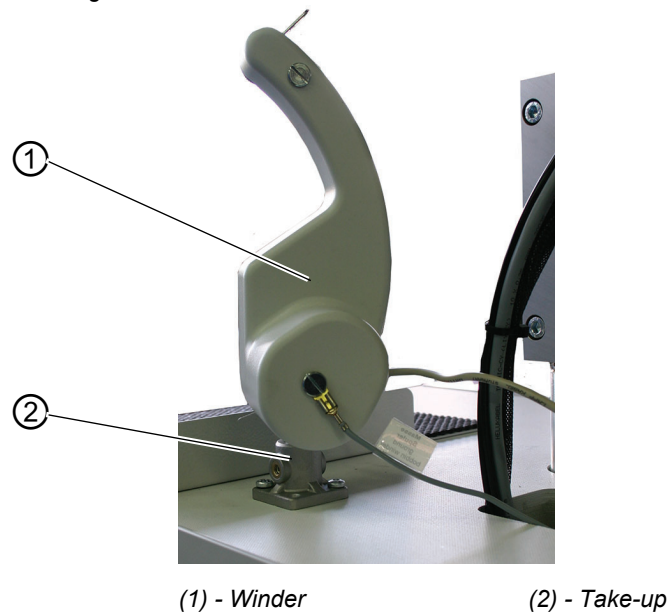


1. The winder (1) is inserted into the take-up (2).

6.3.4 Table extensions (optional equipment)

Rest table (large) The mounting of the small rest table is identical with the mounting for this rest table.


Fig. 51: Table extension to be used for stacking.

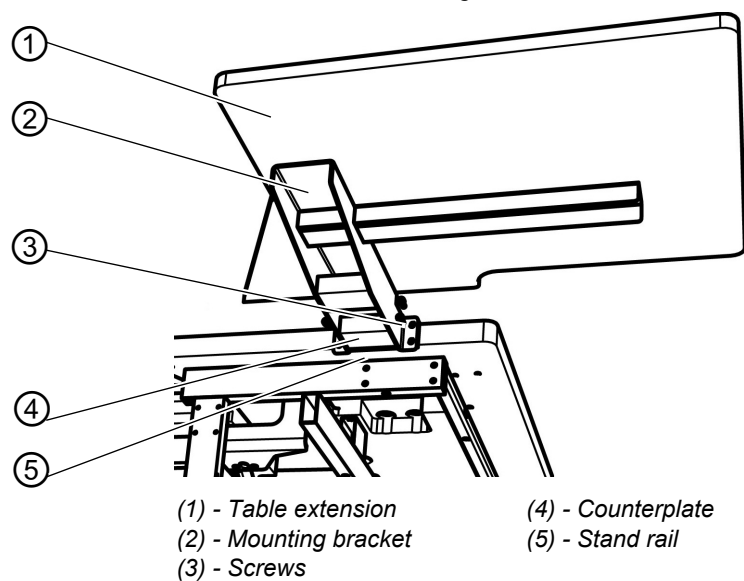

1. Insert the counterplate (4) into the stand rail (5).
2. Loosely fix the mounting bracket (2) with screws (3) (4x) with the counterplate (4).
3. Align the table extension's height according to the height of the table top and tighten screws (3) (4x).

Rest table (small) The mounting of the small rest table is identical with the mounting for the large rest table.

Fig. 52: Attachment table extension

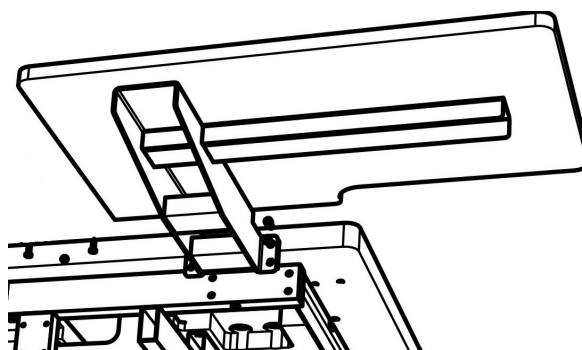

6.4 Electrical connection

DANGER



Risk of injury due to electric power!


Unprotected contact with electric power can cause dangerous injuries to life and limb.

All work on the electrical equipment may **ONLY** be carried out by qualified electricians or other appropriately trained persons.

ALWAYS disconnect the power plug before carrying out work at the electrical equipment.

6.4.1 Connecting the control panel DACIII

Fig. 53: Connection control panel

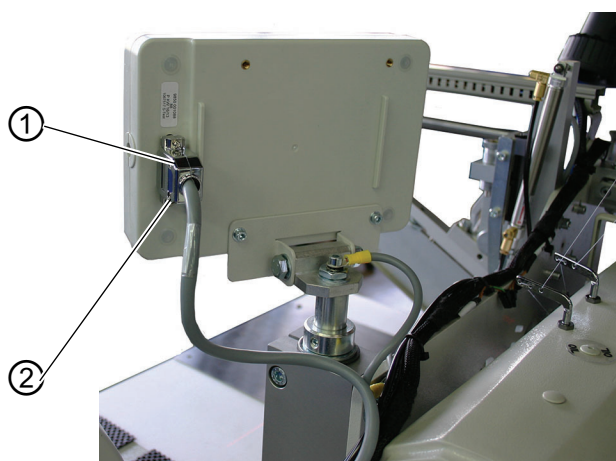


(1) - Plug

(2) - Screws

1. Carefully insert plug (1) into the rear panel of the control panel.
2. Tighten the screws (2) of plug (1).

6.4.2 Connecting a separate winder

Fig. 54: Connection separate winder

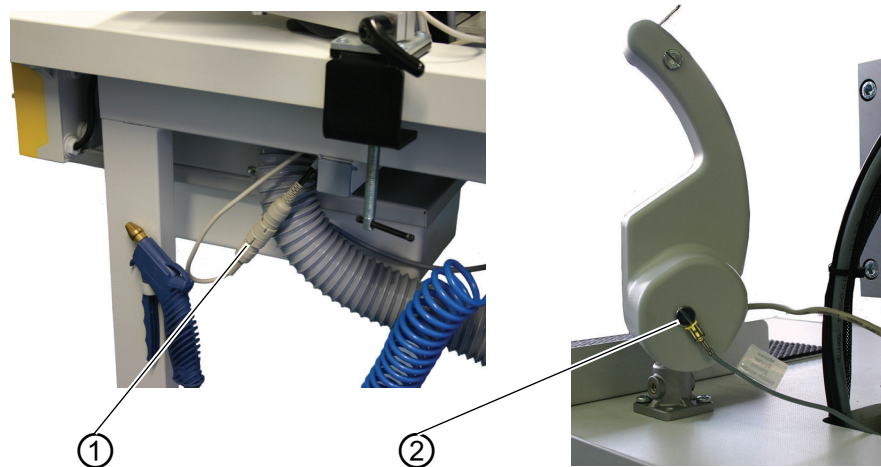


(1) - Plug X412

(2) - Equipotential bonding

1. Insert the plug of the bobbin winder into the socket (1) underneath the table top and secure with a cap nut.
2. Connect the potential compensation cable (2).

6.4.3 Checking the nominal voltage and connecting to the mains

Fig. 55: Nominal voltage and mains

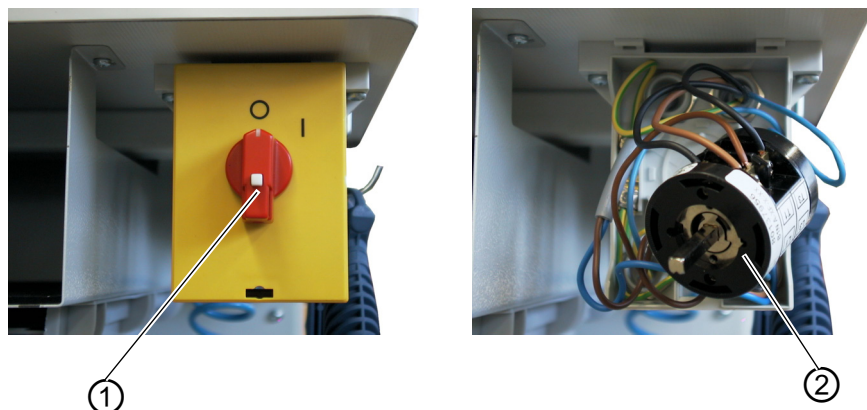

(1) - Main switch

(2) - Switch element

The adaptation to the local mains voltage has to be effectuated by correctly connecting the cables to the switch element (2) of the main switch (1).


1. Remove the mains plug.
2. Loosen the screw in the switch handle and remove the cover.

3. Check the configuration of the connections at the switch element and change the connections according to the existing mains voltage (see wiring diagram).
4. Attach the cover again and fasten the screw.
5. Connect the mains plug.

6.4.4 Checking the nominal voltage of the vacuum device

The adaptation to the local mains voltage has to be done at the terminal strip in control box (1). This adaptation may only be carried out by qualified electricians.

Fig. 56: Nominal voltage vacuum device

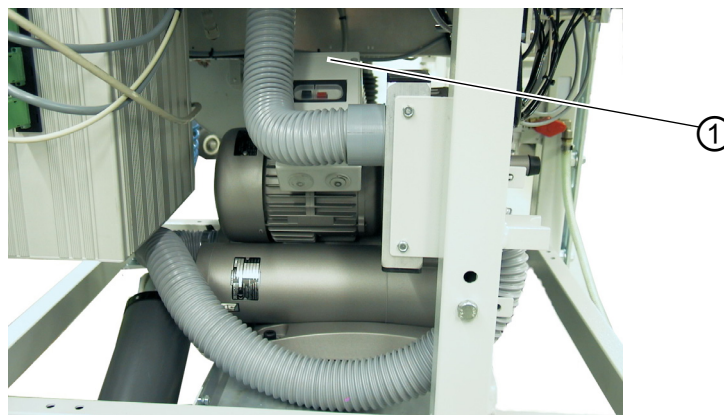

(1) - Cover of safety switch

1. Screw off the cover of the safety switch (1).
2. Check the arrangement of the connections to the safety switch and if necessary, change the connections. (see wiring diagram)
3. If necessary, change the connections according to the local mains voltage.
4. Screw on the safety switch cover (1) again.

6.4.5 Direction of rotation of the sewing motor and the vacuum blower

The sewing unit is equipped with the latest step motor technology. A check of the direction of rotation of the sewing motor is not required because it is automatically set by the control.

- The direction of rotation of the vacuum blower can be inverted by exchanging the phase (plug).

6.5 Pneumatic connection

For the operation of the pneumatic components the sewing unit has to be provided with anhydrous compressed air.

ATTENTION

Material damage!


For a trouble-free function of the pneumatic control processes the compressed air net has to be rated as follows:

Even at the moment of the highest air consumption, the minimum operating pressure must not drop below **6 bar**.

In case of a important air pressure decrease:

- Increase the compressor output.
- Increase the diameter of the compressed air hose.

Fig. 57: Pneumatic connection

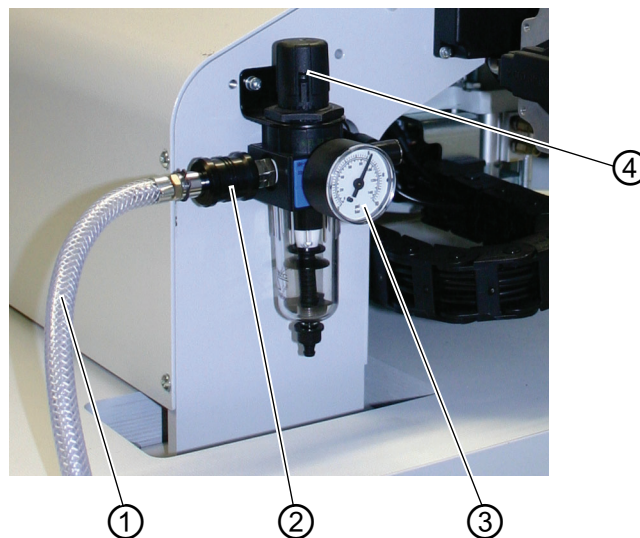

(1) - Connection hose
(2) - Slide valve

(3) - Pressure gauge
(4) - Turning handle

Connecting the compressed air maintenance unit

Connect the connection hose (1) to the slide valve (2) and the compressed air line by means of a hose coupling $\frac{1}{4}$ ".

Setting the operating pressure

The operating pressure amounts to 6 bar. It can be read off at the manometer (3).

1. To adjust the operating pressure pull up and turn handle (4).

- Turning in clockwise direction = the pressure is increased
- Turning counter-clockwise = the pressure is reduced

ATTENTION**Material damage!**

No oil-bearing compressed air must be fed from the compressed air line. Behind the filter cleaned compressed air is withdrawn as blowing air for cleaning machine parts and for blowing out workpieces. Oil particles contained in the blowing air lead to malfunctions and stains on the workpieces.

6.6 Connction to the in-house vacuum unit


Note: In case there is no in-house vacuum unit available, the vacuum device hat to be ordered in addition. The connection procedure is explained in the supplementary instructions.

ATTENTION

Material damage!

When mounting the vacuum device (side-channel blower) it is absolutely necessary to exchange the joint ring (3) (black) at the connection valve against a filter ring (white) (included in the accessories).

Fig. 58: Connection vacuum unit

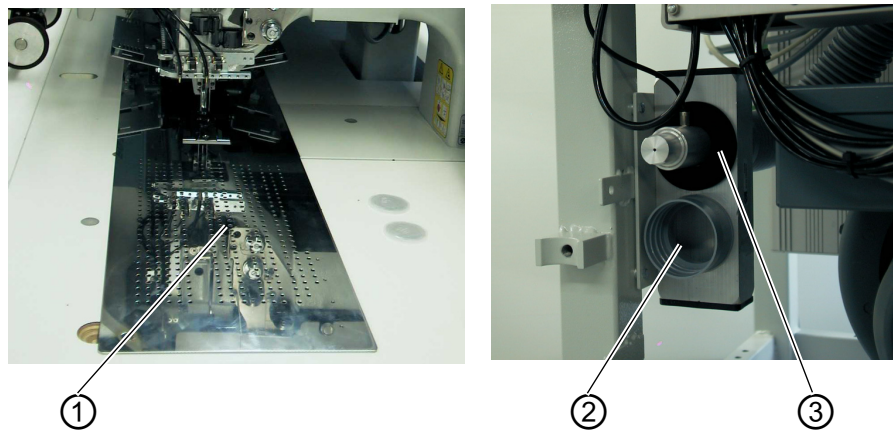

(1) - Working table

(2) - Connection vacuum unit

(3) - Seal ring

The suction unit facilitates the precise feeding and positioning of the work-piece on the work table (1).

1. Connect the hose of the in-house vacuum unit to the connection valve (2).

6.7 Oil lubrication

WARNING



Caution: Danger of injury!

Oil can cause skin rashes.

Avoid a longer skin contact with the oil.

After contact wash yourself thoroughly.

ATTENTION

Material damage!

The handling and disposal of mineral oils is subject to legal regulations. Deliver used oil to an authorized collecting station. Protect your environment. Pay attention not to spill any oil.


For filling up the oil reservoirs use nothing but DA 10 lubricating oil or an equivalent oil with the following specification:

- Viscosity at 40° C: 10 mm²/s
- Ignition point: 150° C

DA 10 is available from the DÜRKOPP ADLER AG sales offices under the following parts numbers:

Amount	Parts number
250-ml container	9047 000011
1-liter container	9047 000012
2-liter container	9047 000013
5-liter container	9047 000014

Fig. 59: Checking the oil level

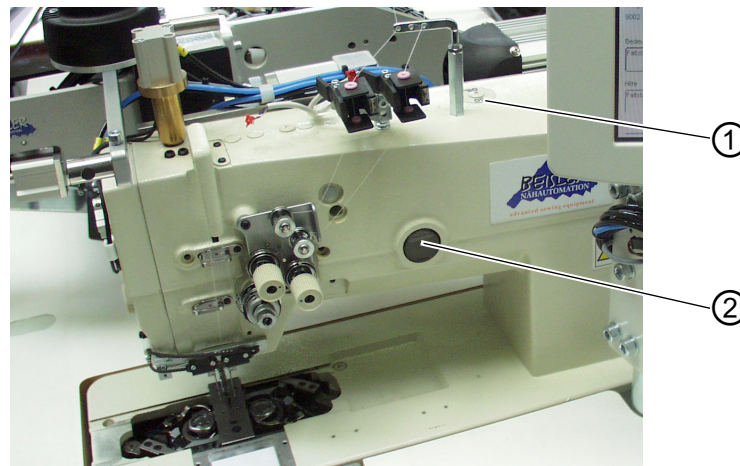

(1) - Drill-hole

(2) - Oil reservoir

Checking the oil level for the lubrication of the machine head

The oil level in the oil reservoir (2) must not drop below the marking "Min". If necessary, fill oil through the drill-hole (1) up to the upper marking "Max".

6.8 Putting into operation

After completion of the installation work a sewing test should be made.

DANGER



Risk of injury due to pointed items and glare

Turn off the main switch before threading in the needle and hook thread.

Do not look into the light source.

1. Plug in the mains plug.
 2. Threading the needle thread,  chapter 5.5.
 3. Thread in the looper thread.
 4. Turn the main switch on.
 - ↳ The control is initialized.
 5. Step back on the left pedal.
 - ↳ The reference run starts.
- The transport carriage stops in its rear end position.
The reference position is necessary in order to get a defined initial position of the transport carriage.

6. By actuating the left pedal the various steps of the positioning procedure are triggered successively and the sewing cycle is started.

ATTENTION

Material damage!

At sewing start the workpiece has to lie underneath the feeding clamps.

Any movement of the transport carriage without material damages the coating of the feeding clamps.

- For the selection of the sewing program and further settings of the control unit,  *Part 4: Programming Instructions*.
- Positioning and operating,  *Part 1: Operating Instructions*.

6.9 Installation of the software

ATTENTION

Material damage!


During the loading process do not remove the USB flash drive and do not switch off the machine (otherwise you will destroy the software).

Fig. 60: Connecting the USB flash drive




1. Switch off the sewing unit.
 2. Insert the USB flash drive vertically into the control panel.
 3. Switch on the sewing unit.
 4. Change to the menu DAC-Update.
- ➡ This screen will be displayed:

Fig. 61: Message display

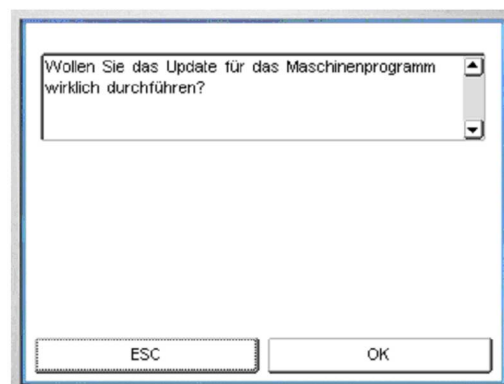

5. Press the **OK** button.
- ➡ This screen will be displayed:


Fig. 62: Message display

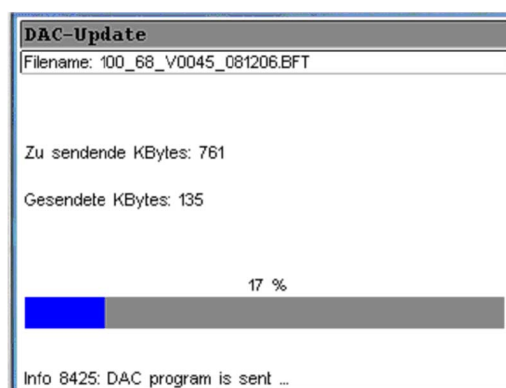

6. Wait until the storing of the programs for the operation and the control is finished.
The USB flash drive must not be removed from the control panel while the LED is still flashing.


➡ After the transfer this screen will be displayed:

Fig. 63: Message display

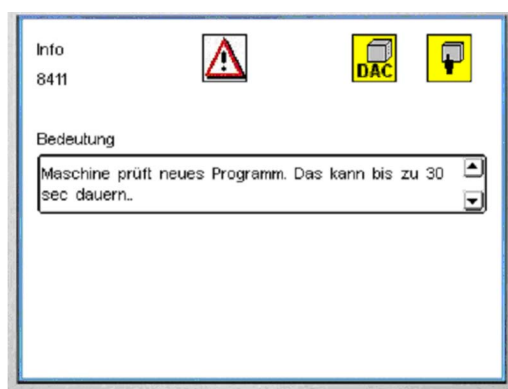

The sewing unit verifies the new program. After the verification is completed this screen will be displayed:

Fig. 64: Message display

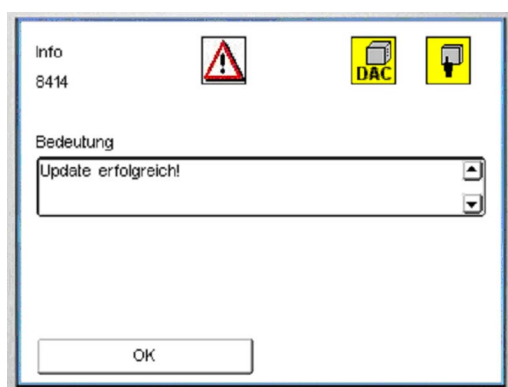

7. Press the **OK** button.
- ➡ The update is completed.

6.10 Customer service

If you have any questions regarding the machine, damage occurring, or wear, please contact

Dürkopp Adler AG

Potsdamer Str.190

33719 Bielefeld

Phone: +49 (0) 180 5 383 756

Fax.: +49 (0) 521 925 2594

E-Mail: service@duerkopp-adler.com

Internet: www.duerkopp-adler.com

7 Decommissioning

In order to remove the machine from service for a longer period or definitely, some operations have to be carried out.

WARNUNG



Risk of injury due lacking of care

When decommissioning the machine, a lack of care or expertise can lead to serious injuries.

Clean the machine **ONLY** when it is switched off.

Avoid skin contact with oil rests.


ONLY trained personnel may disconnect the machine.

How to decommission the machine:

1. Switch off the main switch.
2. Pull out the mains plug.
3. Disconnect the pneumatic connection.
4. Wipe out the oil rests in the oil sunk underneath the fabric plate with a cloth.
5. Cover the control panel in order to protect it from dust and dirt.
6. If possible, completely cover the machine in order to protect it from dust, dirt or damage.

When transporting the machine, pay heed to the necessary safety precautions.

8 Disposal

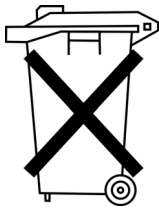

The machine must not be disposed of in the normal household waste.
The machine must be disposed of in an appropriate and correct manner according to the national regulations.

ATTENTION



Risk of environmental damage due to incorrect oil disposal.

Incorrect disposal of old oil can result in severe environmental damage.

ALWAYS observe the legally prescribed regulations for disposal of oil.

When disposing of the machine, be aware that it consists of a range of different materials (steel, plastic, electronic components, etc.). Observe the applicable national regulations for disposal.



DÜRKOPP ADLER AG
Potsdamer Str.190
33719 Bielefeld
Germany
Phone +49 (0) 521 925 00
E-Mail: service@duerkopp-adler.com
www.duerkopp-adler.com