

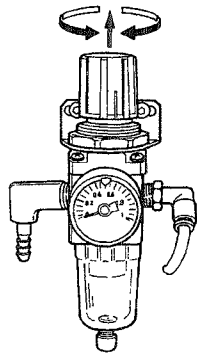


4. Piping pneumatic components and wiring electric components

Perform piping of the pneumatic components and wiring of the electric components in accordance with the drawing below.

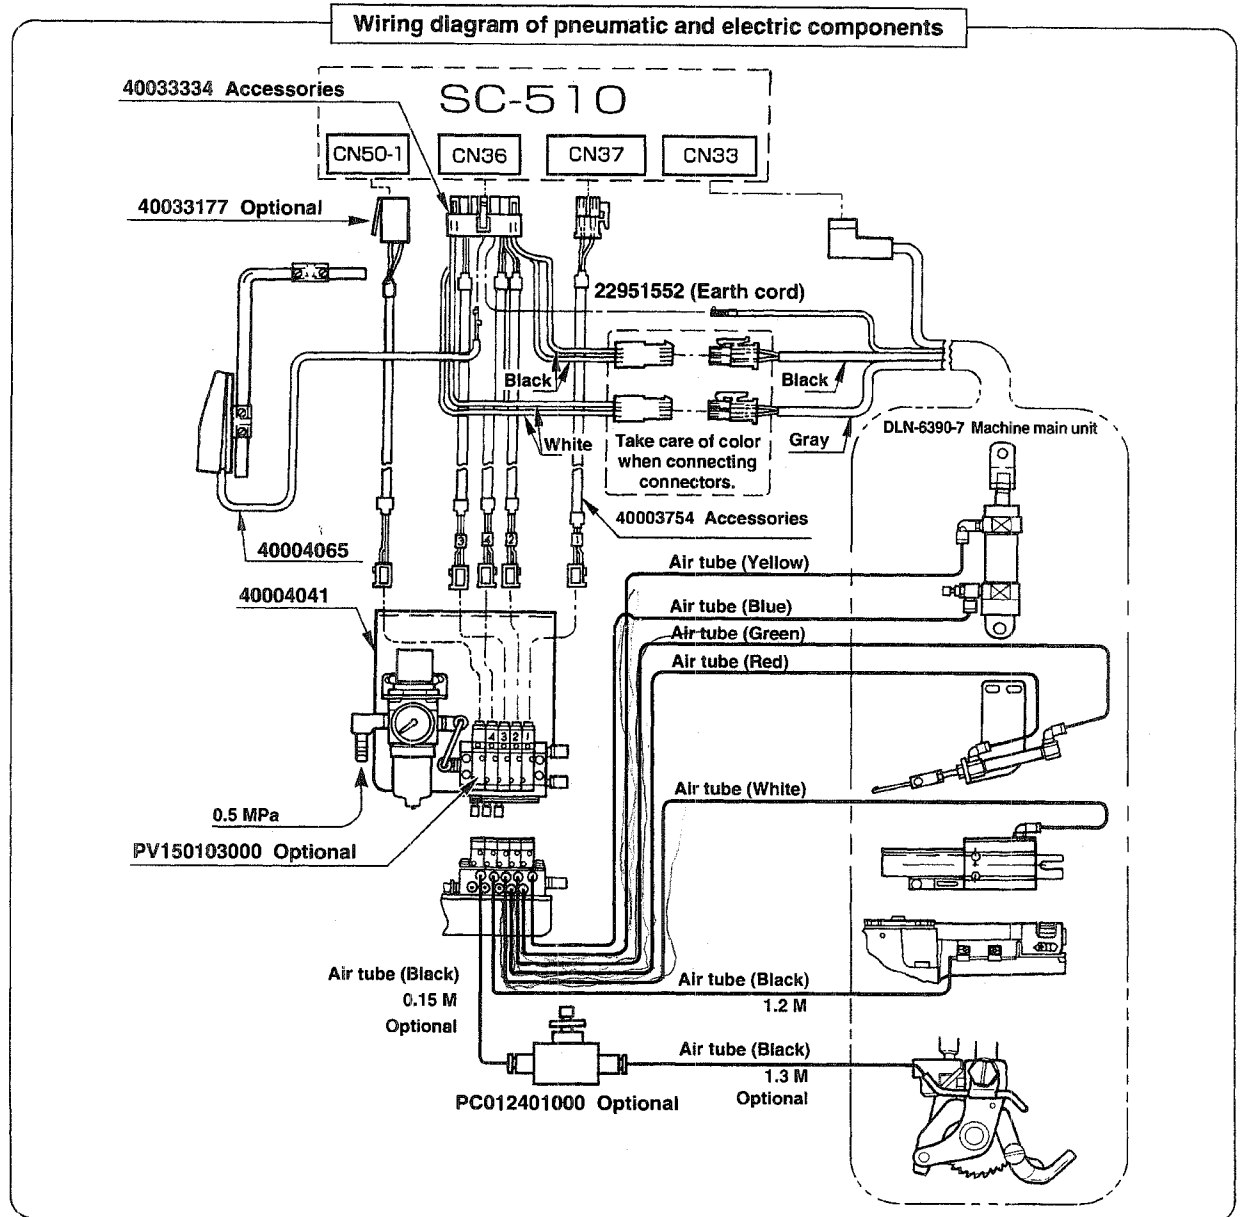

Air pressure required for this sewing machine is 0.5 MPa. Turn the dial to adjust the pressure to 0.5 MPa after completion of piping.

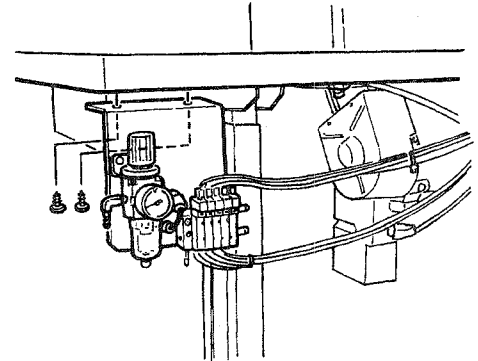

Fix the air unit on the table with wood screws. (For the fixing position, refer to the drawing of table for reference.)