



Данную детализировку для вас
предоставила компания **Крунг**

PARTS BOOK

KM-235A/B

고속 1본침 본봉 자동사절 재봉기

High Speed, 1-Needle, Lock Stitch Machine
with Automatic Thread Trimmer

KM-137A/B

고속 1본침 본봉 재봉기

High Speed, 1-Needle, Lock Stitch Machine



CONTENTS


목 차

A	<i>Machine Body & Thread Tension Adjusting Mechanism</i> 외장 및 실장력 조절 관계.....	4
B	<i>Upper Shaft, Needle Bar, Thread Take-Up, Synchronizer Mechanism</i> 상축/바늘대/실채기/싱크로 나이저 관계	8
C	<i>Upright Shaft & Lower Shaft Mechanism</i> 세운축 및 하축 관계	10
D	<i>Feed Mechanism</i> 피이드 관계	12
E	<i>Press Bar & Tension Release Mechanism</i> 누름대 및 실놓추기 관계	16
F	<i>Thread Trimmer Mechanism</i> 사절 관계(235전용).....	18
G	<i>Reverse Button Mechanism</i> 역진 버튼 관계(235전용)	20
H	<i>Thread Wiper Mechanism</i> 와이프 관계(235전용)	21
I	<i>Lubrication</i> 급유 관계.....	22
J	<i>Accessories</i> 액세서리 관계.....	24
K	<i>Program Unit Box & Automatic Presser Foot Lifter</i> 프로그램 유닛 박스 및 자동 무릎올림 관계(235전용).....	26

Machine Body &

Thread Tension Adjusting Mechanism

외장 및 실장력 조절 관계

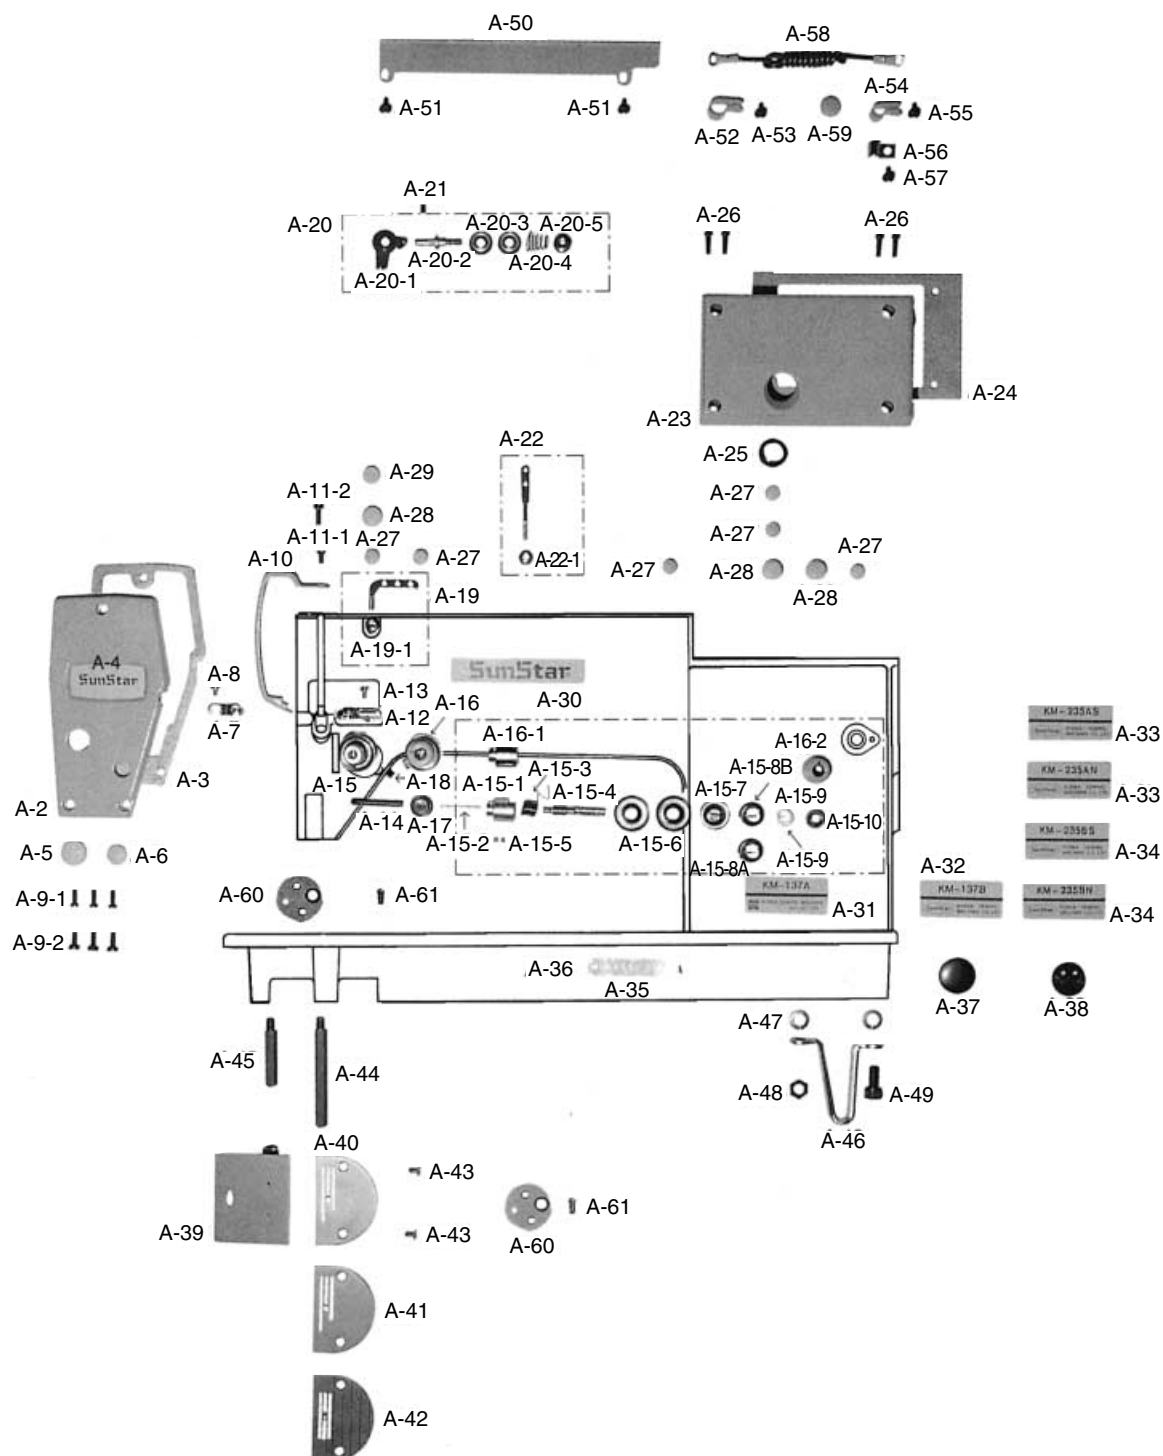


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q' ty	Assembly No.
A-1	01-001A-1370	A, B	Arm, Bed Assembly	암,베드(조)	1	
A-1-1	01-001A-235B	A-1, B-1	Arm, Bed Assembly	암,베드(조)	1	
A-1-2	01-001A-235A		Arm, Bed Assembly	암,베드(조)	1	
A-2	01-006A-2350		Face Plate	면판	1	
A-3	01-007C-2350		Gasket For A-2	면판 패킹	1	
A-4	01-029M-1230		Name Plate	면판 마크	1	
A-5	01-144R-1230		Face Plate Rubber Cap(L)	면판 고무마개(대) 흰색(3-1)	1	
A-6	01-110R-1230		Rubber Plug For A-2	면판 고무마개(중) 흰색(3)	1	
A-7	01-031C-1230		Thread Guide Left	면판 실결이	1	
A-8	SC-0120-1230		Screw(9/64" n = 40)	오일펌프 커버 나사(9/64" n=40)	1	
A-9-1	SC-0179-3710	A, B	Screw(11/64" n = 40)	윗뚜껑 콤파나사(11/64" n = 40)	3	
A-9-2	SC-0179-3710	A-1, B-1	Screw(11/64" n = 40)	윗뚜껑 콤파나사(11/64" n = 40)	3	
A-10	01-009A-2350		Cover For Take Up Lever	실채기 커버	1	
A-11-1	SC-0543-2302	A, B	Screw(11/64" n = 40)	톱커버 힌지 고정나사(11/64" n=40)	1	
A-11-2	SC-A174-4122	A-1, B-1	Screw(11/64" n = 40)	가마잡이 나사(11/64" n = 40)	1	
A-12	01-030C-1230		Thread Guide For Arm	암 실결이	1	
A-13	SC-0120-1230		Screw(9/64" n = 40)	오일펌프 커버 나사(9/64" n=40)	1	
A-14	40-003P-1230		Tension Release Pin	실 늦추기 핀	1	
A-15	40-114A-1230	A, B	Tension Complete	실 조절장치(137용)	1	
A-15-1	40-104A-1230	A, B	Tension Barrel	실 조절장치 붓싱	1	
A-15-2	40-504A-1230		Tension Release Pin	사조자 핀	1	
A-15-3	40-111G-1230		Check Spring	뽕뽕 스프링	1	
A-15-4	40-404A-1230		Tension Stud	실 조절장치 축	1	
A-15-5	40-604S-1230		Set Screw For A-15-4	실 조절장치 축 고정나사	2	
A-15-6	40-204A-1230		Tension Disk	실 안내 접시	2	
A-15-7	40-304A-1230		Tension Release Washer	실 조절 스프링 받침	1	
A-15-8A	40-333G-123A	A, A-1	Tension Spring	소라 스프링	1	
A-15-8B	40-333G-123B	B, B-1	Tension Spring	소라 스프링	1	
A-15-9	40-804W-1230		Ratchet For A-15-10	실 조절장치 조절와셔	1	
A-15-10	40-704C-1230	A, B	Tension Adjusting Knob	실 조절장치 너트	1	
A-16	40-104A-2350	A-1, B-1	Tension Adjusting Apparatus Ass'y	실 조절장치(사절용)	1	
A-16-1		A-1, B-1	Tension Barrel	실 조절장치 붓싱	1	
A-16-2	40-204A-2350	A-1, B-1	Cap For A-15-4	윗실 장력 조절 캡	1	
A-17	40-008R-1230		Packing For A-15	누유 방지용 캡	1	
A-18	SC-0114-1230		Screw(15/64" n = 28)	피드캠 고정나사(15/64" n = 28)	1	
A-19	01-127A-1230	A, B	Thread Guide With Three Holes	세구멍 실결이(조)(137용)	1	
A-19-1	01-027C-1230	A, B	Nut For A-19	세구멍 실결이 너트	1	
A-20	40-201A-2700	A-1, B-1	Supplementary Tension Ass'y	보조 실 조절장치(조)	1	
A-20-1	40-105A-2700	A-1, B-1	Guide Plate For A-20	윗실 안내판	1	
A-20-2	40-101A-2700	A-1, B-1	Shaft For A-20	보조 실 조절장치 축	1	
A-20-3	40-102A-2700	A-1, B-1	Tension Disk	보조 실 조절 접시	2	
A-20-4	40-103A-2700	A-1, B-1	Spring For A-20	보조 소라 스프링	1	
A-20-5	40-104A-2700	A-1, B-1	Nut For A-20	보조 실 조절장치 조절 너트	1	

NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B

Machine Body & Thread Tension Adjusting Mechanism 외장 및 실장력 조절 관계

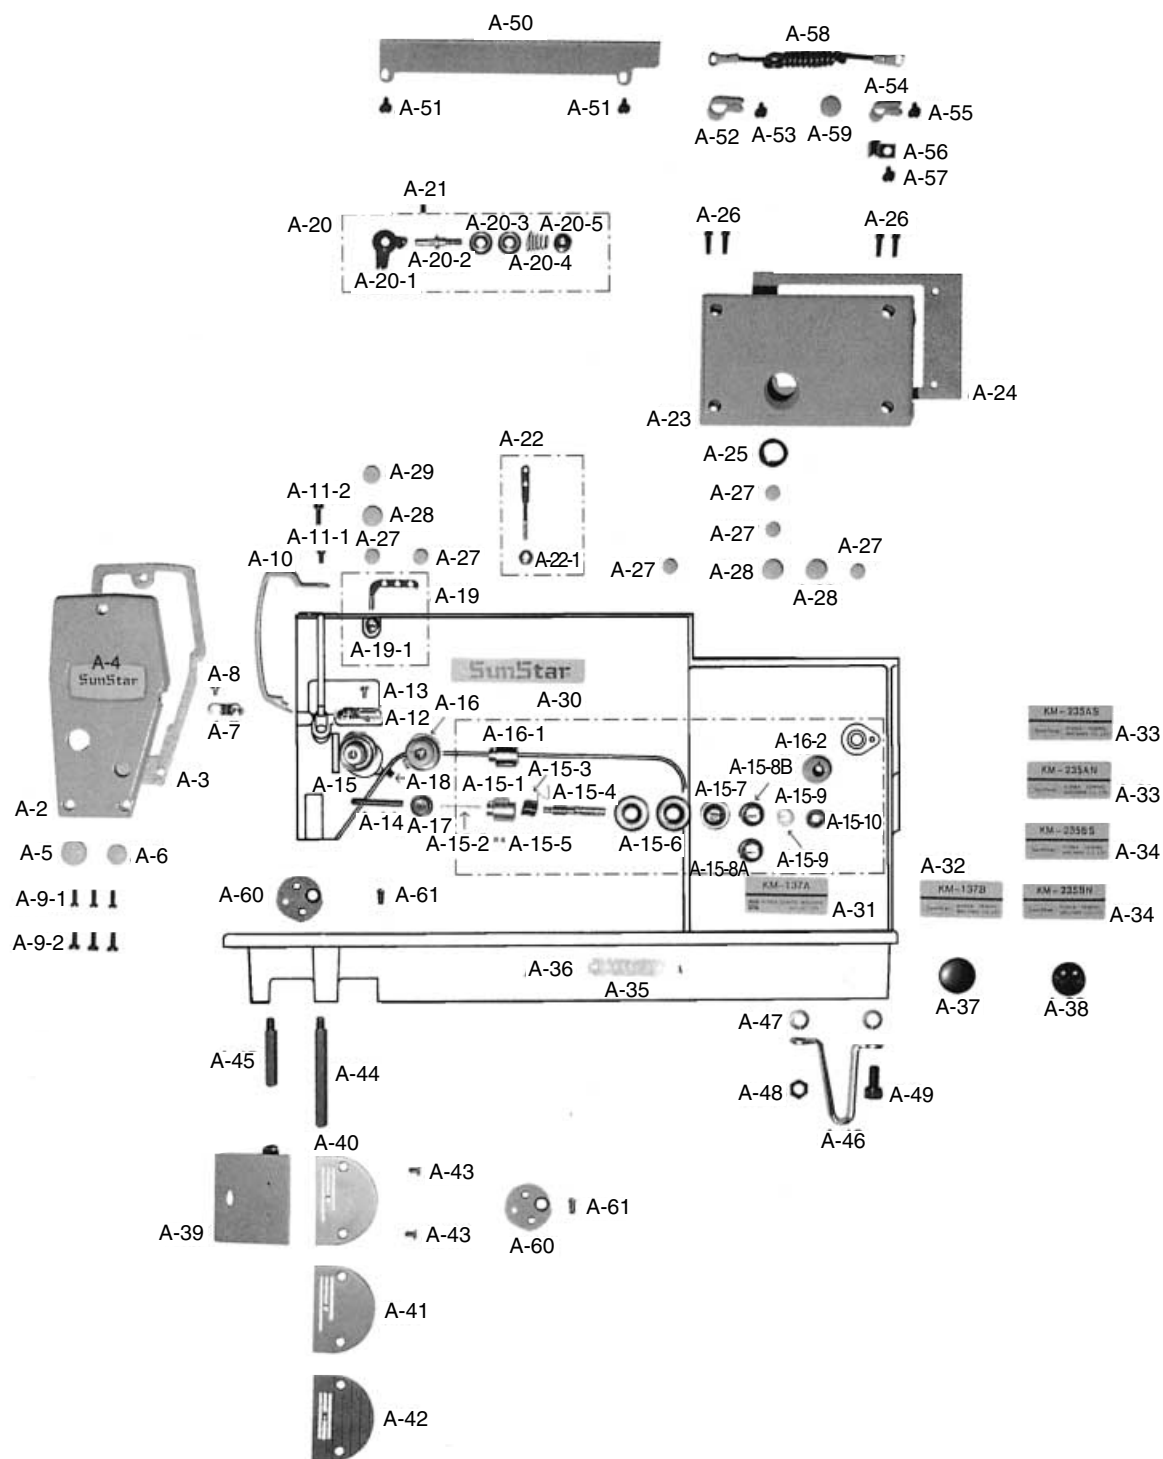


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q' ty	Assembly No.
A-21	SC-0104-5607	A-1, B-1	Screw(11/64" n = 40)	하측 베어링 B/S 고정나사(11/64" n=40)	1	
A-22	01-116A-2350		Guide Bar For Thread	실 안내봉(235용)	1	
A-22-1	01-027C-1230		Nut For A-22	세구멍 실걸이 너트	1	
A-23	01-011A-2350		Top Cover	윗 뚜껑	1	
A-24	01-012C-2350		Gasket For A-23	윗 뚜껑 패킹	1	
A-25	01-019C-1230		Oil Gauge Window	유창	1	
A-26	01-023S-1230		Screw For Top Cover	톱커버 나사(신)	4	
A-27	01-112R-1230		Robber Plug(Small)	고무마개(소) 회색(5)	6	
A-28	01-110R-1230		Robber Plug(Large)	면판 고무마개(중) 회색(3)	3	
A-29	01-006R-2350		Robber Plug	실 늦추기 힌지핀 고무마개	1	
A-30	01-010M-2350		Brand Mark For Arm	상표마크(암부)	1	
A-31	01-013M-137A	A	Model Mark	모델마크	1	
A-32	01-013M-137B	B	Model Mark	모델마크	1	
A-33	01-013M-235A	A-1	Model Mark	모델마크	1	
A-34	01-013M-235B	B-1	Model Mark	모델마크	1	
A-35	01-035P-1230		Machine Number Plate	번호판	1	
A-36	01-035P-7400		Setting Pin For A-35	번호판 핀	2	
A-37	01-011C-1230	A, B	Plug For Bed Hole	하측 가공 구멍마개	1	
A-38	01-007R-2350	A-1, B-1	Rubber Plug For Cable	슬레노이드 케이블 안내 고무	1	
A-39	01-434A-1230		Slide Plate Ass'y	미끄럼판(조)	1	
A-40	01-135A-123A	A, A-1	Needle Plate	침판	1	
A-41	01-135A-123B	B, B-1	Needle Plate	침판	1	
A-42	01-135A-235A		Needle Plate (AL-Type)	침판(박물용)	1	
A-43	01-1365-1230		Screw(11/64" n = 40)	홈볼이 접시 작은나사(11/64" n=40)	2	
A-44	01-016C-1230		Bed Leg Front	베드 받침(전)	1	
A-45	01-017C-1230	A, B	Bed Leg Rear	베드 받침(후)	1	
A-46	01-115C-1230		Bed Leg Right	베드 받침	1	
A-47	01-038W-1230		Spring Washer For A-46	베드 받침 스프링 와셔	2	
A-48	SN-0112-1230		Nut(M8×1.25)	베드 받침 너트(M8×1.25)	1	
A-49	SC-0346-2350		Screw(M8×1.25)	베드 받침 후 결합 볼트(M8×1.25)	1	
A-50	01-015A-2350	A-1, B-1	Cable Cover	케이블 커버	1	
A-51	SC-0199-2700	A-1, B-1	Screw(11/64" n = 40)	슬레노이드 부착 고정나사(11/64" n=40)	2	
A-52	01-011C-2350	A-1, B-1	Cable Holder(5N)	케이블 잡이C(5N)	1	
A-53	SC-0365-3710	A-1, B-1	Screw(9/64" n = 40)	면판 측면 커버 나사 (하) (9/64" n=40)	1	
A-54	01-009R-2700	A-1, B-1	Cable Holder(6N)	케이블 잡이(6N)	1	
A-55	SC-0365-3710	A-1, B-1	Screw(9/64" n = 40)	면판 측면 커버 나사 (하) (9/64" n=40)	1	
A-56	01-009R-2350	A-1, B-1	Cable Holder	케이블 잡이	1	
A-57	SC-0365-3710	A-1, B-1	Screw(9/64" n = 40)	면판 측면 커버 나사 (하) (9/64" n=40)	1	
A-58	12-016M-2350	A-1, B-1	Earth Line	어스선(조)	1	
A-59	01-110R-1230	A-1, B-1	Rubber Plug	면판 고무마개(중) 흰색(3)	1	
A-60	01-044A-257A	A-1, B-1	Gauge Plate	게이지 부착판	1	
A-61	01-136S-1230	A-1, B-1	Screw for Needle Plate	침나사	1	

NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B

Upper Shaft, Needle Bar, Thread Take-Up,
Synchronizer Mechanism

상축/바늘대/실채기/싱크로나이저 관계

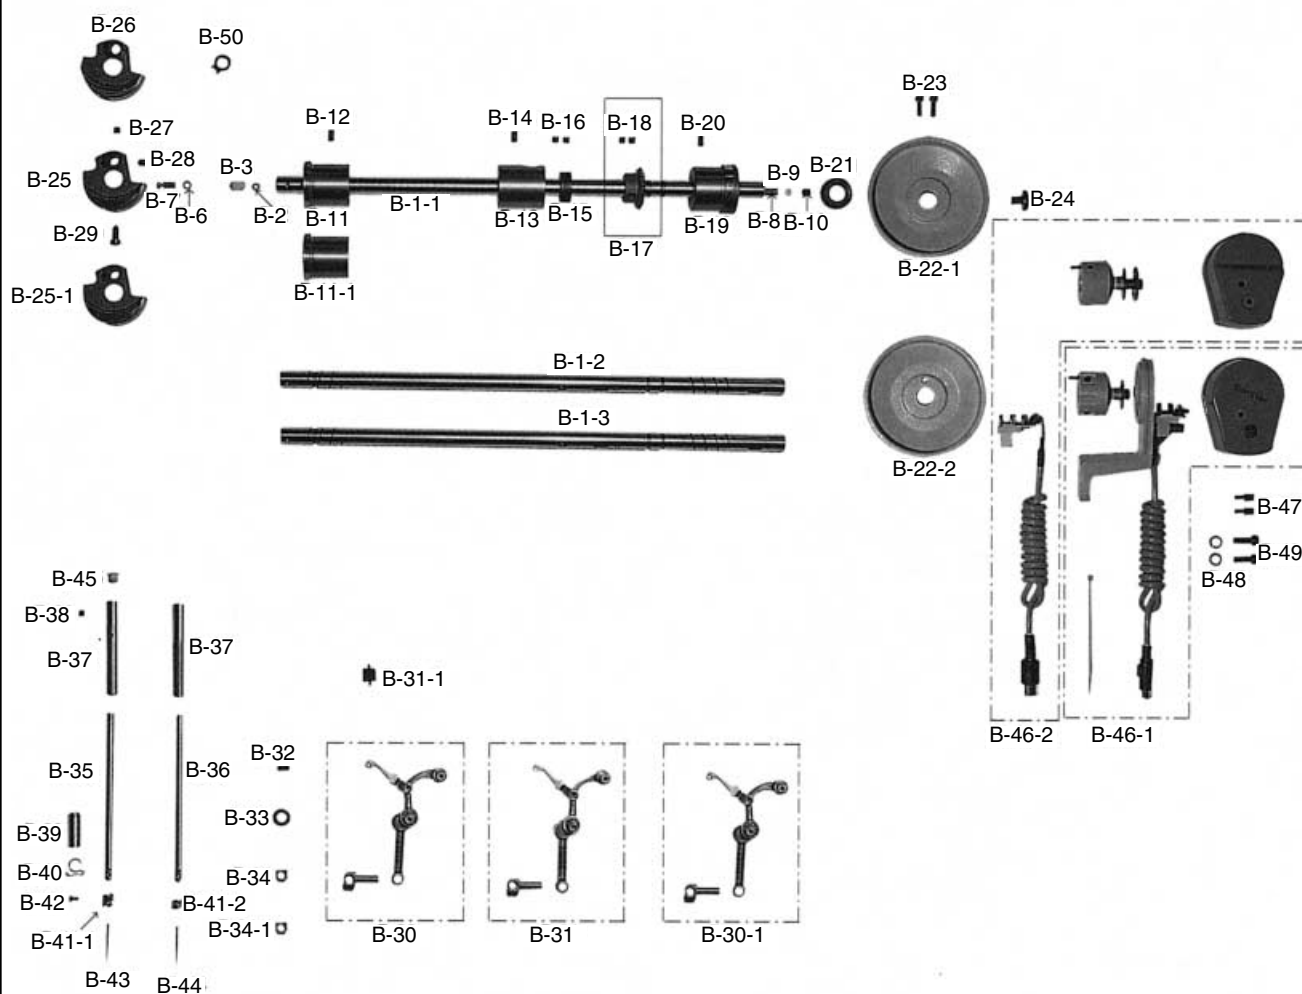

Ref. No.	Parts No.	Note	Name of Parts	품명	Q' ty	Assembly No.
B-1-1	02-101A-1370	A, B	Main Shaft	상축	1	
B-1-2	02-101A-2350	A-1	Main Shaft	상축	1	
B-1-3	02-101A-235A	A-1	Main Shaft	상축	1	
B-2	02-018W-1230		Rubber For B-3	상축 유량 조절 고무	1	
B-3	02-020M-1230		Felt for B-1	상축 헬트	1	
B-6	02-016R-1230		O-Ring For B-7	상축 유량 조절핀 오링	1	
B-7	02-015C-2500		Adjusting Valve For Lubrication	상축 유량 조절핀	1	
B-8	02-013R-1230		Oil Stopper Rubber For B-1	상축 기름막이 고무	1	
B-9	02-014W-1230		Washer For B-8	상축 기름막이 스토퍼	1	
B-10	SC-0210-3800		Screw(5/16" n=24)	상축 기름막이 고정나사(5/16" n=24)	1	
B-11	02-125A-1230	A, B, B-1	Main Shaft Front Bushing	상축 앞 붓싱(137A, B, 235B)	1	
B-11-1	02-104A-250A	A-1	Main Shaft Front Bushing	상축 앞 붓싱(235A)	1	
B-12	SC-0507-1230		Screw(15/64" n=28)	상축 B/S 고정나사(15/64" n=28)	1	
B-13	02-126A-1230		Main Shaft Center Bushing	상축 중 붓싱	1	
B-14	SC-0507-1230		Screw(15/64" n=28)	상축 B/S 고정나사(15/64" n=28)	1	
B-15	02-121A-1230		Main Shaft Collar	상축 카라	1	
B-16	SC-A129-4515		Screw(1/4" n=40)	홈볼이 멈춤나사(1/4" n=40)	2	
B-17	02-211A-1230		Main Shaft Gear	상축 기어(국산)	1	
B-18	SC-A129-4515		Screw(1/4" n=40)	홈볼이 멈춤나사(1/4" n=40)	2	
B-19	02-027A-1230		Main Shaft Rear Bushing	상축 뒷 붓싱	1	
B-20	SC-0114-1230		Screw(15/64" n=28)	피드캠 고정나사(15/64" n=28)	1	
B-21	02-028C-1230		Oil Seal For B-1	상축 오일 셀	1	
B-22-1	02-003A-1370	A, B	Pulley	폴리	1	
B-22-2	02-003A-2350	A-1, B-1	Pulley	폴리	1	
B-23	SC-0150-2500		Screw(15/64" n=40)	폴리 고정나사(15/64" n=40)	2	
B-24	SC-0188-1230		Screw(5/16" n=28)	폴리 고정나사(5/16" n=28)	1	
B-25	02-110A-235A	A	Counterweight	링크캠(137A)	1	
B-25-1	02-102A-250A	A-1	Counterweight	링크캠(235A)	1	
B-26	02-101A-1230	B, B-1	Counterweight	링크캠(137B, 235B)	1	
B-27	SC-A129-4515		Screw(1/4" n=40)	홈볼이 멈춤나사(1/4" n=40)	1	
B-28	SC-0504-1230		Screw(1/4" n=40)	실채기 핀 고정나사(1/4" n=40)	1	
B-29	SC-0123-1230		Screw(9/32" n=28)	링크캠 위치 고정나사(9/32" n=28)	1	
B-30	08-102A-123A	A, A-1	Take-Up Lever Complete	실채기(137A)	1	
B-30-1	08-201A-250A	A-1	Take-Up Lever Complete	실채기(235A)	1	
B-31	08-102A-123B	B, B-1	Take-Up Lever Complete	실채기(137B, 235B)	1	
B-31-1	08-010R-2350		Oil Protection Rubber	실채기 기름막이 고무	1	
B-32	SC-0507-1230		Screw(15/64" n=28)	상축 B/S 고정나사(15/64" n=28)	1	
B-33	02-105W-1230		Thrust Washer For B-25, 26	링크캠 washer	1	
B-34	04-006A-1230	A, B, B-1	Sliding Block For B-35	바늘대 안내 블록(137A, B, 235B)	1	
B-34-1	04-005A-2500	A-1,	Sliding Block	바늘대 안내 블록(235A)	1	
B-35	04-101A-235A	A, A-1	Needle Bar	바늘대	1	
B-36	04-101A-235B	B, B-1	Needle Bar	바늘대	1	
B-37-1	04-108A-1230	A, B	Needle Bar Upper Bushing	바늘대 상 붓싱	1	
B-37-2	04-108A-2350	A-1, B-1	Needle Bar Upper Bushing	바늘대 상 붓싱	1	
B-38	SC-0110-1230		Screw(15/64" n=28)	바늘대 B/S 나사	1	
B-39	04-109A-235A		Needle Bar Lower Bushing	바늘대 하 붓싱	1	
B-40	04-005C-1230		Thread Guide "A"	바늘대 붓싱 실결이	1	
B-41-1	04-002C-1230	A, B	Thread Guide For B-35, 36	바늘대 실결이 (137A, B)	1	
B-41-2	04-001A-2700	A-1, B-1	Thread Guide For B-35, 36	바늘대 실결이 (235A, B)	1	
B-42	SC-A131-4522		Screw(1/8" n=44)	홈볼이 납작 작은나사(1/8" n=44)	1	
B-43		A, A-1	Needle	바늘	1	
B-44		B, B-1	Needle	바늘	1	
B-45	04-104R-1230		Rubber Cap For B-37-1, 37-2	바늘대 상 붓싱 마개	1	
B-46-1	11-0000-SE55	A-1, B-1	Synchronizer Ass'y(Servo-3)	싱크로 나이저(조) Servo-3	1	
B-46-2	12-0000-4701	A-1, B-1	Synchronizer Ass'y(NP)	싱크로 나이저(조) NP	1	
B-47	01-019P-2350	A-1, B-1	Guide Pin For D-46	싱크로 베이스 기준핀	2	
B-48	01-020W-2350	A-1, B-1	Washer	싱크로 나이저 S/T washer	2	
B-49	SC-0109-2350	A-1, B-1	Screw(M6×1.0)	B/T 솔레노이드 브라켓 쉘나사(M6×1.0)	2	
B-50	08-006C-2500	A-1	Protection Plate	링크캠 접촉판	1	


NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B



Upright Shaft & Lower Shaft Mechanism

세운축 및 하축 관계

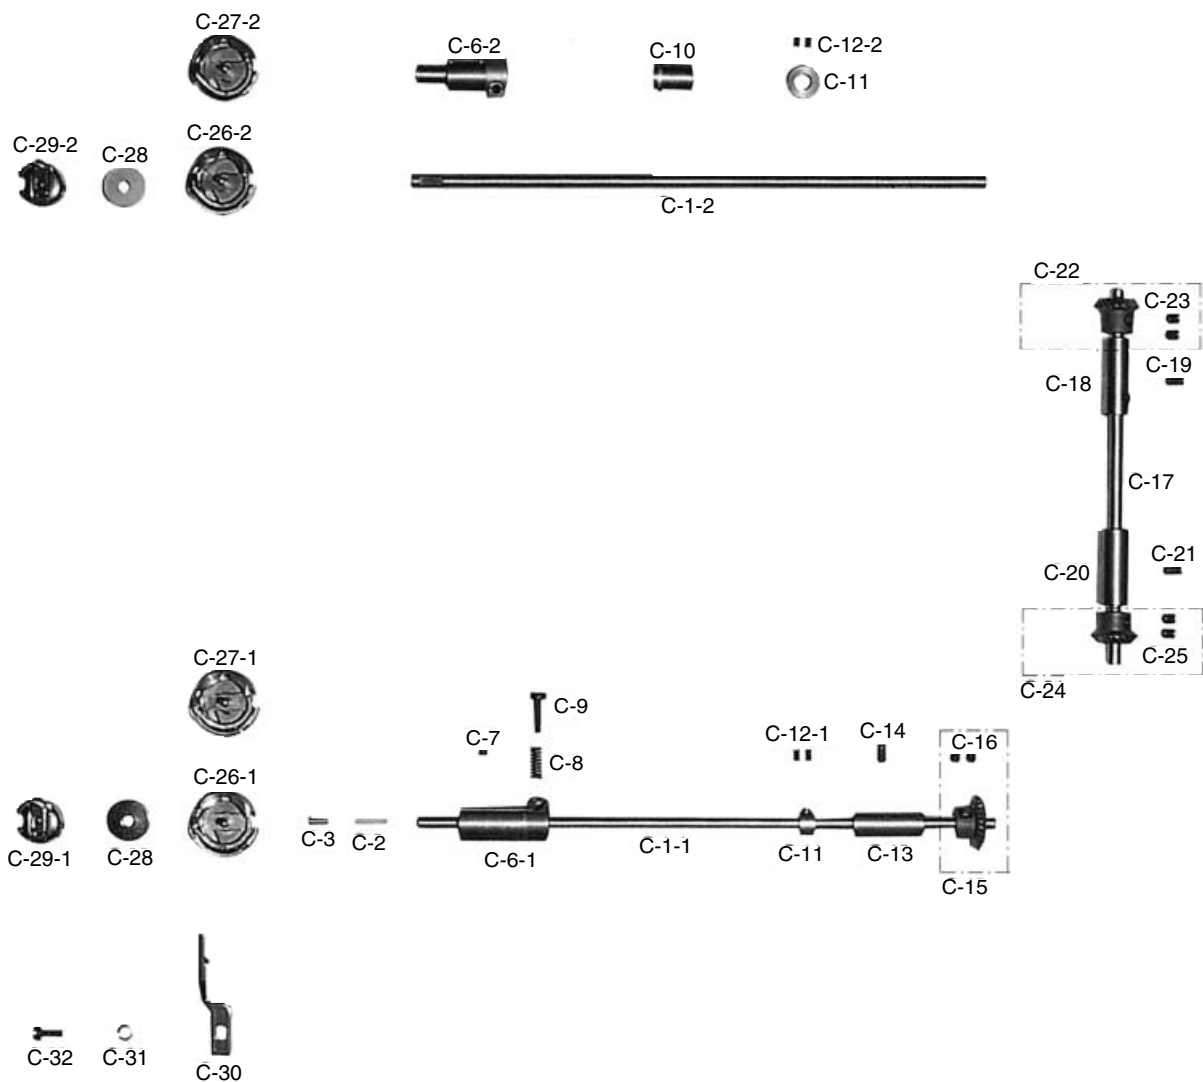

Ref. No.	Parts No.	Note	Name of Parts	품 명	Q' ty	Assembly No.
C-1-1	07-103A-1230	A, B	Lower Shaft	하축 (137A, B)	1	
C-1-2	07-103A-2350	A-1, B-1	Lower Shaft	하축 (235A, B)	1	
C-2	07-005M-1230		Felt For C-1	하축 펠트	1	
C-3	07-004S-1230		Set Screw For C-2	하축 펠트 꽃이 나사	1	
C-6-1	07-104A-1600	A, B	Lower Shaft Bushing(Front)	하축 앞 붓싱 (137A, B)	1	
C-6-2	10-102A-2700	A-1, B-1	Lower Shaft Bushing(Front)	하축 앞 붓싱 (235A, B)	1	
C-7	SC-0114-1230		Screw(15/34" n = 28)	피드 캠 고정나사(15/64" n=28)	1	
C-8	07-015G-1230		Spring For C-7	하축 오일 조절나사 스프링	1	
C-9	SC-0361-1230		Screw(3/16" n = 32)	하축 오일 조절나사(3/16" n=32)	1	
C-10	07-101A-2700	A-1, B-1	Lower Shaft Bushing(Center)	하축 중 붓싱	1	
C-11	44-025A-1230	A-1, B-1	Collar(B) For C-1	오일 펌프 카라(B)	1	
C-12-1	SC-0104-5607	A, B	Screw(11/64" n = 40)	하축 중 베어링 붓싱나사 (11/64" n=40)	2	
C-12-2	SC-0104-5607	A-1, B-1	Screw(11/64" n = 40)	하축 중 베어링 붓싱나사 (11/64" n=40)	2	
C-13	07-102A-1600		Lower Shaft Rear Bushing	하축 뒷 붓싱	1	
C-14	SC-0507-1230		Screw(15/64" n = 28)	상축 B/S 고정나사	1	
C-15	02-214A-1230		Lower Shaft Gear	하축 뒷 기어(국산)	1	
C-16	SC-A129-4515		Screw(1/4" n = 40)	흡불이 멈춤나사(1/4" n=40)	2	
C-17	03-101A-1600		Upright Shaft	입축	1	
C-18	03-102A-1230		Vertical Shaft Upper Bushing	입축 상 붓싱	1	
C-19	SC-0507-1230		Screw(15/64" n = 28)	상축 B/S 고정나사(15/64" n=28)	1	
C-20	03-103A-1230		Upright Shaft Lower Bushing	입축 하 붓싱	1	
C-21	SC-0507-1230		Screw(15/64" n = 28)	상축 B/S 고정나사(15/64" n=28)	1	
C-22	02-212A-1230		Upright Shaft Upper Gear	입축 상 기어(국산)	1	
C-23	SC-0129-7400		Screw(1/4" n = 40)	기어나사(1/4" n=40)	2	
C-24	02-213A-1230		Upright Shaft Lower Gear	입축 하 기어(국산)	1	
C-25	SC-0129-7400		Screw(1/4" n = 40)	기어나사(1/4" n=40)	2	
C-26-1	07-007A-123A	A	Rotary Hook Ass'y	가마	1	
C-26-2	07-003A-270A	A-1	Rotary Hook Ass'y	가마	1	
C-27-1	07-007A-123B	B	Rotary Hook Ass'y	가마	1	
C-27-2	07-003A-270B	B-1	Rotary Hook Ass'y	가마	1	
C-28	07-105A-2700		Bobbin (A1)	보빈	1	
C-29-1	07-106A-123A	A, B	Bobbin Case Ass'y	보빈 케이스	1	
C-29-2	07-104A-2700	A-1, B-1	Bobbin Case Ass'y	보빈 케이스	1	
C-30	07-013A-1230		Hook Retainer	가마잡이	1	
C-31	07-011W-1230		Spring Washer For C-32	가마잡이 와셔	1	
C-32	SC-A174-4122		Screw(11/64" n = 40)	가마잡이 나사(11/64" n=40)	1	

NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B

수정 리스트 Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
1	B-7	02-015C-2500	Adjusting Value for Lubrication	Substitution	00. 3	02-105C-2350	
2	B-4		Washer For B-3	Deleted Parts	00. 3	02-019W-1230	
3	F-7	10-006A-2700	Rotary mes	Substitution	00. 3	10-002A-257A	
4	D-84	06-137A-1370	Shaft for D-79	Change of Blue Point	00. 8	06-037A-1370	
5	D-22	06-119S-1230	Screw(3/16" n = 28)	Substitution	01. 01	SC-0497-4122	00. 4/4
6	D-43	06-119S-1230	Screw(3/16" n = 28)	Substitution	01. 01	SC-0497-4122	00. 4/4
7	D-47	06-119S-1230	Screw(3/16" n = 28)	Substitution	01. 01	SC-0497-4122	00. 4/4
8	C-18	03-102A-1230	Vertical Shaft Upper Bushing	Substitution	01. 01	03-002A-1230	00. 4/4
9	D-25	06-105A-2350	Feed Connecting Link(A)	Substitution	01. 01	06-005A-2350	00. 4/4
10	D-26	06-106A-2350	Feed Connecting Link(B)	Substitution	01. 01	06-006A-2350	00. 4/4
11	D-79-1	06-119A-1370	Feed Regulating	Substitution	01. 01	06-019A-1370	00. 4/4
12	D-79-2	06-119A-2350	Feed Regulating	Substitution	01. 01	06-019A-2350	00. 4/4
13	E-56	10-134A-2700	Pipe for Thread Release Lever	Substitution	01. 01	10-034A-2700	00. 4/4
14	D-72	06-211A-2350	Feed Cam C	Substitution	01. 01	06-111A-2350	00. 4/4
15	C-6-1	07-104A-1600	Lower Shaft Bushing(F)	Substitution	01. 01	07-004A-1600	00. 4/4
16	D-20	06-117A-1230	Sliding Block	Substitution	01. 01	06-017A-1230	00. 4/4
17	B-37-2	04-108A-2350	Needle Bar Upper Bushing	Substitution	01. 01	04-008A-2350	00. 4/4
18	D-42	06-128A-2350	Feed Lifting Bell Arm	Substitution	01. 01	06-028A-2350	00. 4/4
19	B-17-2	02-211A-1230	Kain Shaft Gear	Substitution	01. 01	02-111A-1230	00. 4/4
20	C-15-2	02-212A-1230	Lower Shaft Gear	Substitution	01. 01	02-112A-1230	00. 4/4
21	C-22-2	02-213A-1230	Upright Shaft Upper Gear	Substitution	01. 01	02-113A-1230	00. 4/4
22	C-24-2	02-214A-1230	Upright Shaft Lower Gear	Substitution	01. 01	02-114A-1230	00. 4/4
23	F-1	10-101A-2700	Fixed Mes	Substitution	01. 01	10-001A-2700	00. 4/4
24	F-7	10-106A-2700	Rotary Mes	Substitution	01. 01	10-006A-2700	00. 4/4
25	J-45	10-101A-2700	Fixed Mes	Substitution	01. 01	10-001A-2700	00. 4/4
26	J-4	01-213R-1230	Head Support Rubber "B"	Substitution	01. 03	01-013R-1230	Only KM-235A
27	J-5	01-214R-1230	Head Support Rubber "A"	Substitution	01. 03	01-041R-1230	Only KM-235A
28	B-11-1	02-004A-250A	Main Shaft Front Bushing	Change of Blue Point	01. 03	02-025A-1230	Only KM-235A
29	A-1-2	01-001A-235A	Arm Bed Assembly	Change of Blue Point	01. 03	01-001A-2350	Only KM-235A
30	B-1-3	02-001A-235A	Main Shaft	Change of Blue Point	01. 03	02-001A-2350	Only KM-235A
31	B-30-1	08-001A-250A	Take-up Lever Ass'y	Change of Blue Point	01. 03	08-003A-123A	Only KM-235A
32	B-34-1	04-005A-2500	Sliding Block	Change of Blue Point	01. 03	04-006A-1230	Only KM-235A
33	B-25-1	02-010A-235A	Counterweight	Change of Blue Point	01. 03	02-002A-250A	Only KM-235A
34	B-50	08-006C-2500	Protection Plate	Change of Blue Point	01. 03		
35	A-1-2	01-001A-235A	Arm Bed Assembly	Change of Blue Point	01. 09		01. 3/4
36	A-8	SC-0120-1230	Screw(9/64" n = 40)	Substitution	01. 09	SC-0120-2118	01. 3/4
37	A-9-1	SC-0174-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0179-4125	01. 3/4
38	A-9-2	SC-0174-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-179-4125	01. 3/4
39	A-11-1	SC-A174-4122	Screw(11/64" n = 40)	Substitution	01. 09	SC-0175-4522	01. 3/4
40	A-11-2	SC-A174-4122	Screw(11/64" n = 40)	Substitution	01. 09	SC-0174-4122	01. 3/4

NOTE)

수정 리스트 Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
41	A-13	SC-0120-1230	Screw(9/64" n = 40)	Substitution	01. 09	SC-0120-2118	01. 3/4
42	A-15	40-114A-1230	Tension Complete	Substitution	01. 09	40-004A-1230	01. 3/4
43	A-18	SC-0114-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0114-4515	01. 3/4
44	A-19	01-127A-1230	Thread Guide With Three Holes	Substitution	01. 09	01-027A-1230	01. 3/4
45	A-21	SC-0104-5607	Screw(11/64" n = 40)	Substitution	01. 09	SC-0104-4517	01. 3/4
46	A-26	SC-0174-1230	Screw For A-23	Substitution	01. 09	01-023S-1230	01. 3/4
47	A-48	SN-0112-1230	Nut(M8×1.25)	Substitution	01. 09	SN-0112-4000	01. 3/4
48	A-49	SC-0346-2350	Screw(M8×1.25)	Substitution	01. 09	SC-0346-4113	01. 3/4
49	A-51	SC-0199-2700	Screw(11/64" n = 40)	Substitution	01. 09	SC-0199-4118	01. 3/4
50	A-53	SC-0365-3710	Screw(9/64" n = 40)	Substitution	01. 09	SC-0365-4118	01. 3/4
51	A-55	SC-0365-3710	Screw(9/64" n = 40)	Substitution	01. 09	SC-0365-4118	01. 3/4
52	A-57	SC-0365-3710	Screw(9/64" n = 40)	Substitution	01. 09	SC-0365-4118	01. 3/4
53	B-1-1	02-101A-1370	Main Shaft	Substitution	01. 09	02-001A-1370	01. 3/4
54	B-1-2	02-101A-2350	Main Shaft	Substitution	01. 09	02-001A-2350	01. 3/4
55	B-1-3	02-101A-235A	Main Shaft	Substitution	01. 09	02-001A-235A	01. 3/4
56	B-10	SC-0201-1230	Screw(5/16" n = 24)	Substitution	01. 09	02-011R-1230	01. 3/4
57	B-11	02-125A-1230	Main Shaft Front Bushing	Substitution	01. 09	02-025A-1230	01. 3/4
58	B-11-1	02-104A-250A	Main Shaft Front Bushing	Substitution	01. 09	02-004A-250A	01. 3/4
59	B-12	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0507-4515	01. 3/4
60	B-13	02-126A-1230	Main Shaft Center Bushing	Substitution	01. 09	02-026A-1230	01. 3/4
61	B-14	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0507-4515	01. 3/4
62	B-15	02-121A-1230	Main Shaft Collar	Substitution	01. 09	02-021A-1230	01. 3/4
63	B-20	SC-0114-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0507-4515	01. 3/4
64	B-23	SC-0150-2500	Screw(15/64" n = 40)	Substitution	01. 09	SC-0150-4122	01. 3/4
65	B-24	SC-0188-1230	Screw(5/16" n = 28)	Substitution	01. 09	SC-0188-4124	01. 3/4
66	B-25	02-110A-235A	Counterweight	Substitution	01. 09	02-010A-235A	01. 3/4
67	B-25-1	02-102A-250A	Counterweight	Substitution	01. 09	02-002A-250A	01. 3/4
68	B-26	02-101A-1230	Counterweight	Substitution	01. 09	02-001A-1230	01. 3/4
69	B-28	SC-0504-1230	Screw(1/4" n = 40)	Substitution	01. 09	SC-0504-4515	01. 3/4
70	B-29	SC-0123-1230	Screw(9/32" n = 28)	Substitution	01. 09	SC-0123-4422	01. 3/4
71	B-32	SC-0507-1230	Screw(15/16" n = 28)	Substitution	01. 09	SC-0507-4515	01. 3/4
72	B-37-1	04-108A-2350	Needle Bar Upper Bushing	Substitution	01. 09	04-008A-1230	01. 3/4
73	B-37-2	04-108A-2350	Needle Bar Upper Bushing	Substitution	01. 09	04-108A-2350	01. 3/4
74	B-38	SC-0110-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0110-4115	01. 3/4
75	B-39	04-109A-235A	Needle Bar Lower Bushing	Substitution	01. 09	04-009A-235A	01. 3/4
76	B-49	SC-0109-2350	Screw(M6×1.0)	Substitution	01. 09	SC-0109-4113	01. 3/4
77	C-7	SC-0114-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0114-4515	01. 3/4
78	C-9	SC-0361-1230	Screw(3/16" n = 32)	Substitution	01. 09	SC-0361-4122	01. 3/4
79	C-12-1	SC-0512-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0542-4515	01. 3/4
80	C-12-2	SC-0512-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0104-4517	01. 3/4

NOTE)

수정 리스트 Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
81	C-14	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0507-4515	01. 3/4
82	C-19	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0507-4515	01. 3/4
83	C-21	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0507-4515	01. 3/4
84	C-32	SC-A174-4122	Screw(11/64" n = 40)	Substitution	01. 09	SC-0174-4122	01. 3/4
85	D-3	SC-0114-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0114-4515	01. 3/4
86	D-6	SC-0114-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0114-4515	01. 3/4
87	D-9	SC-0307-1230	Screw(3/16" n = 32)	Substitution	01. 09	SC-0307-4122	01. 3/4
88	D-11	SC-0133-1230	Screw(1/8" n = 44)	Substitution	01. 09	SC-0133-4122	01. 3/4
89	D-15	SC-0122-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0122-4522	01. 3/4
90	D-19	SC-0130-1230	Screw(1/8" n = 44)	Substitution	01. 09	SC-0130-4122	01. 3/4
91	D-22	SC-0497-1230	Screw(3/16" n = 28)	Substitution	01. 09	06-119S-1230	01. 3/4
92	D-24	SC-0496-3710	Screw(11/64" n = 40)	Substitution	01. 09	SC-0496-4122	01. 3/4
93	D-30-1	SC-0509-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0509-4515	01. 3/4
94	D-30-2	SC-0504-1230	Screw(1/4" n = 40)	Substitution	01. 09	SC-0504-4515	01. 3/4
95	D-33	SC-0175-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0175-4522	01. 3/4
96	D-35	SC-0175-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0175-4522	01. 3/4
97	D-38	SC-0114-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0114-4515	01. 3/4
98	D-41	SC-0114-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0114-4515	01. 3/4
99	D-49	SC-0175-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0175-4522	01. 3/4
100	D-55	SC-0109-2350	Screw(M6 × 1.0)	Substitution	01. 09	SC-0109-4113	01. 3/4
101	D-58	SC-0166-2350	Screw(M5 × 0.8)	Substitution	01. 09	SC-0166-4119	01. 3/4
102	D-66	SC-0496-370	Screw(11/64" n = 40)	Substitution	01. 09	SC-0496-4122	01. 3/4
103	D-69	SC-0129-7400	Screw(1/4" n = 40)	Substitution	01. 09	SC-0129-4515	01. 3/4
104	D-73	SC-0504-1230	Screw(1/4" n = 40)	Substitution	01. 09	SC-0504-4515	01. 3/4
105	D-80-1	SC-0174-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0174-4122	01. 3/4
106	D-80-2	SC-0174-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0174-4122	01. 3/4
107	D-83	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0507-4515	01. 3/4
108	D-90	SC-0193-1230	Screw(3/16" n = 28)	Substitution	01. 09	SC-0193-4122	01. 3/4
109	D-95	SC-0184-1600	Screw(3/16" n = 28)	Substitution	01. 09	SC-0184-4118	01. 3/4
110	D-96	SC-0174-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0174-4122	01. 3/4
111	D-101	SC-0186-1230	Screw(3/16" n = 32)	Substitution	01. 09	SC-0186-4118	01. 3/4
112	D-102	SC-0185-1230	Screw(3/16" n = 32)	Substitution	01. 09	SC-0185-4124	01. 3/4
113	D-104	SC-0199-2700	Screw(11/64" n = 40)	Substitution	01. 09	SC-0199-4118	01. 3/4
114	D-106-1	SC-0497-1230	Screw(3/16" n = 28)	Substitution	01. 09	SC-0497-4122	01. 3/4
115	D-106-2	SC-0307-1230	Screw(3/16" n = 28)	Substitution	01. 09	SC-0307-4122	01. 3/4
116	D-109	SN-0101-1600	Screw(11/64" n = 40)	Substitution	01. 09	SN-0101-4000	01. 3/4
117	E-10	SC-0339-1230	Screw(9/16" n = 20)	Substitution	01. 09	SC-0339-4125	01. 3/4
118	E-17	SC-0498-3710	Screw(11/64" n = 40)	Substitution	01. 09	SC-0498-4122	01. 3/4
119	E-18	SC-0531-2302	Screw(9/64" n = 40)	Substitution	01. 09	SC-0531-4125	01. 3/4
120	E-20	SC-0528-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0528-4125	01. 3/4

NOTE)

수정 리스트 Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
121	E-25	SC-0499-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0499-4515	01. 3/4
122	E-34	SC-0506-1600	Nut(9/64" n = 40)	Substitution	01. 09	SC-0506-2111	01. 3/4
123	E-41	SN-0115-7400	Screw(3/16" n = 32)	Substitution	01. 09	SN-0115-4000	01. 3/4
124	E-47	SN-0115-7400	Screw(3/16" n = 32)	Substitution	01. 09	SN-0115-4000	01. 3/4
125	E-60	SC-0173-1230	Screw(3/16" n = 32)	Substitution	01. 09	SC-0173-4118	01. 3/4
126	F-3	SC-0137-2700	Screw(1/8" n = 40)	Substitution	01. 09	SC-0137-4222	01. 3/4
127	F-4	SN-0103-2700	Screw(1/8" n = 40)	Substitution	01. 09	SN-0103-4000	01. 3/4
128	F-6	SC-0199-2700	Screw(11/64" n = 40)	Substitution	01. 09	SC-0199-4118	01. 3/4
129	F-16	SN-0101-1600	Screw(11/64" n = 40)	Substitution	01. 09	SN-0101-4000	01. 3/4
130	F-19	SC-0183-2700	Screw(15/64" n = 28)	Substitution	01. 09	SC-0183-4122	01. 3/4
131	F-22	SC-0317-2700	Screw(15/64" n = 28)	Substitution	01. 09	SC-0317-4517	01. 3/4
132	F-25	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0507-4515	01. 3/4
133	F-33	SC-0324-2700	Screw(1/4" n = 40)	Substitution	01. 09	SC-0324-4113	01. 3/4
134	F-37	SC-0190-2700	Screw(3/16" n = 32)	Substitution	01. 09	SC-0190-4111	01. 3/4
135	F-43	SC-0173-1230	Screw(3/16" n = 32)	Substitution	01. 09	SC-0173-4118	01. 3/4
136	F-56	SC-0508-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0508-4515	01. 3/4
137	G-18	SC-0336-2350	Screw(1/8" n = 44)	Substitution	01. 09	SC-0336-4125	01. 3/4
138	G-20	SC-0337-2700	Screw(M2×0.4)	Substitution	01. 09	SC-0337-4125	01. 3/4
139	H-3	SC-0130-1230	Screw(1/8" n = 44)	Substitution	01. 09	SC-0130-4122	01. 3/4
140	H-5	SC-0174-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0174-4122	01. 3/4
141	H-13	SC-0173-1230	Screw(3/16" n = 32)	Substitution	01. 09	SC-0173-4118	01. 3/4
142	H-20	SC-0196-2700	Screw(M3×0.5)	Substitution	01. 09	SC-0196-4118	01. 3/4
143	H-21	SC-0175-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0175-4522	01. 3/4
144	H-23	SC-0199-2700	Screw(11/64" n = 40)	Substitution	01. 09	SC-0199-4118	01. 3/4
145	I-1-3	SC-0528-1230	Screw(9/64" n = 40)	Substitution	01. 09	SC-0528-4125	01. 3/4
146	I-1-14	SC-0120-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0120-2118	01. 3/4
147	I-10-16	SC-0512-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0512-4515	01. 3/4
148	I-2	SC-0548-7400	Screw(3/16" n = 28)	Substitution	01. 09	SC-0192-4122	01. 3/4
149	I-5	SC-0512-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0512-4515	01. 3/4
150	I-10	SC-0176-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0176-4118	01. 3/4
151	I-12	SC-0174-1230	Screw(11/64" n = 40)	Substitution	01. 09	SC-0174-4122	01. 3/4
152	J-25-8	SC-0448-3710	Screw(11/64" n = 40)	Substitution	01. 09	SC-0498-4122	01. 3/4
153	J-25-9	SC-0543-2302	Screw(11/64" n = 40)	Substitution	01. 09	SC-0543-4525	01. 3/4
154	J-30	SC-0347-1230	Screw(M8×1.25)	Substitution	01. 09	SC-0347-4122	01. 3/4
155	J-33	SC-0509-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0509-4515	01. 3/4
156	J-34-7	SC-0181-1230	Screw(5/16" n = 18)	Substitution	01. 09	SC-0181-4116	01. 3/4
157	J-38	SC-0106-7400	Screw(15/64" n = 28)	Substitution	01. 09	SC-0106-4111	01. 3/4
158	J-39	SC-0545-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0546-4518	01. 3/4
159	J-40	SC-0546-1230	Screw(15/64" n = 28)	Substitution	01. 09	SC-0546-4518	01. 3/4
160	J-41	SN-0105-3400	Nut(15/64" n = 28)			SN-0105-3400	01. 3/4

NOTE)

수정 리스트 Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
161	C-29-1	07-106A-123A	Bobbin Case Ass'y	Substitution	01. 11	07-006A-123A	01. 3/4
162	C-29-2	07-104A-2700	Bobbin Case Ass'y	Substitution	01. 11	07-004A-2700	01. 3/4
163	B-17-2		Main Shaft Gear	Deleted Parts	01. 11	02-211A-1230	01. 3/4
164	C-15-2		Low Shaft Gear	Deleted Parts	01. 11	02-212A-1330	01. 3/4
165	C-22-1		Upright Shaft Upper Gear	Deleted Parts	01. 11	02-213A-1230	01. 3/4
166	C-24-2		Upright Shaft Lower Gear	Deleted Parts	01. 11	02-214A-1230	01. 3/4
167	F-8	10-106A-235B	Rotary Mes	Substitution	01. 11	10-006A-235B	01. 3/4
168	D-16	06-107A-123A	Feed Dog(P = 1.6)	Substitution	01. 11	06-007A-123A	01. 3/4
169	D-17	06-107A-123B	Feed Dog(P = 2.1)	Substitution	01. 11	06-007A-123B	01. 3/4
170	D-18	06-107A-235A	Feed Dog	Substitution	01. 11	06-007A-235A	01. 3/4
171	A-1-1	01-001A-235B	Arm Bed Ass'y	Substitution	01. 12	01-001A-2350	01. 4/4
172	B-46-1	12-5000-SC53	Synchronizer Ass'y(Servo)	Substitution	01. 12	11-5000-SC53	01. 4/4
173	B-46-2	12-0000-4701	Synchronizer Ass'y(NP)	Substitution	01. 12	12-0000-4701	01. 4/4
174	D-86	06-026P-1230	Dial Pin	Substitution	01. 12	06-026P-2350	01. 4/4
175	B-10	SC-0201-2800	Screw	Substitution	01. 12	SC-0210-1230	02. 1/4
176	E-14	SC-0157-1230	Screw	Substitution	02. 04	SC-0157-2118	02. 1/4
177	F-48	01-112A-2350	Bobbin Presser bar	Substitution	02. 04	01-012A-2350	02. 1/4
178	G-16	12-107A-2350	Reverse Button Switch	Substitution	02. 04	12-007A-2350	02. 1/4
179	G-21		Cable for G-16, 19	Deleted	02. 04	12-017M-2350	02. 1/4
180	A-39	01-434A-1230	Slide Plate Ass'y	Substitution	02. 05	01-034A-1230	02. 1/4
181	A-40	01-335A-123A	Needle Plate	Substitution	02. 05	01-035A-123A	02. 2/4
182	A-41	01-335A-123B	Needle Plate	Substitution	02. 05	01-035A-123B	02. 2/4
183	A-42	01-135A-235A	Needle Plate (AL-Type)	Substitution	02. 05	01-035A-235A	02. 2/4
184	D-12	06-215A-2350	Feed Bar	Substitution	02. 05	06-015A-2350	02. 2/4
185	D-45	06-138A-235A	Rear Crank For D-36	Substitution	02. 05	06-038A-235A	02. 2/4
186	D-46	06-141A-235A	Rear Crank For D-36	Substitution	02. 05	06-041A-235A	02. 2/4
187	D-91-1	06-146A-1230	Feed Regulator Arm	Substitution	02. 05	06-046A-1230	02. 2/4
188	E-14	SC-0157-1230	Screw(9/64" n = 20)	Substitution	02. 05	SC-0157-2118	02. 2/4
189	D-105-1	06-125C-1230	Retainer Plate A for D-107-1	Substitution	02. 06	06-025C-1230	02. 2/4
190	D-105-2	06-135C-2350	Upper Spring Holder For D-107-2	Substitution	02. 06	06-035C-2350	02. 2/4
191	E-26	05-109A-1600	Knee Lifter Plate	Substitution	02. 06	05-009A-1600	02. 2/4
192	E-38	43-112A-2350	Knee Lifting Link	Substitution	02. 06	43-012A-2350	02. 2/4
193	E-59	40-107C-2700	Cable Clip(A)	Substitution	02. 06	40-007C-2700	02. 2/4
194	F-14	10-112A-2700	Connecting Link	Substitution	02. 06	10-012A-2700	02. 2/4
195	F-50	01-114C-2350	Holder For F-48, 49	Substitution	02. 06	01-014C-2350	02. 2/4
196	F-52	01-105A-2350	Bed Leg Rear	Substitution	02. 06	01-005A-2350	02. 2/4
197	H-17	11-114A-2700	Solenoid Bracket	Substitution	02. 06	11-014A-2700	02. 2/4
198	H-22	11-121A-2700	Cover For H-17	Substitution	02. 06	11-021A-2700	02. 2/4
199	I-1-11	44-104C-2350	Oil Pump Cover	Substitution	02. 06	44-004C-2350	02. 2/4
200	I-1-13	44-105C-2350	Magnet Holder	Substitution	02. 06	44-005C-2350	02. 2/4

NOTE)


수정 리스트 Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
201	I-1-14	44-120S-1230	Screw(11/64" n = 40)	Substitution	02. 06	44-0120-1230	02. 2/4
202	I-9	44-117A-1600	Holder For I-7	Substitution	02. 06	44-017A-1600	02. 2/4
203	I-11	44-120A-1600	Oil Shield	Substitution	02. 06	44-020A-1600	02. 2/4
204	J-14	01-135A-235A	Needle Plate(AL-Type)	Substitution	02. 06	01-035A-235A	02. 2/4
205	J-46	91-105C-2700	Box Spanner	Substitution	02. 06	91-005C-2700	02. 2/4
206	I-1-17	44-101A-2350	Oil Pump Bracket	Substitution	02. 11	44-001A-2350	02. 4/4
207	I-1-6	44-126A-1230	Impeller	Substitution	03. 03	44-026A-1230	03. 1/4
208	B-36	04-101A-235B	Needle Bar	Substitution	03. 06	04-001A-235B	03. 2/4
209	B-35	04-101A-235A	Needle Bar	Substitution	03. 06	04-001A-235A	03. 2/4
210	C-13	07-102A-1600	Lower Shaft Rear Bushing	Substitution	03. 06	07-010A-1230	03. 2/4
211	J-9	91-102C-1230	Driver(L)	Substitution	03. 06	91-002C-1230	03. 2/4
212	J-10	91-103C-1230	Driver(S, M)	Substitution	03. 06	91-003C-1230	03. 2/4
213	A-9-1	SC-0179-3710	Screw(11/64" n = 40)	Substitution	03. 09	SC-0174-1230	03. 3/4
214	A-9-2	SC-0179-3710	Screw(11/64" n = 40)	Substitution	03. 09	SC-0174-1230	03. 3/4
215	A-11-1	01-0543-2302	Screw(11/64" n = 40)	Substitution	03. 09	SC-A174-4122	03. 3/4
216	A-26	SC-023S-1230	Screw For Top Cover	Substitution	03. 09	SC-0174-1230	03. 3/4
217	B-46-1	11-0000-SE55	Synchronizer Ass'y(Servo-3)	Substitution	03. 09	12-5000-SC53	03. 3/4
218	C-12-1	SC-0104-5607	Screw(11/64" n = 40)	Substitution	03. 09	SC-0512-1230	03. 3/4
219	C-12-2	SC-0104-5607	Screw(11/64" n = 40)	Substitution	03. 09	SC-0512-1230	03. 3/4
220	D-22	01-119S-1230	Screw(3/16" n = 28)	Substitution	03. 09	SC-0497-1230	03. 3/4
221	D-30-1	SC-0507-1230	Screw(15/64" n = 28)	Substitution	03. 09	SC-0509-1230	03. 3/4
222	D-78-2	SC-A129-4515	Screw(1/4" n = 40)	Substitution	03. 09	SC-A308-4517	03. 3/4
223	D-80-1	SC-A174-4122	Screw(11/64" n = 40)	Substitution	03. 09	SC-0174-1230	03. 3/4
224	D-80-2	SC-A174-4122	Screw(11/64" n = 40)	Substitution	03. 09	SC-0174-1230	03. 3/4
225	D-104	SC-0199-2700	Screw(11/64" n = 40)	Substitution	03. 09	SC-0120-1230	03. 3/4
226	D-106-1	06-119S-1230	Screw(3/16" n = 28)	Substitution	03. 09	SC-0497-1230	03. 3/4
227	E-18	SC-0502-2302	Screw(9/64" n = 40)	Substitution	03. 09	SC-0531-2302	03. 3/4
228	E-25	SC-0104-5607	Screw(11/64" n = 40)	Substitution	03. 09	SC-0499-1230	03. 3/4
229	E-55	SC-0164-2700	Screw(M5)	Substitution	03. 09	SC-0164-4517	03. 3/4
230	H-7	SC-A104-4517	Screw(11/64-40-5)	Substitution	03. 09	SC-0105-4517	03. 3/4
231	H-23	SC-0120-1230	Screw(9/64" n = 40)	Substitution	03. 09	SC-0199-2700	03. 3/4
232	I-10	SC-0175-1230	Screw(11/64" n = 40)	Substitution	03. 09	SC-0176-1230	03. 3/4
233	I-12	SC-0176-1230	Screw(11/64" n = 40)	Substitution	03. 09	SC-0174-1230	03. 3/4
234							
235							
236							
237							
238							
239							
240							

NOTE)

Feed Mechanism

피이드 관계

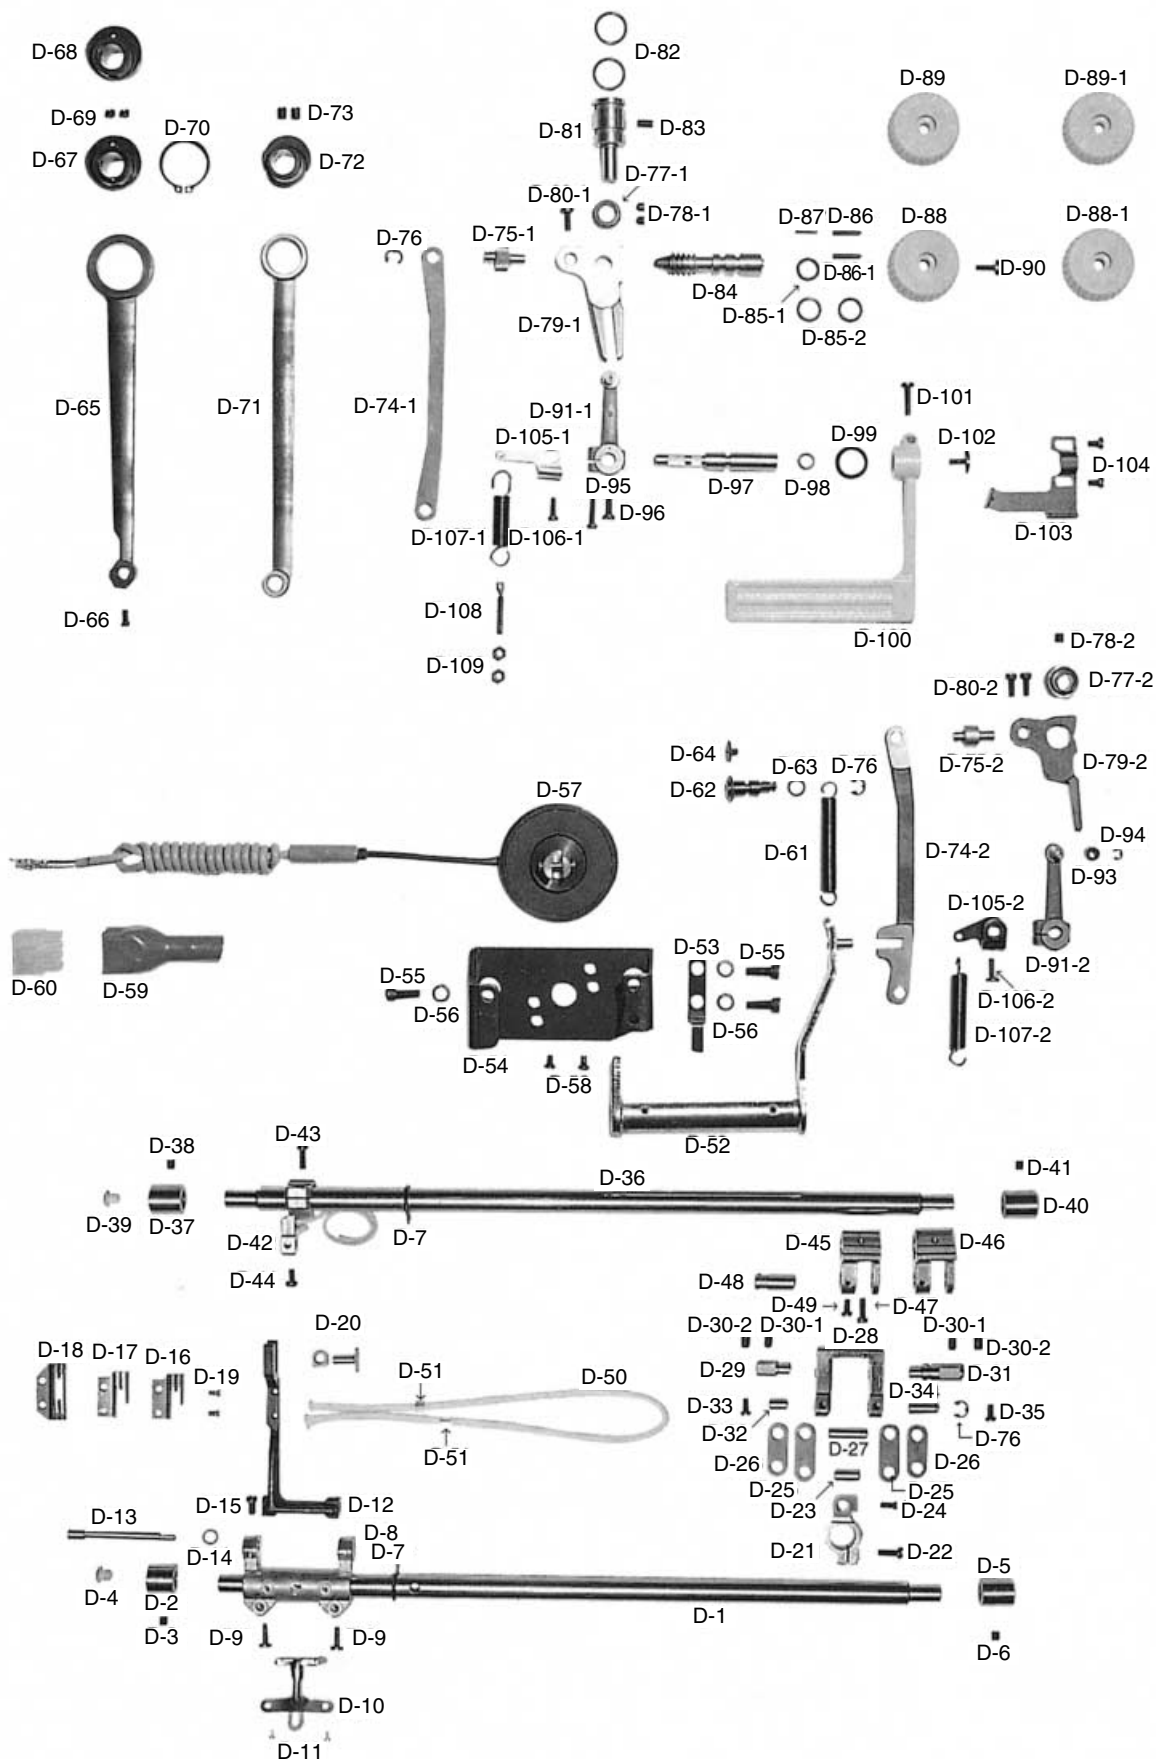


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q' ty	Assembly No.
D-1	06-012A-2350		Feed Roker Shaft	수평 밀대	1	
D-2	06-013A-2350		Bushing(Front) For D-1	수평 밀대 전 붓싱	1	
D-3	SC-0114-1230	A, B	Screw(15/64" n=28)	피드캠 고정나사	1	
D-4	01-037R-1230		Rubber Cap For D-1	들밀대 유심마개	1	
D-5	06-040A-1230		Rear Bushing For D-1	들대 붓싱(후)	1	
D-6	SC-0114-1230		Screw(15/64" n=28)	피드캠 고정나사(15/64" n=28)	1	
D-7	06-021R-1230		Rubber Flange	들밀대 고무마개	2	
D-8	06-008A-2350		Feed Rocker	톱니 받침 크랭크	1	
D-9	SC-0307-1230		Screw(3/16" n=32)	톱니 받침 크랭크 쥘나사(3/16" n=32)	2	
D-10	44-009C-1230		Retainer Plate For Oil Wick	심지 지지대	1	
D-11	SC-0133-1230		Screw(1/8" n=44)	심지 지지대 나사(1/8" n=44)	2	
D-12	06-215A-2350		Feed Bar	톱니 받침	1	
D-13	06-014A-2350		Feed Bar Shaft	톱니 받침 축	1	
D-14	06-002W-2350		Washer For D-13	톱니 받침 축 와셔	1	
D-15	SC-0122-1230		Screw(15/64" n=28)	톱니 받침 축 고정나사(15/64" n=28)	1	
D-16	06-107A-123A	A, A-1	Feed Dog	톱니	1	
D-17	06-107A-123B	B, B-1	Feed Dog	톱니	1	
D-18	06-107A-235A		Feed Dog(AL-Type)	톱니(박물용)	1	
D-19	SC-0130-1230		Screw(1/8" n=44)	톱니 쥘나사(1/8" n=44)	2	
D-20	06-117A-1230		Sliding Block and Shaft For D-12	톱니 받침 블럭	1	
D-21	06-011A-2350		Crank(Rear) For D-1	수평 밀대 크랭크(후)	1	
D-22	06-119S-1230		Screw(3/16" n=28)	들대 크랭크(전) 쥘나사(3/16" n=28)	1	
D-23	06-004P-2350		Pin(A) For D-25	피이드 연결 링크 핀(A)	1	
D-24	SC-0496-3710		Screw(11/64" n=40)	하측 뿔 붓싱 쥘나사(11/64" n=40)	1	
D-25	06-105A-2350		Feed Connecting Link(A)	피이드 연결 링크(A)	2	
D-26	06-106A-2350		Feed Connecting Link(B)	피이드 연결 링크(B)	2	
D-27	06-009P-2350		Pin(B) For D-25, 26	피이드 연결 링크 핀(B)	1	
D-28	06-003A-2350		Feed Regulation Link	피이드 조절 링크	1	
D-29	06-008P-2350		Hinge Pin(B) For D-28	피이드 조절 링크 힌지 핀(B)	1	
D-30-1	SC-0507-1230	A, B	Screw(15/64" n=28)	상측 붓싱 고정나사(15/64" n=28)	2	
D-30-2	SC-0504-1230	A-1, B-1	Screw(1/4" n=40)	실채기 핀 고정나사(1/4" n=40)	2	
D-31	06-007P-2350		Hinge Pin(A) For D-28	피이드 조절 링크 힌지 핀(A)	1	
D-32	06-010P-2350		Pin(C) For D-26	피이드 연결 링크 핀(C)	1	
D-33	SC-0175-1230		Screw(11/64" n=40)	와이 룯드 보강판 나사(11/64" n=40)	1	
D-34	06-023P-2350		Hinge Pin For D-74	피이드 조절 연결 룯드 힌지 핀	1	
D-35	SC-0175-1230		Screw(11/64" n=40)	와이 룯드 보강판 나사(11/64" n=40)	1	
D-36	06-016A-2350		Feed Lifting Shaft	들대	1	
D-37	06-039A-1230		Front Bushing For D-36	들대 붓싱(전)	1	
D-38	SC-0114-1230		Screw(15/64" n=28)	새드캠 고정나사(15/64" n=28)	1	
D-39	01-037R-1230		Rubber Cap For D-36	들밀대 유심마개	1	
D-40	06-040A-1230		Rear Bushing For D-36	들대 붓싱(후)	1	
D-41	SC-0114-1230		Screw(15/64" n=28)	피드 캠 고정나사(15/64" n=28)	1	
D-42	06-128A-2350		Feed Lifting Bell Arm	들대 크랭크(전)	1	
D-43	06-119S-1230		Screw(3/16" n=28)	들대 크랭크(전) 고정나사(3/16" n=28)	1	
D-44	06-020S-1230		Screw(3/16" n=32)	톱니 받침 블럭 고정나사 (3/16" n=32)	1	
D-45	06-138A-235A	A, A-1	Rear Crank For D-36	들대 크랭크(후)	1	
D-46	06-141A-235B	B, B-1	Rear Crank For D-36	들대 크랭크(후)	1	
D-47	06-119S-1230		Screw(3/16" n=28)	들대 크랭크(전) 고정나사	1	
D-48	06-037P-1230		Hinge Pin For D-45, 46	들밀대 크랭크 핀	1	
D-49	SC-0175-1230		Screw(11/64" n=40)	와이 룯드 보강판 나사(11/64" n=40)	1	
D-50	44-0000-1230		Oil Wick	오일 심지	1	
D-51	44-029M-1230		Holder For Oil Wick	오일 심지 스톱퍼	2	
D-52	06-050A-2350	A-1, B-1	Crank Ass'y For B/T Solenoid	역진 솔레노이드 크랭크(조)	1	
D-53	06-044A-2350	A-1, B-1	Stopper For D-52	스톱퍼	1	
D-54	06-045A-2350	A-1, B-1	Bracket For D-57	역진 솔레노이드 브라켓	1	
D-55	SC-0109-2350	A-1, B-1	Screw(M6×1.0)	B/T 솔레노이드 브라켓 쥘나사(M6×1.0)	3	
D-56	01-020W-2350	A-1, B-1	Spring Washer For D-55	싱크로 베이스 스프링 와셔	3	
D-57	06-048A-235A	A-1, B-1	Backtack Solenoid Ass'y	역진 솔레노이드(조) Servo	1	
D-58	SC-0166-2350	A-1, B-1	Screw(M5×0.8)	역진 솔레노이드 부속 나사(M5×0.8)	2	
D-59	11-019M-2350	A-1, B-1	Tube For D-57	솔레노이드 튜브	1	
D-60	11-018M-2350	A-1, B-1	Plug For D-57	솔레노이드 플러그	1	
D-61	06-031G-2350	A-1, B-1	Feed Regulating Spring	피이드 조절 룯드 스프링	1	

NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B

Feed Mechanism 피이드 관계

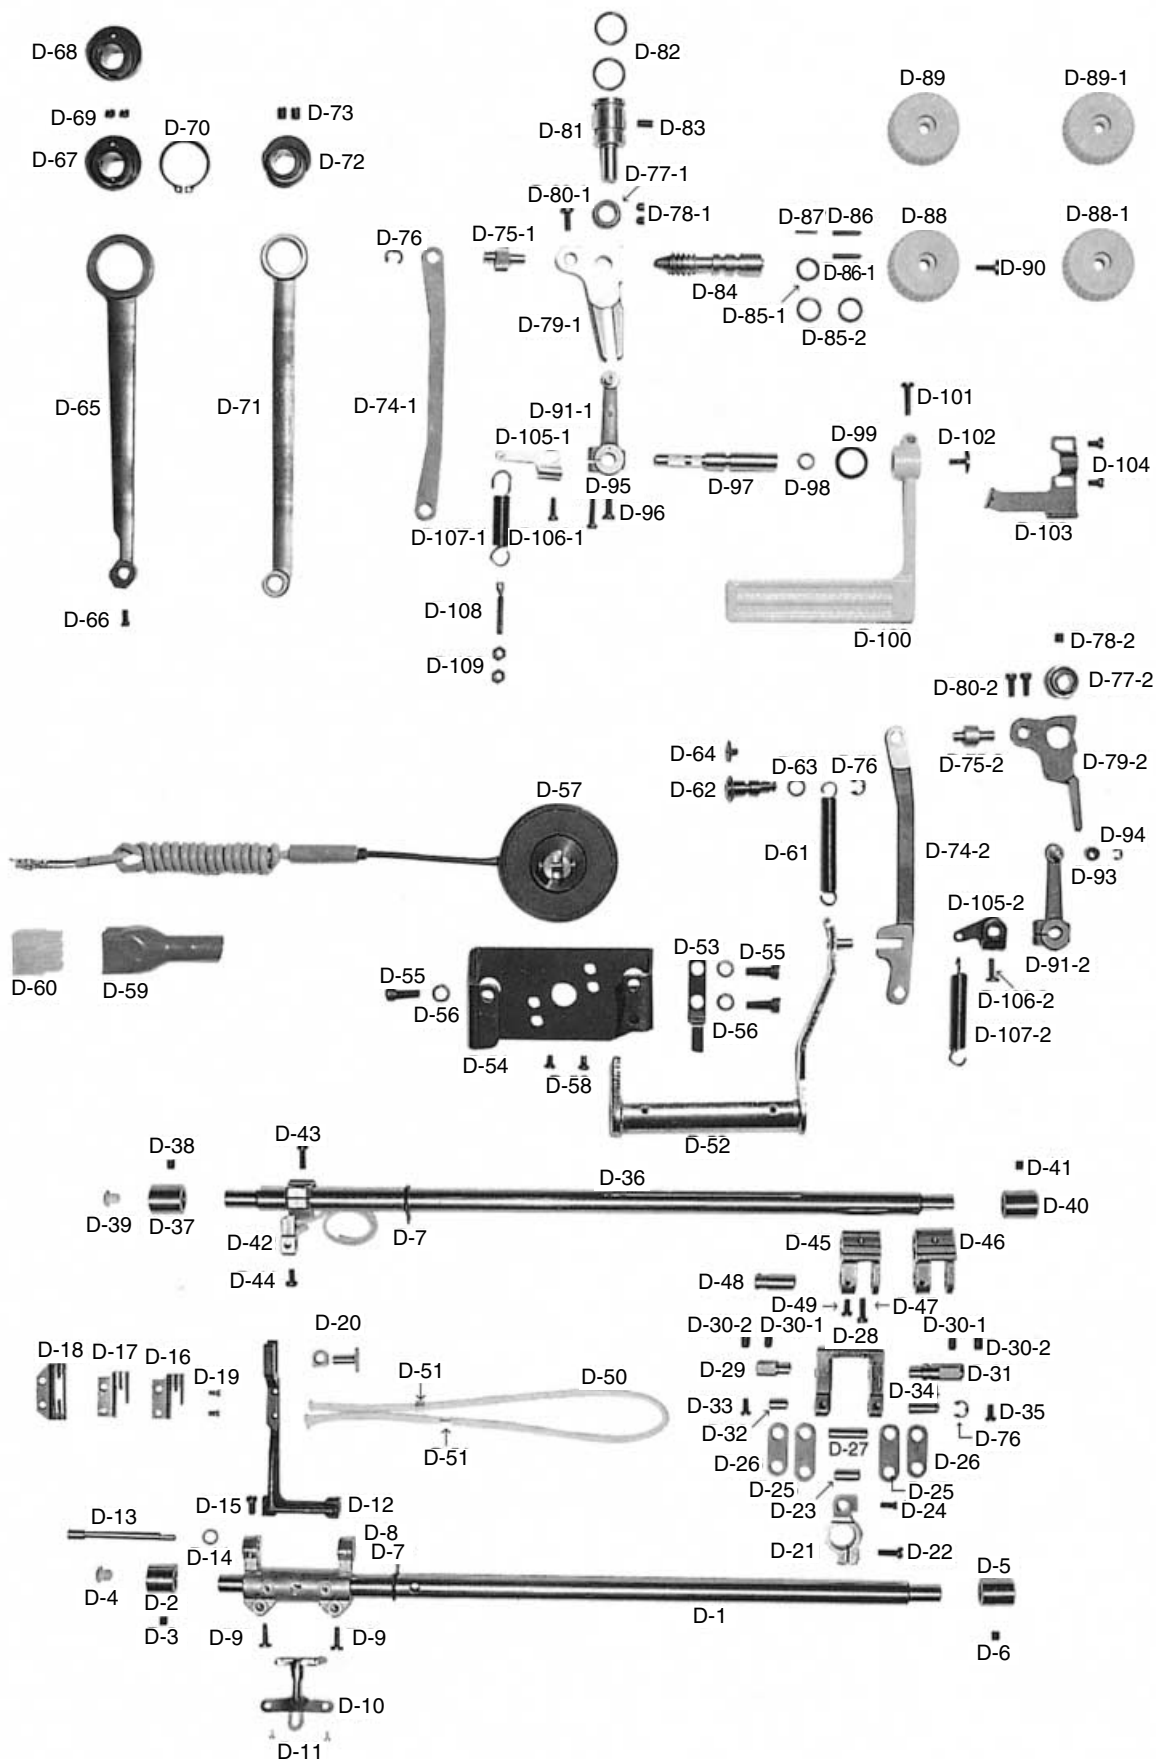


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q' ty	Assembly No.
D-62	06-029A-2350	A-1, B-1	Holder For D-61	피이드 조절 로드 스프링 걸이	1	
D-63	06-051R-1600	A-1, B-1	O-Ring	역진 레버축 오링	1	
D-64	SC-0316-4124	A-1, B-1	Screw(11/64" n=40)	S/P 걸이 위치 고정나사(11/64" n=40)	1	
D-65	06-003A-2500		Feed Rocker Shaft Connecting Rod	수평 이 로드	1	
D-66	SC-0496-370		Screw(11/64" n=40)	하측뿔 B/S 쥘나사(11/64" n=40)	1	
D-67	06-001A-235A	A, A-1	Feed Cam(A)	피이드 캠(A)	1	
D-68	06-001A-235B	B, B-1	Feed Cam(B)	피이드 캠(B)	1	
D-69	SC-0129-7400		Screw(1/4" n=40)	기어나사(5-16) (1/4" n=40)	2	
D-70	06-103C-235B		Stopper C-Ring	스냅링(φ 28)	1	
D-71	06-054A-1230		Crank Rod Complete	크랭크 로드	1	
D-72	06-211A-2350		Feed Cam(C)	피이드 캠(C)	1	
D-73	SC-0504-1230		Screw(1/4" n=40)	실채기 핀 고정나사(1/4" n=40)	2	
D-74-1	06-022A-1370	A, B	Feed Regulating Rod	피이드 조절기 로드	1	
D-74-2	06-022A-2350	A-1, B-1	Feed Regulating Rod	피이드 조절기 로드	1	
D-75-1	06-221A-2350	A, B	Feed Adjusting Shaft	피이드 조절축	1	
D-75-2	06-221A-2350	A-1, B-1	Feed Adjusting Shaft	피이드 조절축	1	
D-76	04-009C-3710		E-Ring For D-75	E-링(φ 5)	3	
D-77-1	06-020A-2350	A, B	Collar For D-75-1	피이드 조절기 축 카라	1	
D-77-2	06-020A-2350	A-1, B-1	Collar For D-75-2	피이드 조절기 축 카라	1	
D-78-1	SC-A129-4515	A, B	Screw(1/4" n=40)	홈볼이 멈춤나사(1/4" n=40)	2	
D-78-2	SC-A129-4515	A-1, B-1	Screw(1/4" n=40)	홈볼이 멈춤나사(1/4" n=40)	1	
D-79-1	06-119A-1370	A, B	Feed Regulating	피이드 조절기	1	
D-79-2	06-119A-2350	A-1, B-1	Feed Regulating	피이드 조절기(235)	1	
D-80-1	SC-A174-4122	A, B	Screw(11/64" n=40)	홈볼이 납작 작은나사(11/64" n=40)	1	
D-80-2	SC-A174-4122	A-1, B-1	Screw(11/64" n=40)	홈볼이 납작 작은나사(11/64" n=40)	2	
D-81	06-018A-2350		Shaft For D-79	피이드 조절기 축	1	
D-82	06-043R-1230		O-Ring For D-81	피이드 조절기 붓싱 오링	2	
D-83	SC-0507-1230		Screw(15/64" n=28)	상측 B/S 고정나사(15/64" n=28)	1	
D-84	06-137A-1370		Shaft For D-79	피이드 조절 다이알 축	1	
D-85-1	10-042C-2700	A, B	O-ring For D-84	다이알 축 오링	1	
D-85-2	10-042C-2700	A-1, B-1	O-ring For D-84	다이알 축 오링	2	
D-86	06-026P-1230	A, B	Feed Regulator Dial Pin	다이알 핀	1	
D-86-1	06-027P-2350	A-1, B-1	Feed Regulator Dial Pin	다이알 핀	1	
D-87	06-027G-1230		Feed Regulator Dial Spring	다이알 스프링	1	
D-88	06-038C-235A	A	Feed Regulating Dial	다이알 판(조)	1	
D-88-1	06-039C-235A	A-1	Feed Regulating Dial-Insert Type	다이알 판(조)	1	
D-89	06-038C-235B	B	Feed Regulating Dial	다이알 판(조)	1	
D-89-1	06-039C-235B	B-1	Feed Regulating Dial-Insert Type	다이알 판(조)	1	
D-90	SC-0193-1230		Screw(3/16" n=28)	다이알 판 고정나사(3/16" n=28)	1	
D-91-1	06-146A-1230	A, B	Feed Regulator Arm	역진 레버 크랭크(조)	1	
D-91-2	06-046A-2350	A-1, B-1	Feed Regulator Arm	역진 레버 크랭크(조)	1	
D-92	06-034P-2350	A-1, B-1	Pin For D-91-2	역진 레버 크랭크 로올러 핀	1	
D-93	06-055R-2350	A-1, B-1	Roller For D-92	역진 레버 크랭크 로올러 고무	1	
D-94	06-033M-3800	A-1, B-1	E-Ring For D-92	톱니 받침 볼력 E링(φ 3)	1	
D-95	SC-0184-1600		Screw(3/16" n=28)	수평밀대 크랭크 쥘나사(3/16" n=28)	1	
D-96	SC-0174-1230		Screw(11/64" n=40)	가마잡이 나사(11/64" n=40)	1	
D-97	06-032A-2350		Shaft For D-100	역진 레버축	1	
D-98	06-042R-1230		Packing For D-97	레버축 오링	1	
D-99	06-053W-1230		Corrugated Washer For D-100	레버 와셔	1	
D-100	06-033A-2350		Reverse Feed Control Lever	역진 레버	1	
D-101	SC-0186-1230		Screw(3/16" n=32)	역진 레버 고정나사(3/16" n=32)	1	
D-102	SC-0185-1230		Screw(3/16" n=32)	레버 덮개 나사(3/16" n=32)	1	
D-103	01-014A-2350	A-1, B-1	Stopper For D-100	역진 레버 스톱퍼	1	
D-104	SC-0199-2700	A-1, B-1	Screw(11/64" n=40)	솔레노이드 부착 커브 고정나사(11/64" n=40)	2	
D-105-1	06-125C-1230	A, B	Retainer Plate A for D-107-1	레버 스프링 걸이	1	
D-105-2	06-135C-2350	A-1, B-1	Upper Spring Holder For D-107-2	역진 레버 스프링 걸이(상)	1	
D-106-1	SC-119S-1230	A, B	Screw(3/16" n=28)	들레 크랭크 전 고정나사(3/16" n=28)	1	
D-106-2	SC-0307-1230	A-1, B-1	Screw(3/16" n=32)	톱니 받침 크랭크 쥘나사(3/16" n=32)	1	
D-107-1	06-024G-1230	A-1, B-1	Spring For D-100	역진 레버 스프링	1	
D-107-2	06-056G-2350	A, B	Spring For D-100	역진 레버 스프링	1	
D-108	06-040S-1600		Adjusting Screw For D-107	스프링 걸이 축나사	1	
D-109	SN-0101-1600		Nut(11/64" n=40)	S/P 걸이 축 나사 너트(11/64" n=40)	2	

NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B

Press bar & Tension Release Mechanism

누름대 및 실 늦추기 관계

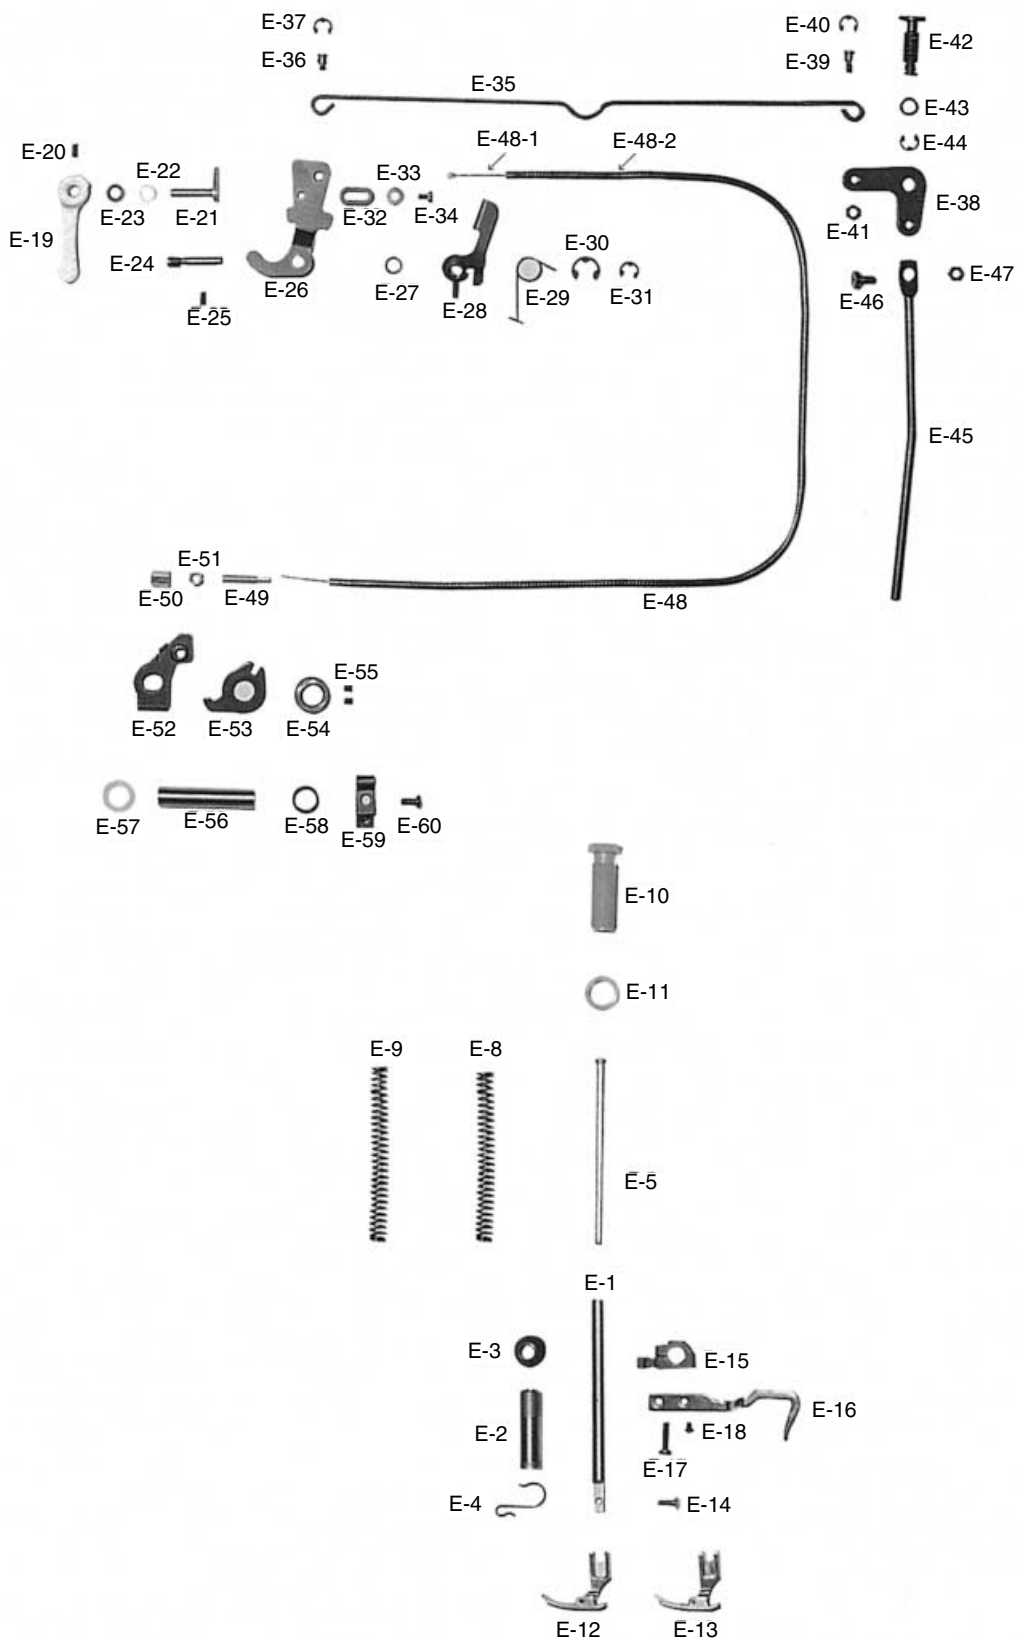


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q' ty	Assembly No.
E-1	05-001A-1230		Presser Bar	누름대	1	
E-2	05-011A-1230		Bushing For E-1	누름대 붓싱	1	
E-3	05-002R-1230		Rubber Cap For E-2	누름대 붓싱 캡	1	
E-4	44-017C-1230		Retainer For Oil Tube	환류 파이프 잡이	1	
E-5	05-007C-1230		Presser Regulator Bar	압력 조절봉	1	
E-6	05-003G-235A	A	Presser Spring Inner	누름대 스프링	1	
E-7	05-003G-235B	B	Presser Spring Inner	누름대 스프링	1	
E-8	05-003G-235A	A-1	Presser Regulation Spring	압력 조절 스프링	1	
E-9	05-003G-235B	B-1	Presser Regulation Spring	압력 조절 스프링	1	
E-10	SC-0339-1230		Screw(9/16" n=20)	압력 조절나사 (9/16" n=20)	1	
E-11	05-002C-2500		Presser Adjusting Nut	압력 조절나사 너트	1	
E-12	05-005A-1600	A, A-1	Hinged Foot Complete	노루발(조)	1	
E-13	05-012A-1230	B, B-1	Hinged Foot Complete	노루발(조)	1	
E-14	SC-0157-1230		Screw(9/64" n=40)	흡플이 냄비 작은나사 (9/64" n=40)	1	
E-15	05-003A-1370		Holder For E-1	누름대 잡이	1	
E-16	01-010A-1600		Thread Guide For Frame	실걸이 판	1	
E-17	SC-0498-3710		Screw(11/64" n=40)	가마잡이 나사(11/64" n=40)	1	
E-18	SC-0502-2302		Screw(9/64" n=40)	윗뚜껑 고정판 고정나사(9/64" n=40)	1	
E-19	43-001A-2500		Presser Bar Lifter Lever	누름대 올리기	1	
E-20	SC-0528-1230		Screw(11/64" n=40)	톱니 커버 나사(우)	1	
E-21	05-007A-1370		Cam Shaft For E-19	누름대 올림기 캠축	1	
E-22	02-019W-1230		Washer For E-21	실 낮추기 축 와셔	1	
E-24	40-004A-2350		Shaft For E-28	실 낮추기 축	1	
E-25	SC-0104-5607		Screw(11/64" n=40)	하측 중 베어링 고정나사(11/64" n=40)	1	
E-26	05-109A-1600		Knee Lifter Plate	노루발 인상판	1	
E-27	40-005W-2350		Washer $\phi 4 \times \phi 8 \times t0.8$	실 낮추기 축 와셔	1	
E-28	40-001A-2350		Thread Tension Release Plate	실 낮추기(조)	1	
E-29	40-003G-2350		Spring For E-28	실 낮추기 스프링	1	
E-30	40-002C-2350		E-Ring For E-28	실 낮추기 안내 붓싱 E링($\phi 8$)	1	
E-31	04-009C-3710		E-Ring For E-24	E-링($\phi 5$)	1	
E-32	40-002C-1600		Stopper For E-28	실 낮추기 스토퍼	1	
E-33	40-004W-1600		Washer For E-32	실 낮추기 스토퍼 와셔	1	
E-34	SC-0506-1600		Screw(9/64" n=40)	실 낮추기 스토퍼 쉘나사(9/64" n=40)	1	
E-35	43-002G-2350		Connecting Rod For E-26	누름대 올리기 연결봉	1	
E-36	43-017S-1600		Hinge Screw For E-26	누름대 올리기 연결봉 단나사(소)	1	
E-37	04-009C-3710		E-Ring For E-36	E-링($\phi 5$)	1	
E-38	43-112A-2350		Knee Lifting Link	무릎 올림 링크	1	
E-39	43-016S-1600		Hinge Screw For E-38	누름대 올리기 연결봉 단나사(대)	1	
E-40	04-009C-3710		E-Ring For E-39	E-링($\phi 5$)	1	
E-41	SN-0115-7400		Nut(3/16" n=32)	오프너 너트(3/16" n=32)	1	
E-42	43-014S-2350		Hinge Screw For E-38	무릎 올림 링크 힌지나사	1	
E-43	06-051R-1600		O-Ring	역진 레버 축 오링	1	
E-44	04-009C-3710		E-Ring For E-42	E-링($\phi 5$)	1	
E-45	43-011C-2350		Knee Lifting Rod	무릎 올림 봉	1	
E-46	43-013S-2350		Hinge Screw For E-38	무릎 올림 봉 단나사	1	
E-47	SN-0115-7400		Nut(3/16" n=32)	오프너 너트(3/16" n=32)	1	
E-48	40-005A-2350	A-1, B-1	Tension Release Cable	실 낮추기 케이블(조)	1	E-48 Ass'y
E-48-1	40-102A-2350	A-1, B-1	Wire Rope	와이어 로우프	1	
E-48-2	40-101A-2350	A-1, B-1	Cable	실 낮추기 케이블	1	
E-49	40-003A-2700	A-1, B-1	Connecting Bolt For E-48	케이블 연결 볼트	1	
E-50	40-004C-2700	A-1, B-1	Nut(A) For E-48	케이블 연결 너트(A)	1	
E-51	40-005C-2700	A-1, B-1	Nut(B) For E-48	케이블 연결 너트(B)	1	
E-52	10-035A-2700	A-1, B-1	Operating Lever For Thread Release	실 낮추기 작동 레버	1	
E-53	10-038A-2700	A-1, B-1	Cam Driving Lever	캠 접촉 레버	1	
E-54	10-039A-2700	A-1, B-1	Collar For E-53	캠 접촉 카라	1	
E-55	SC-0164-2700	A-1, B-1	Screw(M5)	캠 접촉 카라 고정나사(M5)	1	
E-56	10-134A-2700	A-1, B-1	Pipe For Thread Release Lever	실 낮추기 레버 파이프	1	
E-57	10-041W-2700	A-1, B-1	Flat Washer	평 와셔	1	
E-58	10-042C-2700	A-1, B-1	O-Ring	오링(P11)	1	
E-59	40-107C-2700	A-1, B-1	Cable Clip(A)	케이블 클립(A)	1	
E-60	SC-0173-1230	A-1, B-1	Screw(3/16" n=32)	톱니 받침 볼력 고정나사 (3/16" n=32)	1	

NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B

Thread Trimmer Mechanism

사절 관계(235 전용)

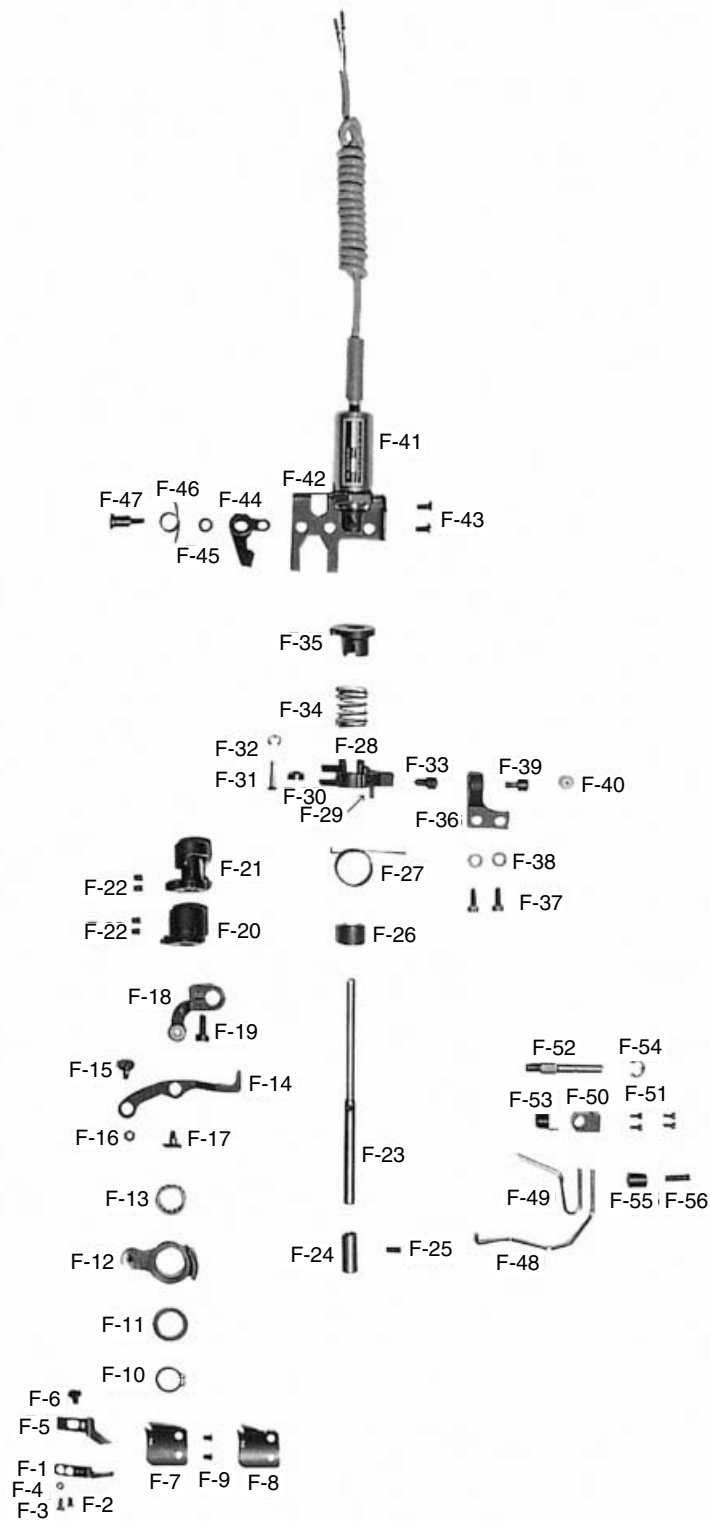


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q' ty	Assembly No.
F-1	10-101A-2700		Fixed Mes	고정메스	1	
F-2	SC-A301-4119		Screw(9/64" n=40)	고정메스 고정나사(9/64" n=40)	1	
F-3	SC-0137-2700		Screw(1/8" n=40)	고정메스 장력 조절나사(1/8" n=40)	1	
F-4	SN-0103-2700		Nut(1/8" n=40)	고정메스 장력 조절나사 너트(1/8" n=40)	1	
F-5	10-005A-2700		Thread Detachable Plate	실 가리개	1	
F-6	SC-0199-2700		Screw(11/64" n=40)	솔레노이드 부착 커버 고정나사(11/64" n=40)	1	
F-7	10-106A-2700	A-1	Rotary Mes	회전메스	1	
F-8	10-106A-235B	B-1	Rotary Mes	회전메스	1	
F-9	SC-A154-4114		Screw(11/64" n=40)	회전메스 고정나사(11/64" n=40)	2	
F-10	10-009C-2700		Stopper C-Ring	스냅링(φ15)	1	
F-11	10-010W-2700		Washer For F-12	사절 홀더 와셔	1	
F-12	10-008A-2700		Holder For F-7	사절 홀더	1	
F-13	10-011A-2700		Needle Bearing	니들 베어링	1	
F-14	10-112A-2700		Connecting Link	연결 링크	1	
F-15	10-113S-2700		Pivot Screw For F-14	연결 링크 단나사(대)	1	
F-16	SN-0101-1600		Nut(11/64" n=40)	S/P 절이축 나사 너트(11/64" n=40)	1	
F-17	10-013S-2700		Pivot Screw For F-14	연결 링크 단나사(소)	1	
F-18	10-015A-2700		Thread Trimmer Lever	사절 레버	1	
F-19	SC-0183-2700		Screw(15/64" n=28)	베이스 고정나사 B(15/64" n=28)	1	
F-20	10-033A-2700		Reversal Cam	역전캠(K1895)	1	
F-21	10-050A-2700		Thread Trimmer Gear Assembly	사절 기어(조)	1	
F-22	SC-0317-2700		Screw(15/64" n=28)	캠 접촉안내 고정나사(15/64" n=28)	4	
F-23	10-017A-2700		Thread Trimmer Shaft	사절 축	1	
F-24	10-016A-2700		Bushing For F-23	사절 축 붓싱	1	
F-25	SC-0507-1230		Screw(15/64" n=28)	상축 B/S 고정나사(15/64" n=28)	1	
F-26	10-027A-2700		Spring Guide	스프링 안내	1	
F-27	10-026G-2700		Spring For F-28	스토퍼 레버 스프링	1	
F-28	10-022A-2700		Stopper Lever	스토퍼 레버	1	
F-29	12-004C-2350		Stopper Pin	스토퍼 핀(3×14)	1	
F-30	10-023A-2700		Collar For F-28	스토퍼 레버 카라	1	
F-31	10-024C-2700		Collar Shaft For F-28	스토퍼 레버 카라 축	1	
F-32	05-014C-1230		Stop Ring For F-31	인상판 E링(φ4)	1	
F-33	SC-0324-2700		Screw(1/4" n=40)	스토퍼 레버 고정나사(1/4" n=40)	1	
F-34	10-028G-2700		Spring For F-35	사절구동기어(B) 스프링	1	
F-35	10-029A-2700		Thread Trimmer Gear "B"	사절구동기어(B) (K1896)	1	
F-36	10-018A-2700		Stopper	스토퍼(K1886)	1	
F-37	SC-0190-2700		Screw(3/16" n=32)	스토퍼 쥘나사(3/16" n=32)	2	
F-38	10-020W-2700		Washer For F-37	스토퍼 쥘 와셔	2	
F-39	10-021R-2700		Cushion Rubber (A) For F-36	스토퍼 쿠션 고무	1	
F-40	10-008R-2350		Cushion Rubber	쿠션 고무	1	
F-41	10-044A-2700		Trimmer Solenoid Assembly	사절 솔레노이드(조)	1	
F-42	10-045A-2700		Solenoid Base	솔레노이드 받침	1	
F-43	SC-0173-1230		Screw(3/16" n=32)	튐 받침 볼트 고정나사(3/16" n=32)	2	
F-44	10-036A-2700		Clutch Lever	클러치 레버	1	
F-45	10-020W-2700		Washer For F-47	스토퍼 쥘 와셔	1	
F-46	10-037G-2700		Spring For F-44	클러치 스프링	1	
F-47	10-043S-2700		Pivot Screw For F-44	클러치 레버 단나사	1	
F-48	01-112A-2350		Bobbin Presser Bar	보빈 압력봉	1	
F-49	01-013C-2350		Lever	레버	1	
F-50	01-114C-2350	A-1	Holder For F-48, 49	레버잡이	1	
F-51	SC-A131-4522	B-1	Screw(1/8" n=44)	바늘대 실걸이 쥘나사(1/8" n=44)	4	
F-52	01-105A-2350		Bed Leg Rear	베드 받침(전)	1	
F-53	01-015C-2350		Spring For F-48	보빈 압력 스프링	1	
F-54	06-020C-7400		E-Ring(φ6)	E링(φ6)	1	
F-55	01-016R-2700		Stopper Rubber For F-48	보빈 압력봉 스톱퍼	1	
F-56	SC-0508-1230		Screw(15/64" n=28)	폴리 고정나사(15/64" n=28)	1	

NOTE:

A=KM-137A
 A-1=KM-235A
 B=KM-137B
 B-1=KM-235B



Reverse Button Mechanism 역진 버튼 관계(235전용)

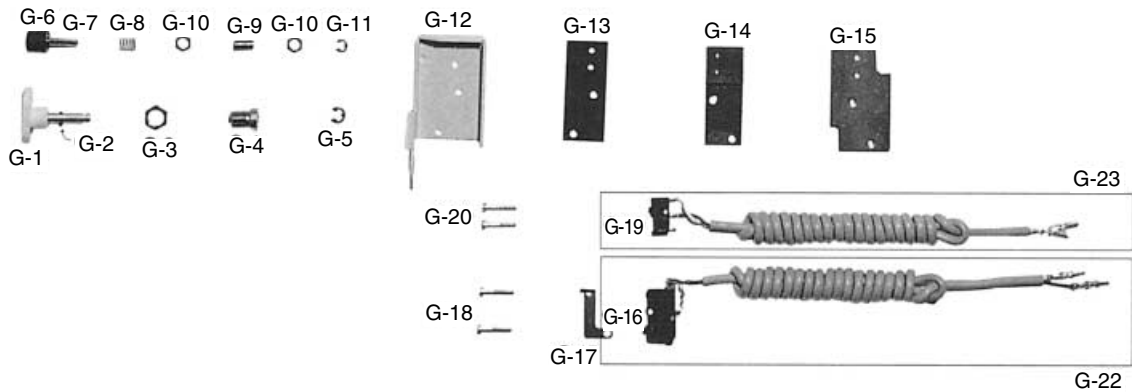


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q' ty	Assembly No.
G-1	12-003A-2350		Reverse Button	역진버튼(조)	1	
G-2	44-120P-1230		Stopper Pin(2×8)	물핀(2×8)	1	
G-3	12-006C-2350		Nut For G-4	역진 버튼 축 안내 붓싱 캡너트	1	
G-4	12-005A-2350		Guide Bushing For G-1	역진 버튼 축 안내붓싱	1	
G-5	05-014C-1230		Stop Ring For G-1	인상판 E링(φ4)	1	
G-6	12-009C-2700		Reverse Selection Button	버튼(B)	1	
G-7	12-005A-2700		Shaft For G-6	버튼 지지축	1	
G-8	12-008G-2700		Spring For G-6	버튼(B) 완충 스프링	1	
G-9	12-006S-2700		Support Screw For G-6	버튼 지지나사	1	
G-10	12-007C-2700		Nut For G-9	버튼 지지나사 캡너트	2	
G-11	06-033M-3800		E-Ring For G-7	톱니 받침 블록 축 E링(φ3)	1	
G-12	12-001A-2350		Button Case	버튼 케이스	1	
G-13	12-010R-2350		Insulated Rubber(B) For Switch	스위치 받침 절연고무(B)	1	
G-14	12-009R-2350		Insulated Rubber (A) For Switch	스위치 받침 절연고무(A)	1	
G-15	12-002C-2350		Cover For G-12	버튼 케이스 커버	1	
G-16	12-107A-2350		Reverse Button Switch	역진 버튼 스위치	1	
G-17	12-008C-2350		Pushing Plate For G-16	역진 버튼 스위치 누름판	1	
G-18	SC-0336-2350		Screw(1/8" n=44)	스위치 고정볼트(1/8" n=44)	2	
G-19	12-004A-2700		Reverse Selection Switch	스위치	1	
G-20	SC-0337-2700		Screw(M2×0.4)	스위치 고정볼트 B(M2×0.4)	2	
G-22	12-107A-2350		Reverse Selection Switch Ass'y	역진 버튼 스위치	1	
G-23	12-104A-2700		Reverse Selection Switch Ass'y	역진 버튼 스위치	1	

NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B

Thread Wiper Mechanism


와이퍼 관계(235전용)

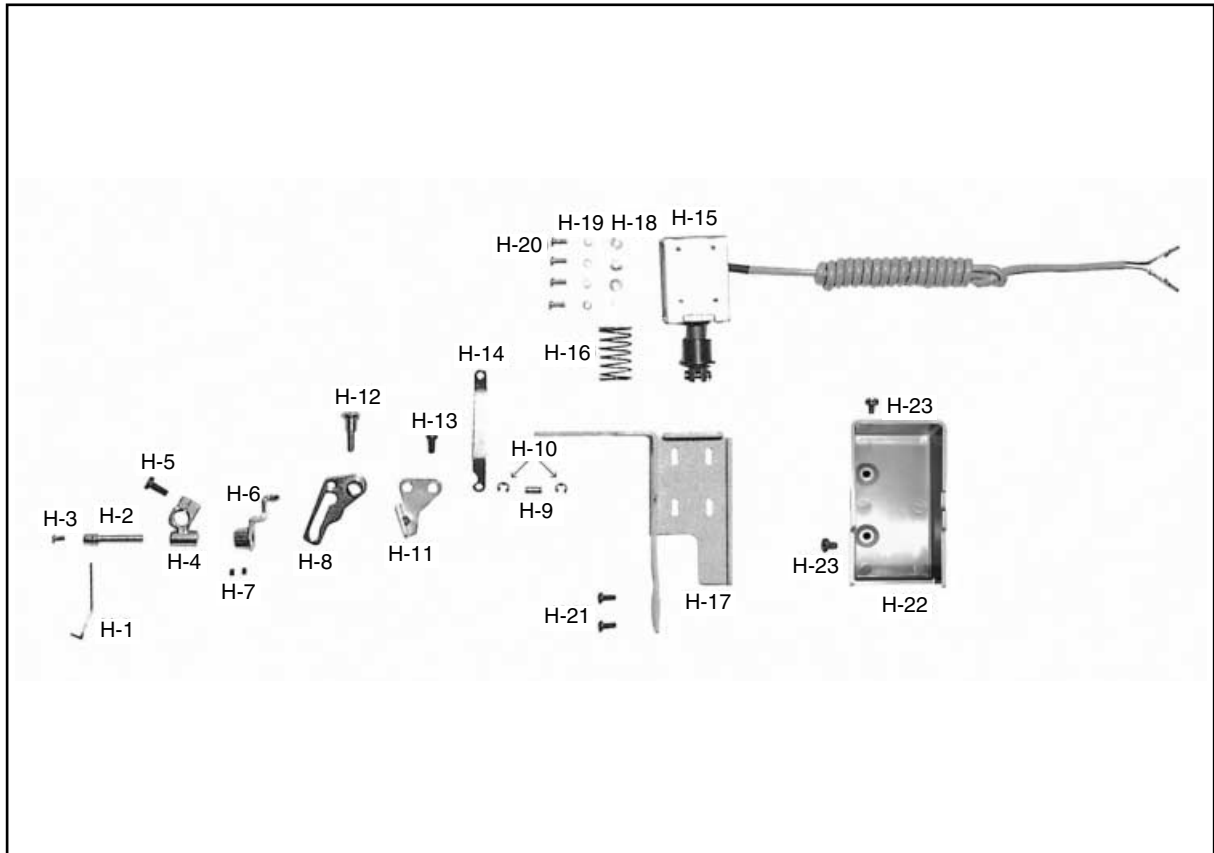

Ref. No.	Parts No.	Note	Name of Parts	품명	Q'ty	Assembly No.
H-1	11-003C-2700		Wiper	와이퍼	1	
H-2	11-104A-2700		Wiper Rotary Shaft	와이퍼 회전축	1	
H-3	SC-0130-1230		Screw(1/8" n = 44)	톱니 쥘나사(1/8" n = 44)	1	
H-4	11-101A-2700		Holder For H-2	와이퍼 회전축 잡이(K1900)	1	
H-5	SC-0174-1230		Screw(11/64" n = 40)	가마잡이 나사(11/64" n = 40)	1	
H-6	11-005A-2700		Wiper Crank	와이퍼 크랭크	1	
H-7	SC-A104-4517		Screw(11/64-40-5)	육각구멍볼이 멈춤나사(11/64")	2	
H-8	11-009A-2350		Crank Rotary Plate	크랭크 회전판	1	
H-9	11-013P-2700		Hinge Pin For H-8	크랭크 회전판 힌지핀	1	
H-10	06-033M-3800		E-Ring For H-9	톱니 받침 볼력축 E링(φ 3)	2	
H-11	11-008A-2700		Crank Rotary Regulator Plate	크랭크 회전 조절판	1	
H-12	11-010S-2350		Hinge Screw For H-8	와이퍼 크랭크 힌지 단나사	1	
H-13	SC-0173-1230		Screw(3/16" n = 32)	톱니 받침 볼력 고정나사(3/16" n = 32)	1	
H-14	11-012A-2700		Connecting Rod For H-8	회전판 연결 로드	1	
H-15	11-015A-2700		Wiper Solenoid Assembly	와이퍼 솔레노이드(조)	1	
H-16	11-019G-2700		Solenoid Tension Spring	솔레노이드 스프링	1	
H-17	11-114A-2700		Solenoid Bracket	솔레노이드 부착 브라켓	1	
H-18	11-017W-2700		Flat Washer	솔레노이드 부착 평와셔	4	
H-19	11-016W-2700		Spring Washer	솔레노이드 부착 스프링 와셔	4	
H-20	SC-0196-2700		Screw(M3×0.5)	솔레노이드 부착 고정나사(M3×0.5)	4	
H-21	SC-0175-1230		Screw(11/64" n = 40)	와이퍼트 보강판 나사	2	
H-22	11-121A-2700		Cover For H-17	솔레노이드 부착 커버(사출)	1	
H-23	SC-0120-1230		Screw(9/64" n = 40)	오일펌프 커버나사(9/64" n = 40)	2	

NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B

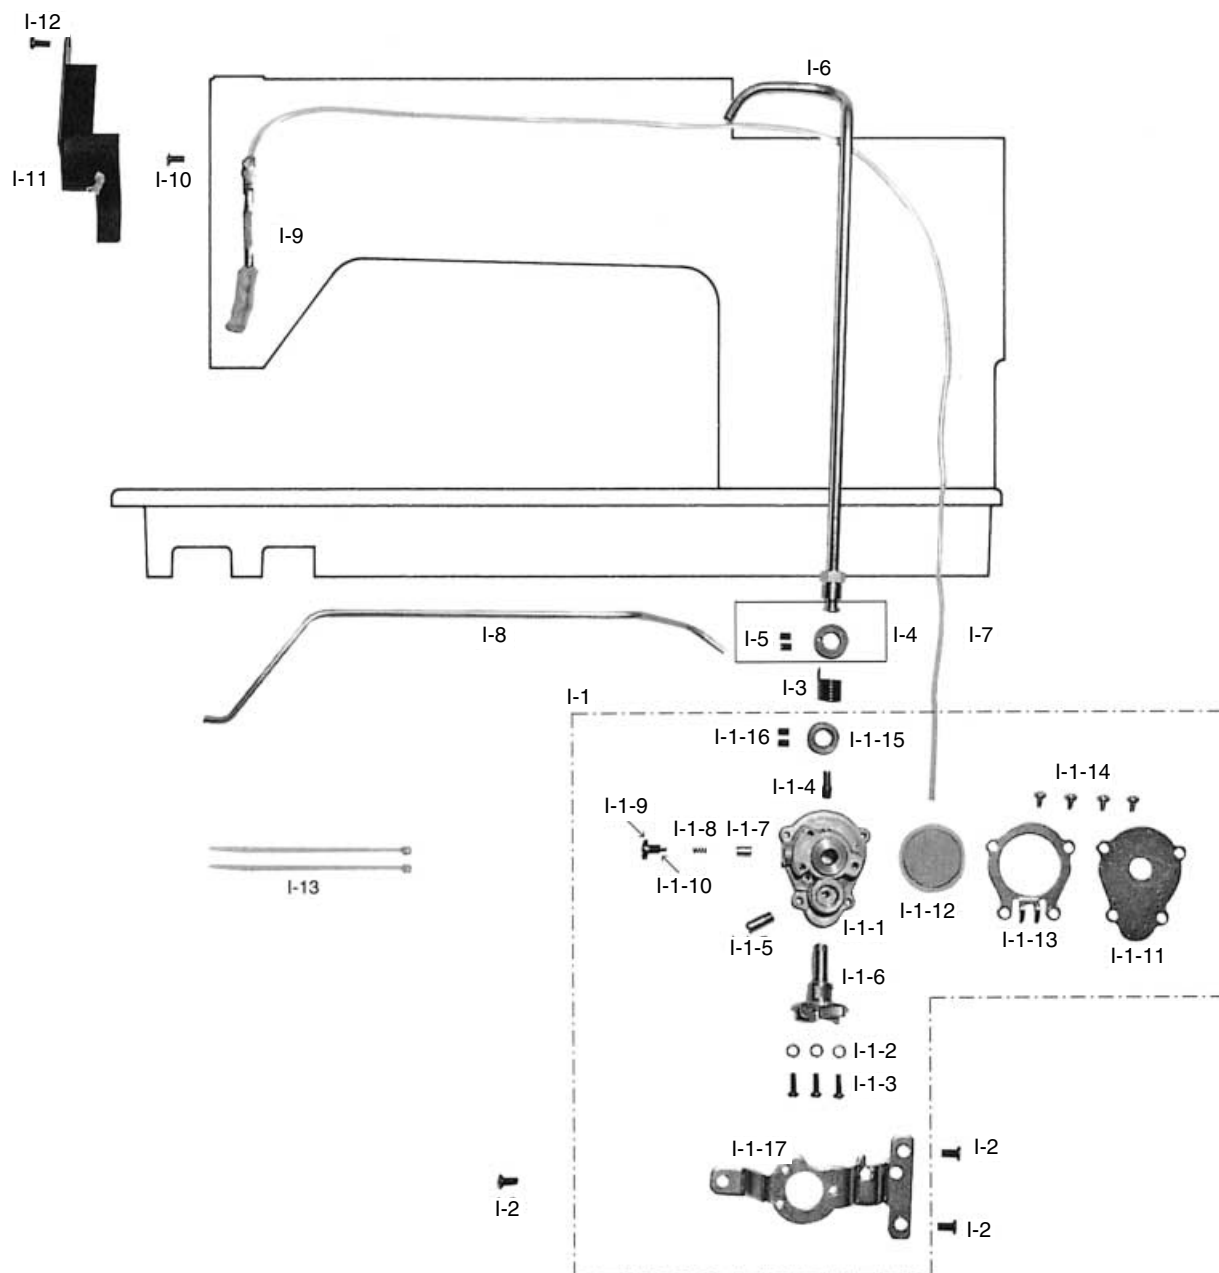Lubrication
급유 관계


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q' ty	Assembly No.
I-1	44-150A-2350		Oil Pump Ass'y	오일펌프(조)	1	I-1 Ass'y
I-1-1	44-012A-2350		Oil Pump Body	오일펌프 몸체	1	
I-1-2	44-011W-1600		Washer For I-1-3	오일 펌프 몸체 겹나사 와셔	3	
I-1-3	SC-0528-1230		Screw(9/64" n = 40)	톱니 커버 나사(우) (9/64" n=40)	3	
I-1-4	44-010C-1600		Nipple For Oil Return Pipe	환류 파이프 니플	1	
I-1-5	44-009C-1600		Nipple For Lower Shaft	하축 급유 니플	1	
I-1-6	44-126A-1230		Impeller	임펠러	1	
I-1-7	44-117A-1230		Piston	피스톤	1	
I-1-8	44-118G-1230		Piston Spring	피스톤 스프링	1	
I-1-9	44-119S-1230		Pin Screw For I-1-8	피스톤 스프링핀 나사	1	
I-1-10	44-120P-1230		Pin For I-1-8	피스톤 스프링핀(RP2×8)	1	
I-1-11	44-104C-2350		Oil Pump Cover	오일펌프 커버	1	
I-1-12	44-024C-1230		Oil Pump Cap	오일 펌프 헬트 캡	1	
I-1-13	44-105C-2350		Magnet Holder	자석 잡이	1	
I-1-14	44-120S-1230		Screw(11/64" n = 40)	오일 펌프 커버 나사 (11/64" n=40)	4	
I-1-15	44-019A-1230		Collar For Impeller Shaft	오일 펌프 카라	1	
I-1-16	SC-0512-1230		Screw(11/64" n = 40)	오일 펌프 조인트 나사(11/64" n=40)	2	
I-1-17	44-101A-2350		Oil Pump Bracket	오일 펌프 브라켓	1	
I-2	SC-0548-7400		Screw(3/16" n = 28)	다이알 판 겹나사(3/16" n=28)	3	
I-3	44-016G-1230		Spring Joint	오일 펌프 조인트 스프링	1	
I-4	44-115A-1230		Collar For I-2	오일 펌프 조인트 카라	1	
I-5	SC-0512-1230		Screw(11/64" n = 40)	오일 펌프 조인트 나사(11/64" n=40)	2	
I-6	44-002A-2350		Main Shaft Oil Pipe Ass'y	상축 급유 파이프	1	
I-7	44-012C-1230		Oil Return Tube	환류 파이프	1	
I-8	44-003A-2350		Lower Shaft Oil Pipe	하축 급유 파이프	1	
I-9	44-117A-1600		Holder For I-7	환류 파이프 잡이	1	
I-10	SC-0175-1230		Screw(11/64" n = 40)	와이롯드 보강판 나사(11/64" n=40)	1	
I-11	44-120A-1600		Oil Shield	면판 유방판	1	
I-12	SC-0176-1230		Screw(11/64" n = 40)	테이프 안내 겹나사(11/64" n=40)	1	
I-13	02-003A-2700		Nylon Clip	나이론 클립	2	

NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B

Accessories

액세서리 관계

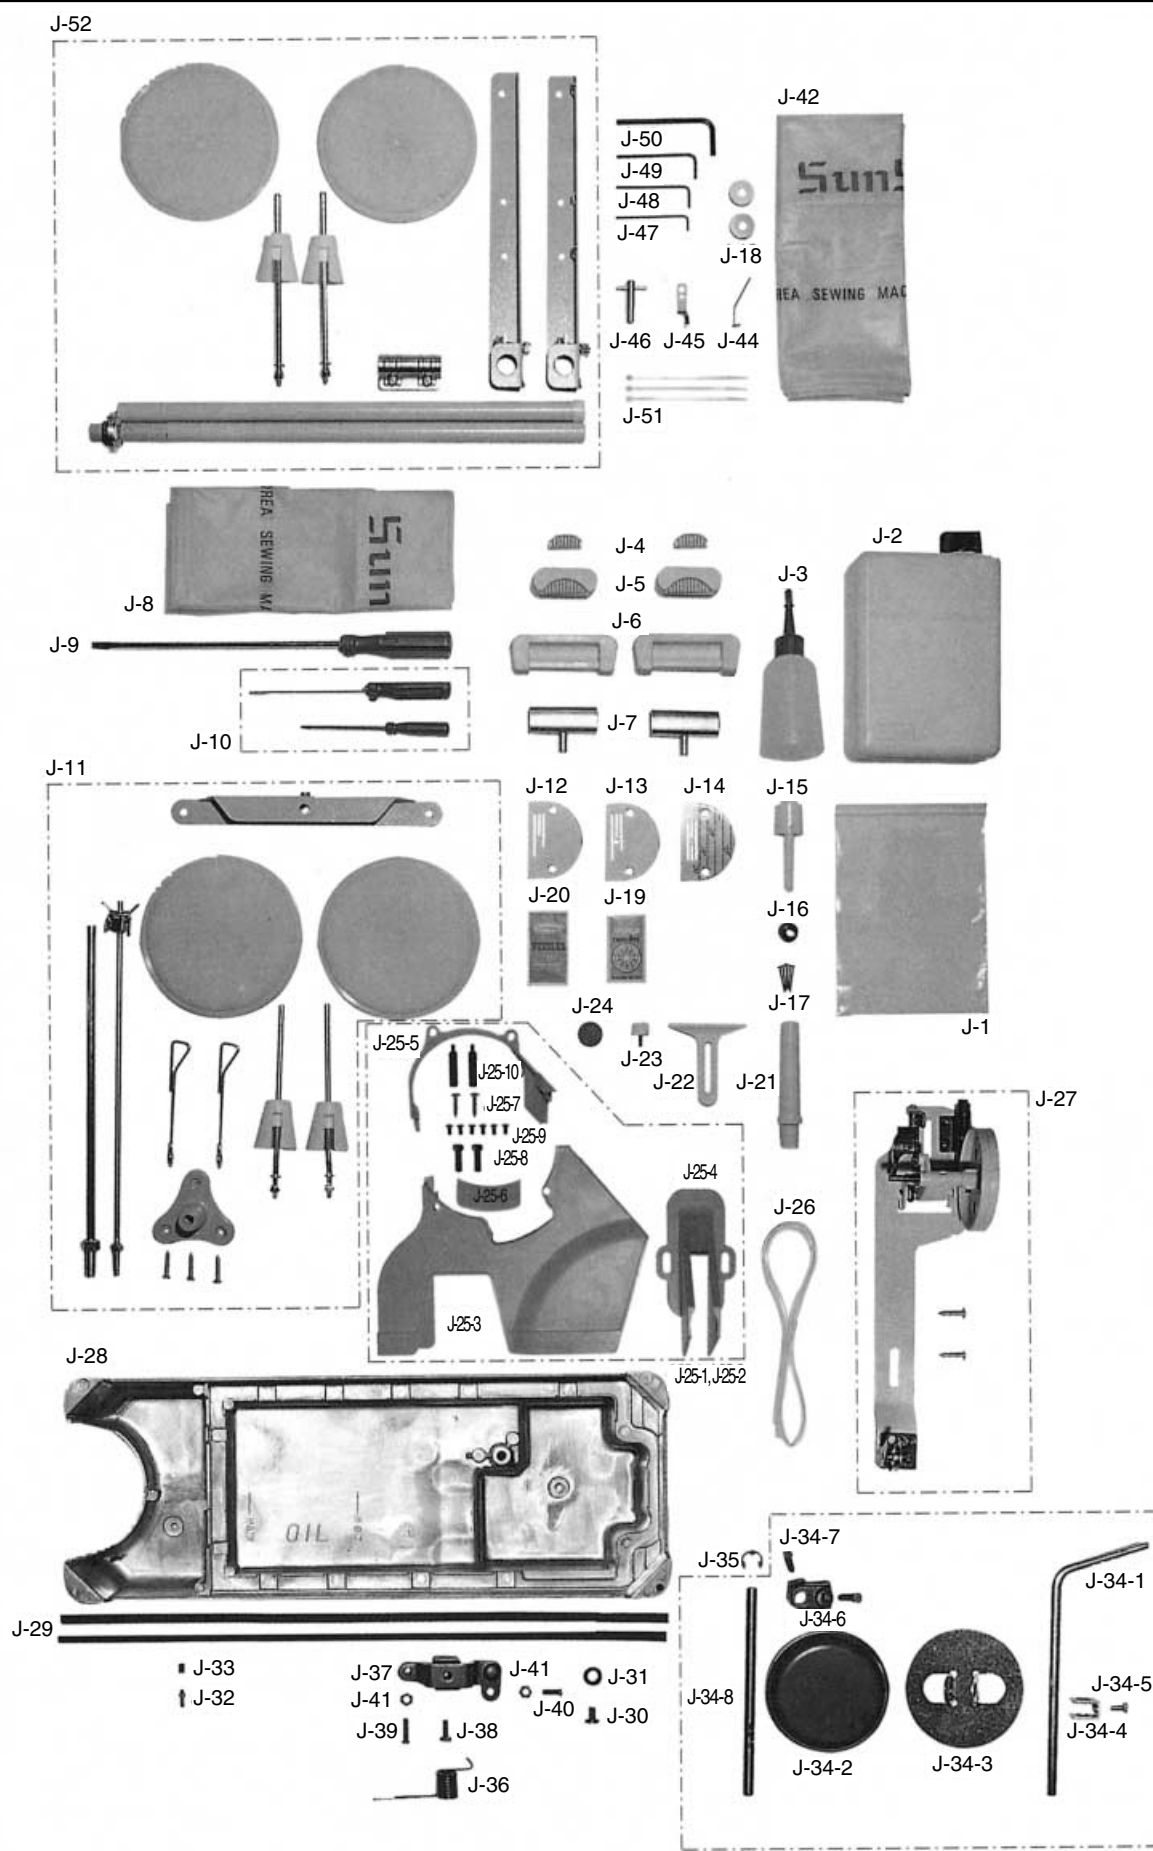



Ref. No.	Parts No.	Note	Name of Parts	품명	Q'ty	Assembly No.
J-1	91-001C-1230		Accessory Box	액세서리 박스	1	
J-2	91-008C-1230		Oil	오일 캔	1	
J-3	91-011C-1230		Oil Tank	유차	1	
J-4	01-213R-1230		Head Support Rubber "B"	힌지 고무(소)	2	
J-5	01-241R-1230		Head Support Subber "A"	힌지 고무(중)	2	
J-6	01-042R-1230		Rubber Cushion For Hinge	힌지 고무(대)	2	
J-7	01-043C-1230		Head Hinge	힌지	2	
J-8	91-006C-2700		Sewing Machine Cover	미싱커버(대)	1	
J-9	91-102C-1230		Driver(Large)	드라이버(대)	1	
J-10	91-103C-1230		Driver(Middle, Small)	드라이버(중, 소)	1	
J-11	91-007A-2302		Thread Stud Ass'y	실채꽃이(조)	1	
J-12	01-035A-123A	A, A-1	Needle Plate	침판	1	
J-13	01-035A-123B	B, B-1	Needle Plate	침판	1	
J-14	01-135A-235A		Needle Plate(AL-Type)	침판(박물용)	1	
J-15	43-010A-1600		Knee Base Rubber	무릎 올림봉 받침캡	1	
J-16	44-011R-2350		Cap For J-15	오일팬 누유 방지 고무	1	
J-17			Nail	못	10	
J-18	07-008A-1230		Bobbin	보빈	2	
J-19			Needle	바늘 A형	1	
J-20			Needle	바늘 B형	1	
J-21	91-012C-1230		Head Support Pole	미싱 받침대	1	
J-22	91-004C-1230		Cloth Guide	정규	1	
J-23	SC-0204-4124		Screw(9/64" n=40)	홈볼이 바인 작은나사(9/64" n=40)	1	
J-24	44-010C-1230		Magnet	자석	1	
J-25-1	60-101A-1370	A, B	Belt Cover Ass'y(Only For Regular M/C)	벨트커버(조)-비사절	1	J-25-1 J-25-2
J-25-2	60-101A-2350	A-1, B-1	Belt Cover Ass'y(Only For Trimming M/C)	벨트커버(조)-사절	1	
J-25-3	60-001A-1230		Belt Cover(A)	벨트커버(A)	1	
J-25-4	60-002A-1230		Belt Cover(B)	벨트커버(B)	1	
J-25-5	60-003A-1370		Belt Cover(C)	벨트커버(C)	1	
J-25-6	60-004A-1230	A, B	Belt Cover(D)	벨트커버(D)	1	
J-25-7	91-002S-3400		Screw For J-25-2	목나사	2	
J-25-8	SC-0498-3710		Screw(11/64" n=40)	가마잡이 나사(11/64" n=40)	2	
J-25-9	SC-0543-2302		Screw(11/64" n=40)	홈볼이 동근 작은나사(11/64" n=40)	6	
J-25-10	60-005S-1230		Screw For Belt Cover	벨트커버 지지나사	2	
J-26	44-012C-1230		Oil Return Tube	환류 파이프	1	
J-27	41-101A-1230		Bobbin Winder Ass'y	실감기(조)	1	
J-28	44-012A-2500		Oil Pan	오일 팬	1	
J-29	44-003M-1230		Oil Pan Gasket	오일 팬 가스켓	2	
J-30	SC-0347-1230		Screw(M8×1.25)	배유구멍 마개 나사(M8×1.25)	1	
J-31	44-005R-1230		Packing For J-29	배유 구멍마개 나사 오링	1	
J-32	44-032C-1230		Oil Pan Nipple	오일 팬 니플	1	
J-33	SC-0509-1230		Screw(15/64" n=28)	피드캠 쥘나사(15/64" n=28)	1	
J-34	43-001A-1600		Knee Lifting Ass'y	무릎 올림(조)	1	J-34 Ass'y
J-34-1	43-106C-1600		Knee Lifter Shaft	무릎 받침축	1	
J-34-2	43-101R-1600		Knee Lifter Pad	무릎 받침 고무	1	
J-34-3	43-102C-1600		Knee Lifter Pad Insert Plate	무릎 받침 고무 잡이 판	1	
J-34-4	43-101A-1230		Holder For J-34-2	무릎 받침 고무 연결 링크	1	
J-34-5	43-108S-1230		Set Screw For J-35	무릎 받침 연결 링크 쥘나사	1	
J-34-6	43-106C-1230		Knee Lifter Arm Joint Complete	무릎 받침 연결 크랭크	1	
J-34-7	SC-0181-1230		Screw(5/16" n=18)	무릎 받침 축 고정나사(5/16" n=18)	2	
J-34-8	43-108C-1600		Shaft For J-37	제어체 축	1	
J-35	43-009C-1600		E-Ring(φ9)	제어체 축 링(E링 φ9)	1	
J-36	43-008G-1600		Spring For F-37	제어체 스프링	1	
J-37	43-007A-1600		Knee Lifting Controller	제어체	1	
J-38	SC-0106-7400		Screw(15/64" n=28)	포크 쥘나사(육각)	1	
J-39	SC-0545-1230		Screw(15/64" n=28)	제어체 운동조절 나사(중) (15/64" n=28)	1	
J-40	SC-0546-1230		Screw(15/64" n=28)	제어체 운동조절 나사(대) (15/64" n=28)	1	
J-41	SN-0105-3400		Nut(15/64" n=28)	수평운동 롯데 단나사 너트(15/64" n=28)	2	
J-42	91-006C-2700		Sewing Machine Cover	미싱커버(대)	1	
J-43	07-005A-2700	A-1, B-1	Bobbin	보빈	2	
J-44	11-003C-2700	A-1, B-1	Wiper	와이퍼	1	
J-45	10-101A-2700	A-1, B-1	Fixed Mes	고정 메스	1	
J-46	91-105C-2700	A-1, B-1	Box Spanner	고정 메스 렉 조절용 스패너	1	
J-47	91-001C-2700	A-1, B-1	Wrench(2mm)	렌치(2mm)	1	
J-48	91-004C-2700	A-1, B-1	Wrench(2.5mm)	렌치(2.5mm)	1	
J-49	91-003C-2700	A-1, B-1	Wrench(3mm)	렌치(3mm)	1	
J-50	91-002C-2700	A-1, B-1	Wrench(5mm)	렌치(5mm)	1	
J-51	92-003A-2700	A-1, B-1	Nylon Clip	나일론 클립	4	
J-52	91-007A-2302		Thread Stud Ass'y	실채꽃이(조)	1	


NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B

Program Unit Box & Automatic Presser Foot Lifter

프로그램 유닛 박스 및 자동 무릎 올림 관계(235전용)

K-67

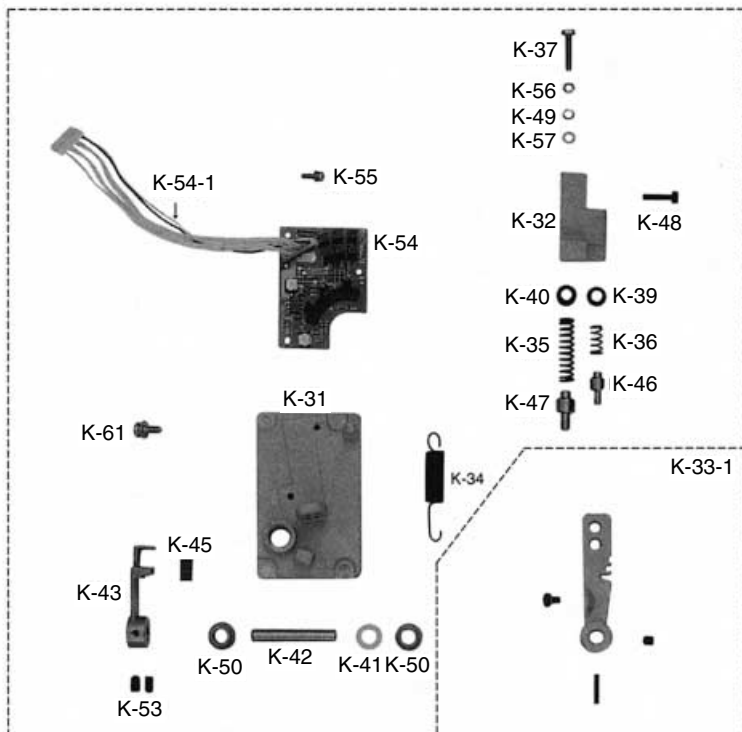

K-62



K-63

K-64


K-65

K-66

K-66

K-1-1


K-1-3

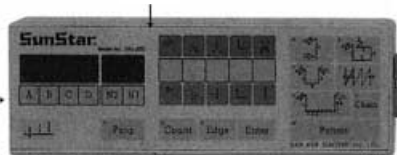

K-2

K-1-4

K-1-5

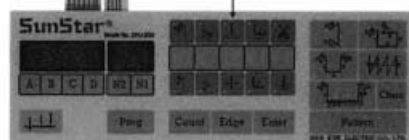

K-5

K-23

K-10

K-25

K-24

K-8

K-6

K-7

K-17

K-18-1

K-16

K-14

K-13

K-12

K-11-1

K-30

K-15

K-13

K-29

K-28

K-28-1

K-27-2

K-27-1

K-22

K-68

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

K-22

Ref. No.	Parts No.	Name of Parts	Q' ty	Assembly No.
K-1-1		Program Unit Box	1	
K-1-2		Program Unit Box	1	
K-1-3		Program Unit Box	1	
K-1-4		Rubber din Cap	1	
K-1-5		Membrane S/W	1	
K-2		Cable For P/U Box	1	
K-3		Bracket For Program Unit Box(KM-235)	1	
K-4		Bracket For P/U Box(Special Type)	1	
K-4-1		Bracket For P/U Box(KM-250)	3	
K-4-2		Bracket For P/U Box(Other Company Type)	1	
K-4-3		Bracket For P/U Box(9577)	1	
K-5		Screw For P/U Box	1	
K-6		Anti-Vibration Bolt(KM-235)	1	
K-7		Rubber Cap For Anti-Vibration bolt	4	
K-8		Screw For P/U Box(Special)	1	
K-9-1		Auto Knee Lifter Solenoid Case	1	
K-9-2		Auto Knee Lifter Solenoid Cover	1	
K-10		Screw For C-9 Bracket	1	
K-11-1		Shaft(B) For Solenoid	1	
K-11-2		Shaft(A) For Solenoid	1	
K-12		Fixing Plate For Stroke	4	
K-13		Screw For C-12	1	
K-14		Solenoid Shaft Connecting Rod.	1	
K-15		Nut For C-14	4	
K-16		Ball Joint(Right)	1	
K-17		Ball Joint(Left)	1	
K-18-1		Middle Connecting Bar(KM-235)	1	
K-18-1		Middle Connecting Bar(Special)	1	
K-18-1		Middle Connecting Bar(KM-560-7)	1	
K-19		Nut(R) For C-18	1	
K-20		Nut(L) For C-18	1	
K-21		Knee Lifting Shaft	1	
K-22		Sticker For Auto Knee Lifting Sol.	1	
K-23		Fixing Nut For C-6	1	
K-24		Screw For P/U Box Bracket	2	
K-25		Spring Washer For P/U Box Bracket	2	
K-26		Nut For C-21	1	
K-27-1		Cable For Auto Knee Lifting Solenoid	1	
K-27-2		Connector Pin	2	
K-28		Plug For Auto Knee Lifting Solenoid	1	
K-28-1		Tube(C)	1	
K-29		Guide Bushing For Cable	1	


NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B

Program Unit Box & Automatic Presser Foot Lifter

프로그램 유닛 박스 및 자동 무릎 올림 관계(235전용)

K-67

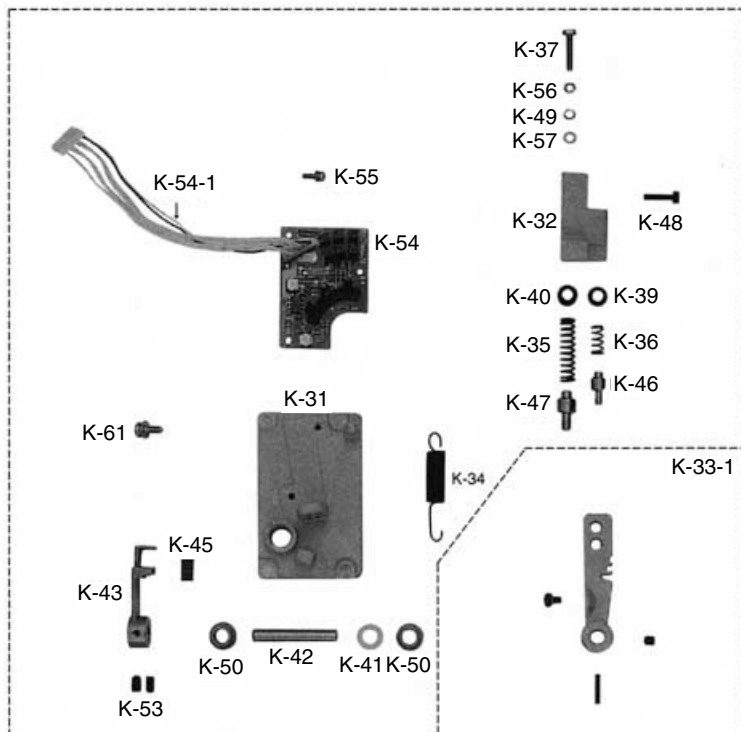

K-62



K-63

K-64




K-66

K-66


K-1-1

K-1-3

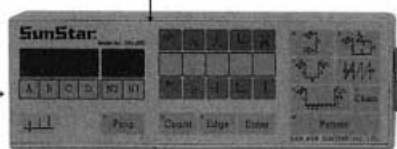


K-2

K-1-4

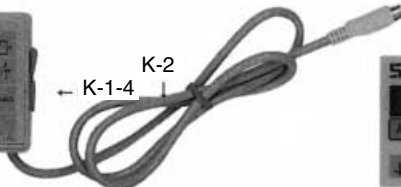

K-1-5

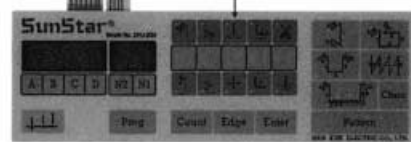

K-5

K-23

K-10

K-25

K-24

K-8

K-6

K-7




K-3



K-4



K-4-1

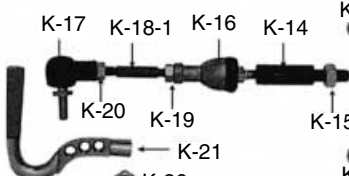

K-17

K-18-1

K-16

K-14

K-13

K-12

K-20

K-19

K-21

K-15

K-11-1

K-30

K-26

K-29



K-27-2

K-28-1

 
K-28

K-27-1

K-22




K-4-2




K-4-3

K-9-1

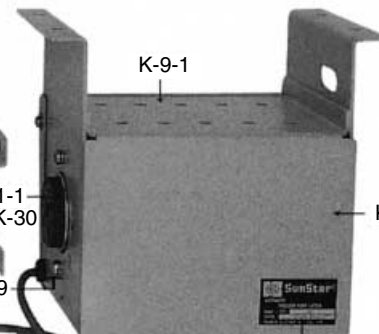

K-9-2

K-68

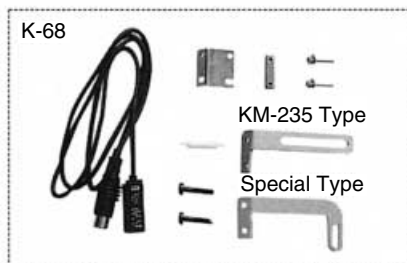

KM-235 Type

Special Type



Ref. No.	Parts No.	Name of Parts	Q' ty	Assembly No.
K-30		Rubber Washer	1	
K-31		Pedal Base	1	
K-32		Spring Housing	1	
K-33		Pedal Control Lever	1	
K-33-1		Pedal Control Lever(Ass'y)	1	
K-34		Tension Spring For Pedal	1	
K-35		Pressure Spring For Presser Foot	1	
K-36		Pressure Spring For Thread Trimming	1	
K-37		Pressure Control Screw For Thread Trimming	1	
K-38		Pressure Control Screw For Presser Foot	1	
K-39		Spring Guide(A)	1	
K-40		Spring Guide(B)	1	
K-41		Parallel Washer For Pedal Shaft	1	
K-42		Shaft For Pedal Control Lever	1	
K-43		Pedal Magnet & Film Base	1	
K-44		Stud For Pedal Stopper	1	
K-45		Pedal Magnet	1	
K-46		Stopper(A) For Pressure Spring	1	
K-47		Stopper(B) For Pressure Spring	1	
K-48		Screw For Spring Housing	2	
K-49		Parallel Washer For C-37	1	
K-50		Bushing For Pedal Control Lever Shaft	2	
K-51		Fixing Bolt For Pedal Control Lever	1	
K-52		Roll Pin For Pedal Control Lever	1	
K-53		Fixing Bolt For Pedal Magnet & Film Base	2	
K-54		Pedal P.C.B Ass'y	1(Ass'y)	
K-54-1		Connector for Pedal	1	
K-55		Screw For Pedal P.C.B	3(Ass'y)	
K-56		Fixing Nut For C-37	1	
K-57		Fixing Spring Washer For C-37	1	
K-58		Fixing Nut For C-38	1	
K-59		Fixing Spring Washer For C-38	1	
K-60		Parallel Washer For C-38	1	
K-61		Screw For Pedal Base	4(Ass'y)	
K-62		Belt Cover(B)	1	
K-63		Belt Guide	1	
K-64		Screw For Belt Guide	1	
K-65		Belt Cover(A)	1	
K-66		Screw For Belt Cover(A)	2(Ass'y)	
K-67		Pedal Unit Assembly	1(Ass'y)	
K-68		Edge Sensor	1(Ass'y)	

NOTE:

A=KM-137A
A-1=KM-235A
B=KM-137B
B-1=KM-235B

**SUNSTAR MACHINERY CO., LTD.****HEAD OFFICE**

178-212, GAJWA-DONG, SEO-KU, INCHON, KOREA
TEL : (032) 580-5600 ~ 4 FAX : (032) 584-3020

TRADE OFFICE

178-212, GAJWA-DONG, SEO-KU, INCHON, KOREA
TEL : (032) 580-5740 ~ 60 FAX : (032) 584-3025 ~ 6

OVERSEAS NETWORK**SUNSTAR MACHINERY U.S.A., INC.**

11475, N.W. 39TH ST. Miami, Florida 33178, USA
TEL : 1-305-591-9596 FAX : 1-305-591-0661

SUNSTAR MACHINERY HONGKONG LTD.

RM. 1302, Apec Plaza, No. 49 Hoi Yuen RD,
Kwun Tong, Kln. H. K.
TEL : 852-2729-7078, 852-2729-7224 FAX : 852-2729-7573

SUNSTAR MACHINERY SHANG HAI LTD. (CHINA)

#7 Yuangong Rd. Shanghai International Automobiles City
Components Sub-Assembly Industrial Zone Jiading Shanghai China
TEL : 86-21-69576305, 69576306 FAX : 86-21-69576091, 69576093

SUNSTAR MACHINERY GUANG DONG BRANCH (CHINA)

Luosha Daxia 12TH Floor 170 Dong Xing-Road, Dong Guan
Shicheng Qu, Guang Dong, China
TEL : 86-769-249-1610 FAX : 86-769-234-4042

SUNSTAR MACHINERY FUJIAN BRANCH (CHINA)

504, Agricultural Bank Building Shishi Fujian, China
TEL : 86-595-859-8871 FAX : 86-595-859-8872

SUNSTAR MACHINERY QINGDAO BRANCH (CHINA)

Chengyangqu Liutingzhen Chongyanglu Shoufeizhan
Beidian Shangpinlou Qingdao Shandong, China
TEL : 86-532-482-2236, 86-532-481-1262 FAX : 86-532-481-1262

SUNSTAR MACHINERY JAKARTA BRANCH

JL. Pelepah Indah Raya Bloc LC 2/2 Kelapa Gading Permai
Jakarta(14250) Indonesia
TEL : 62-21-450-2143, 62-21-4584-0752 FAX : 62-21-4584-0214

SUNSTAR MACHINERY HOCHIMINH BRANCH (VIETNAM)

#E23 Nguyen Thai Binh ST. W. 12 Tan Binh District,
Hochiminh City, Vietnam
TEL : 84-8-811-4141 FAX : 84-8-811-4588

SUNSTAR MACHINERY HANOI BRANCH (VIETNAM)

19 Son Tay. W. Dien Bien Ba Dinh Dist., Hanoi, Vietnam
TEL : 84-4-734-0268 FAX : 84-4-734-0278

WEB-SITE

[http : // www.sunstar.co.kr](http://www.sunstar.co.kr)

E-MAIL

sunstar@sunstar.co.kr
swf@sunstar.co.kr
fortuna@sunstar.co.kr



По вопросам приобретения или с целью консультации
вы можете обращаться по телефону: (495) 989-22-97
или по e-mail: info@krung.ru

Также предлагаем вам посетить
наш информационный сайт
www.krung.ru