



Данную детализировку для вас
предоставила компания **Крунг**

PARTS BOOK

KM-817/827

HIGH SPEED POST BED NEEDLE FEED
LOCK STITCH MACHINE

KM-816/826

HIGH SPEED POST BED DROP FEED
LOCK STITCH MACHINE



MODEL

- **KM-817**
HIGH SPEED POST BED 1-NEEDLE, NEEDLE FEED LOCK STITCH MACHINE
- **KM-827**
HIGH SPEED POST BED 2-NEEDLE, NEEDLE FEED LOCK STITCH MACHINE
- **KM-816**
HIGH SPEED POST BED 1-NEEDLE, DROP FEED LOCK STITCH MACHINE
- **KM-826**
HIGH SPEED POST BED 2-NEEDLE, DROP FEED LOCK STITCH MACHINE


CONTENTS

목 차

A	<i>Machine Body & Threading Mechanism</i> 외장 및 실장력 조절 관계.....	4
B	<i>Upper Shaft Mechanism</i> 상축 관계.....	6
C	<i>Needle Bar Rocking Mechanism</i> 바늘대 요동 관계.....	8
D	<i>Presser Foot & Knee Lifting Mechanism</i> 노루발 및 무릎올림 관계	10
E	<i>Feed Mechanism</i> 피이드 관계	12
F	<i>Post & Hook Mechanism</i> 포스트 및 훅 관계.....	14
G	<i>Lubrication</i> 급유 관계.....	16
H	<i>Lower Shaft Mechanism</i> 하축 관계.....	18
I	<i>Accessories</i> 액세서리	20
J	<i>Gauge Parts</i> 게이지 관계	21

Machine Body & Threading Mechanism

외장 및 실장력 조절 관계

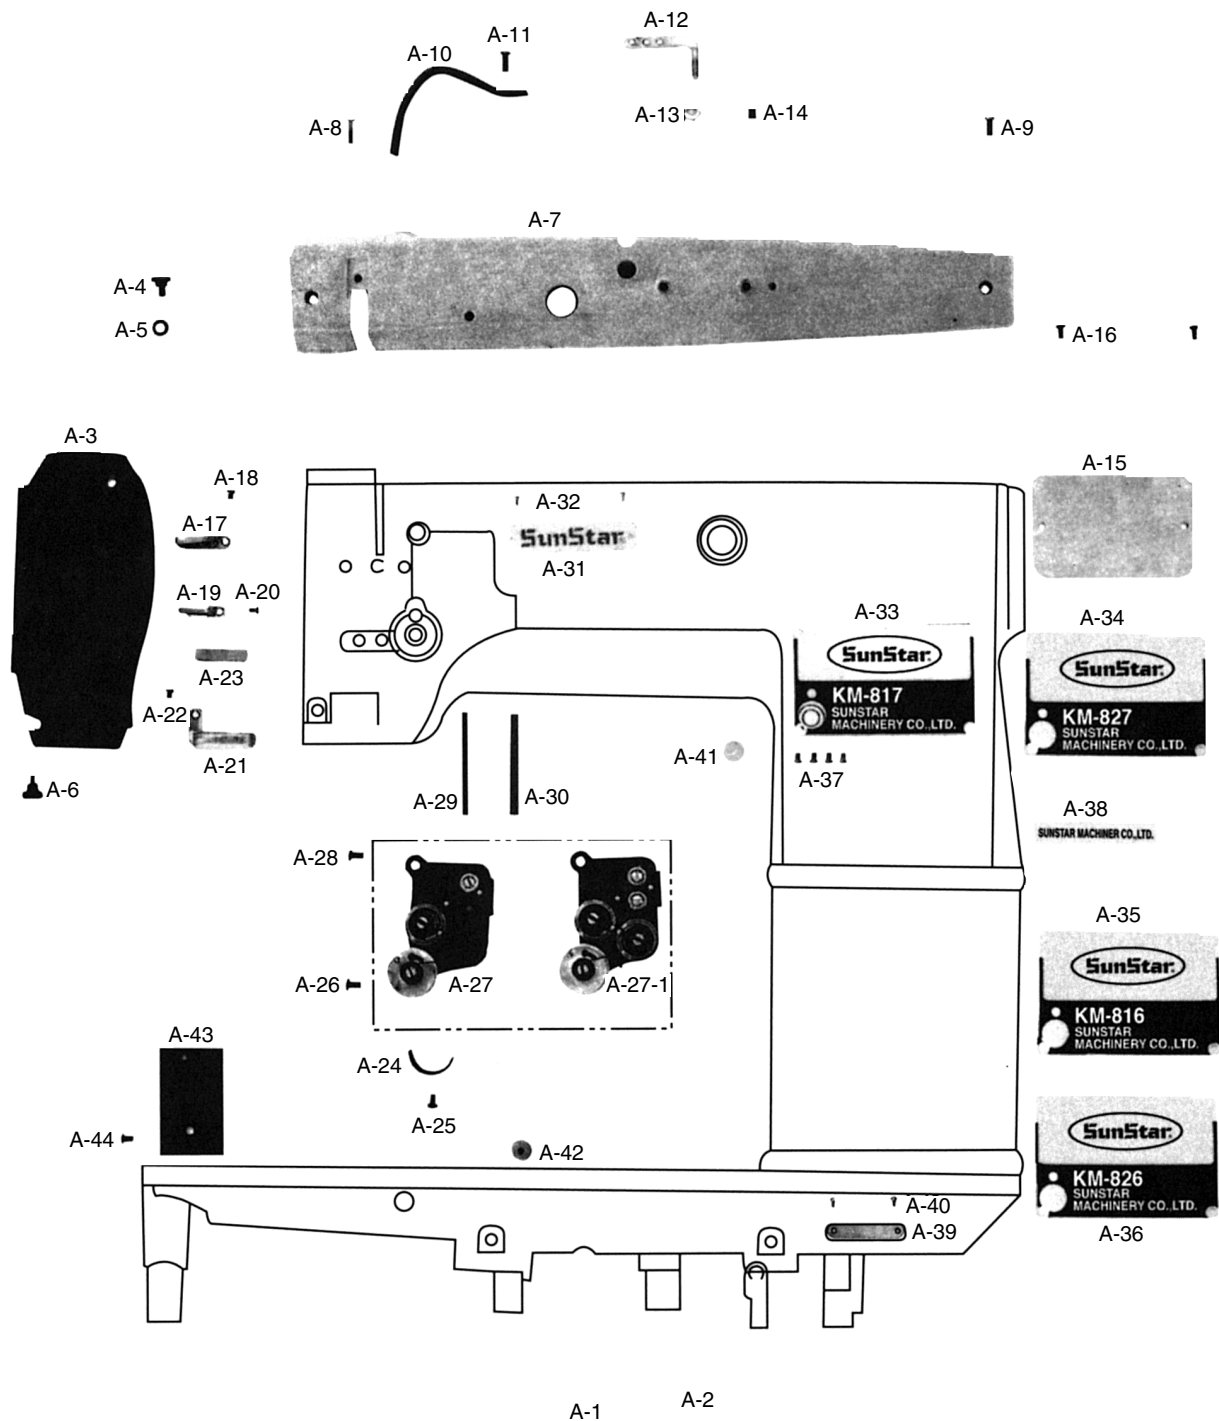




Ref. No.	Parts No.	Name of Parts	품 명	Q' ty				비 고
				KM-817	KM-827	KM-816	KM-826	
A-1	01-001A-8270	Arm, Arm Base, Bed Assembly	아암, 아암 받침, 베드(組)	1(Set)	1(Set)			
A-2	01-001A-8260	Arm, Arm Base, Bed Assembly	아암, 아암 받침, 베드(組)			1(Set)	1(Set)	
A-3	01-006A-7400	Face Plate	면판	1	1	1	1	
A-4	01-008S-7400	Screw(U) For A-3	면판 쥘나사(상)	1	1	1	1	
A-5	01-007W-7400	Washer(U) For A-3	면판 와셔	1	1	1	1	
A-6	SC-0322-7400	Screw (9/64" n = 40)	면판 쥘나사(하)(9/64" n = 40)	1	1	1	1	
A-7	01-011A-7400	Top Cover	윗뚜껑	1	1	1	1	
A-8	SC-0178-7400	Screw (11/64" n = 40)	윗뚜껑 쥘나사(좌)(11/64" n = 40)	1	1	1	1	
A-9	01-013S-7400	Screw (11/64" n = 40)	홈볼이 동근납작 작은나사(11/64" n = 40)	1	1	1	1	
A-10	01-010C-7400	Thread Take-Up Cover	실채기 커버	1	1	1	1	
A-11	SC-0171-2302	Screw (11/64" n = 40)	지그자그 브라켓 카바나사(11/64" n = 40)	1	1	1	1	
A-12	01-015A-7400	Top Cover Thread Guide	세구멍 실걸이	1	2	1	2	
A-13	SN-0121-7400	Nut (15/64" n = 28)	세구멍 실걸이 너트(15/64" n = 28)	1	2	1	2	
A-14	SC-0114-1230	Screw (15/64" n = 28)	실채기 힌지핀 나사(15/64" n = 28)	1		1		
A-15	01-014C-7400	Rear Cover	뒷뚜껑	1	1	1	1	
A-16	SC-0502-2302	Screw (9/64" n = 40)	윗뚜껑 고정판 고정나사(대) (9/64" n = 40)	2	2	2	2	
A-17	01-021C-7400	Arm Thread Guide(U)	실걸이(上)	1	1	1	1	
A-18	SC-0519-2302	Screw (9/64" n = 40)	마크 쥘나사(9/64" n = 40)	1	1	1	1	
A-19	01-022C-7400	Arm Thread Guide(M)	실걸이(下)	1	1	1	1	
A-20	SC-0519-2302	Screw (9/64" n = 40)	마크 쥘나사(9/64" n = 40)	1	1	1	1	
A-21	01-023C-7400	Arm Thread Guide(L)	윗실 헬트잡이	1	1	1	1	
A-22	SC-0519-2302	Screw (9/64" n = 40)	마크 쥘나사(9/64" n = 40)	1	1	1	1	
A-23	01-024M-7400	Felt For Upper Thread Supply	윗실 급유 헬트	1	1	1	1	
A-24	01-019C-7400	Stopper For Upperad Take-Up Spring	실조절 장치 스톱퍼	1	1	1	1	
A-25	SC-0531-2302	Screw (9/64" n = 40)	톱 카바 고정판 고정나사(소)(9/64" n = 40)	1	1	1	1	
A-26	SC-0543-2302	Screw (11/64" n = 40)	톱 카바 힌지 고정나사(11/64" n = 40)	1	1	1	1	
A-27	01-004A-8170	Thread Tension Control Assembly	실조절 장치(조)	1		1		
A-27-1	01-018A-7400	Thread Tension Control Assembly	실조절 장치(조)		1		1	
A-28	SC-0543-2302	Screw (11/64" n = 40)	톱 카바 힌지 고정나사(11/64" n = 40)	1	1	1	1	
A-29	01-026C-7400	Tension Release Bar	실 늦추기 축	1	1	1	1	
A-30	01-025C-7400	Pipe For A-29	동 파이프	1	1	1	1	
A-31	01-039M-3710	Brand Mark	브랜드 마크	1	1	1	1	
A-32	01-035P-7400	Pin For A-31	번호판 핀	2	2	2	2	
A-33	01-006M-8170	Model Mark (KM-817)	기종마크	1				
A-34	01-009M-8270	Model Mark (KM-827)	기종마크		1			
A-35	01-006M-8160	Model Mark (KM-816)	기종마크			1		
A-36	01-004M-8260	Model Mark (KM-826)	기종마크				1	
A-37	SC-0519-2302	Screw (9/64" n = 40)	마크 쥘나사(9/64" n = 40)	4	4	4	4	
A-38		Maker Mark	측면마크	1	1	1	1	
A-39	01-034M-7400	Machine Number Plate	번호판	1	1	1	1	
A-40	01-035P-7400	Pin For A-39	번호판 핀	2	2	2	2	
A-41	06-001C-7400	Rubber Cap	피이드 조절기 구멍 마개	1	1	1	1	
A-42	01-007R-8130	Oil Cap	고무마개(Hole)	1	1	1	1	
A-43	01-006A-8270	Slide Plate	각판	1	1	1	1	
A-44	SC-0501-2302	Screw (11/64" n = 40)	실채기 카바 나사(11/64" n = 40)	1	1	1	1	

Upper Shaft Mechanism

상축 관계

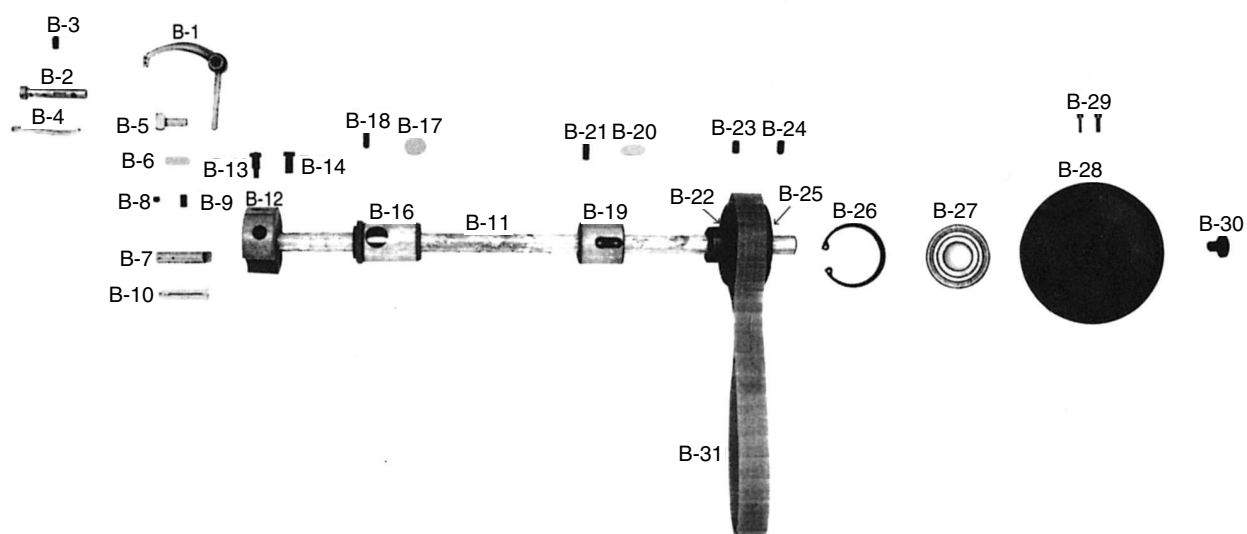




Ref. No.	Parts No.	Name of Parts	품 명	Q' ty				비 고
				KM-817	KM-827	KM-816	KM-826	
B-1	02-104A-8270	Thread Take-Up Lever	실채기	1	1	1	1	
B-2	02-001P-7400	Hinge Pin For Thread Take-Up Lever	실채기 핀	1	1	1	1	
B-3	SC-0507-1230	Screw (15/64" n=28)	상축 붓싱 고정나사(15/64" n=28)	1	1	1	1	
B-4	44-0000-1230	Oil Wick	유심	1	1	1	1	
B-5	02-103A-7400	Take-Up Lever Holder	실채기 잡이	1	1	1	1	
B-6	06-033M-7400	Wick For B-5	절환기 헬트	1	1	1	1	
B-7	02-104P-7400	Take-Up Lever Holder	실채기 잡이	1	1	1	1	
B-8	SC-A550-4517	Screw (1/4" n=40)	홈볼이 멈춤나사(1/4" n=40)	1	1	1	1	
B-9	SC-A308-4517	Screw (1/4" n=40)	육각구멍볼이 멈춤나사(1/4" n=40)	1	1	1	1	
B-10	44-0000-1230	Oil Wick	유심	1	1	1	1	
B-11	02-110A-7400	Upper Shaft	상축	1	1	1	1	
B-12	02-105A-7400	Link Cam	링크캠	1	1	1	1	
B-13	SC-0123-1230	Screw (9/32" n=28)	링크캠 꺾나사(9/32" n=28)	1	1	1	1	
B-14	SC-0124-7400	Screw (9/32" n=28)	상축 앞 붓싱 고정나사(9/32" n=28)	1	1	1	1	
B-16	02-108A-7400	Upper Shaft Bushing (F)	상축 앞 붓싱	1	1	1	1	
B-17	02-009M-7400	Felt For B-16	상축 앞 붓싱 헬트	1	1	1	1	
B-18	SC-0514-7400	Screw (15/64" n=28)	상축 붓싱 고정나사(15/64" n=28)	1	1	1	1	
B-19	02-111A-7400	Upper Shaft Bushing (M)	상축 중붓싱	1	1	1	1	
B-20	02-012M-7400	Felt For B-19	상축 중붓싱 헬트	1	1	1	1	
B-21	SC-0507-1230	Screw (15/64" n=28)	상축 붓싱 고정나사(15/64" n=28)	1	1	1	1	
B-22	02-002A-8270	Timing Belt Pulley (U)	타이밍 폴리(상)	1	1	1	1	
B-23	SC-A308-4517	Screw (1/4" n=40)	육각구멍볼이 멈춤나사(1/4" n=40)	1	1	1	1	
B-24	SC-A117-4417	Screw (1/4" n=40)	육각구멍볼이 멈춤나사(1/4" n=40)	1	1	1	1	
B-25	02-015C-7400	Side Ring	후렌치	2	2	2	2	
B-26	02-018G-7400	Stop Ring (C)	베어링 스냅링(47)	1	1	1	1	
B-27	02-019A-7400	Bearing (6204ZZ)	6204 베어링	1	1	1	1	
B-28	02-003A-8270	Pulley	폴리	1	1	1	1	
B-29	SC-0150-2500	Screw (15/64" n=28)	폴리 고정나사(15/64" n=28)	2	2	2	2	
B-30	SC-0188-1230	Screw (5/16" n=24)	폴리 큰나사(5/16" n=24)	1	1	1	1	
B-31	02-001A-8270	Timing Belt	타이밍 벨트	1	1	1	1	



Needle Bar Rocking Mechanism

바늘대 요동 관계

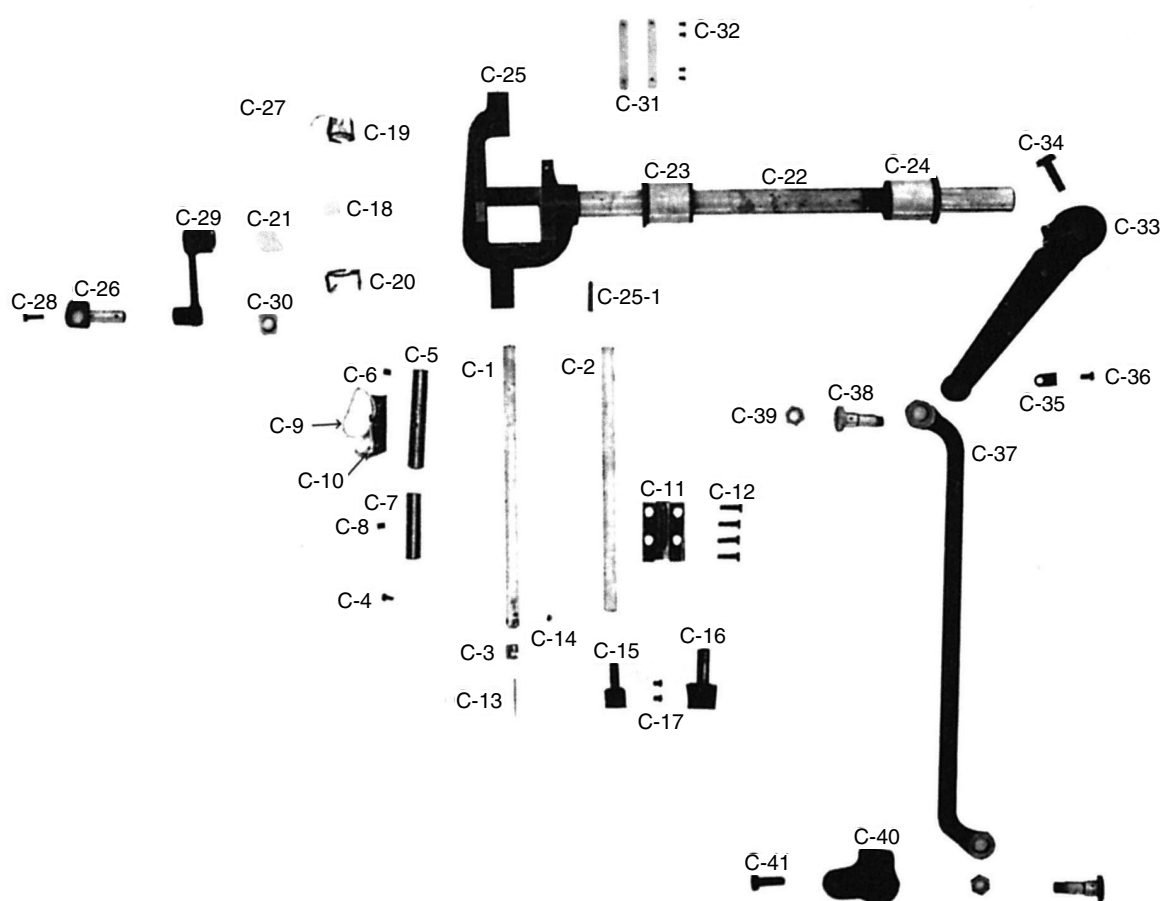




Ref. No.	Parts No.	Name of Parts	품 명	Q' ty				비 고
				KM-817	KM-827	KM-816	KM-826	
C-1	04-101A-8170	Needle Bar	바늘대	1		1		
C-2	04-101A-7500	Needle Bar	바늘대		1	1	1	
C-3	04-002C-8170	Needle Bar Thread Guide	바늘대 실걸이	1		1		
C-4	SC-0125-5607	Screw (3/32" n=56)	바늘대 실안내 쥘나사(3/32" n=56)	1		1		
C-5	04-107A-8260	Needle Bar Bushing(U)	바늘대 상붓싱			1	1	
C-6	SC-0110-1230	Screw (15/64" n=28)	바늘대 붓싱나사(15/64" n=28)			1	1	
C-7	04-108A-8260	Needle Bar Bushing(L)	바늘대 하붓싱			1	1	
C-8	SC-0110-1230	Screw (15/64" n=28)	바늘대 붓싱나사(15/64" n=28)			1	1	
C-9	44-0000-1230	Oil Wick	유심			1	1	
C-10	04-002C-8260	Holder For C-9	바늘대 유심잡이			1	1	
C-11	04103A-8260	Needle Bar Crank Guide	바늘대 크랭크 안내			1	1	
C-12	SC-0497-1230	Screw (3/16" n=28)	들대(전) 고정나사(3/16" n=28)			4	4	
C-13		Needle	바늘	1	1	1	1	
C-14	SC-A131-4522	Screw (1/8" n=44)	홈볼이 납작 작은나사(1/8" n=44)	1		1		
C-15	02-121A-7400	Needle Clamp 3/32:(Flat Presser Type)	침치(3/32)		1			
C-16	04-001A-8260	Needle Clamp 3/32:(Roller Presser Type)	침지(3/32)				1	
C-17	SC-0160-5607	Screw (9/64" n=40)	바늘 쥘나사(9/64" n=40)		2		2	
C-18	44-0000-1230	Oil Wick	유심	1	1			
C-19	04-012C-7400	Wick Holder(U) For C-18	요동축 유심잡이(上)	1	1			
C-20	04-013C-7400	Wick Holder(L) For C-18	요동축 유심잡이(下)	1	1			
C-21	44-107M-7900	Felt For Needle Bar Frame	바늘대 급유 헬트(A)	1	1			
C-22	04-110A-7400	Needle Bar Rock Shaft	요동축	1	1			
C-23	04-111A-7400	Needle Bar Rock Shaft Bushing(F)	요동축 앞붓싱	1	1			
C-24	04-114A-7400	Needle Bar Rock Shaft Bushing(R)	요동축 뒷붓싱	1	1			
C-25	04-006A-7400	Needle Bar Frame	바늘대 후레임	1	1			
C-25-1	04-102A-7400	Taper Pin	바늘대 후레임 고정핀	1	1			
C-26	04-102A-7400	Needle Bar Clamp	바늘대 잡이	1	1	1	1	
C-27	06-033M-7400	Felt For C-26	절환기 헬트	1	1	1	1	
C-28	SC-0158-3710	Screw (9/64" n=40)	홈볼이 납작 작은나사(9/64" n=40)	1	1	1	1	
C-29	04-004A-7400	Needle Bar Crank	바늘대 크랭크	1	1	1	1	
C-30	04-105A-7400	Needle Bar Guide Slide Block	바늘대 안내블럭	1	1	1	1	
C-31	04-107A-7400	Needle Bar Guide Plate	보강판	2	2			
C-32	SC-0116-7400	Screw (3/32" n=56)	안내판 고정나사(3/32" n=56)	4	4			
C-33	04-119A-7400	Needle Bar Rock Shaft Connecting Rod	바늘대 요동축 연결로드	1	1			
C-34	04-020S-7400	Screw For C-33	요동 로드 쥘나사	1	1			
C-35	04-021C-7400	Wick Holder	유심잡이(2-51)	1	1			
C-36	SC-0531-2302	Screw (9/64" n=40)	톱카바 고정판 고정나사(9/64" n=40)	1	1			
C-37	04-101A-8270	Needle Bar Rock Link	바늘대 요동링크	1	1			
C-38	04-016S-7400	Stud Screw For C-37	요동링크 단나사	2	2			
C-39	SN-0109-3710	Nut (5/16" n=24)	지그자그 조절 스톱퍼 너트(5/16" n=24)	2	2			
C-40	04-102A-8270	Needle Bar Rock Crank	요동축 크랭크	1	1			
C-41	SC-0523-7400	Screw (1/4" n=28)	요동 크랭크 쥘나사(1/4" n=28)	1	1			

Presser Foot & Knee Lifting Mechanism


노루발 및 무릎올림 관계

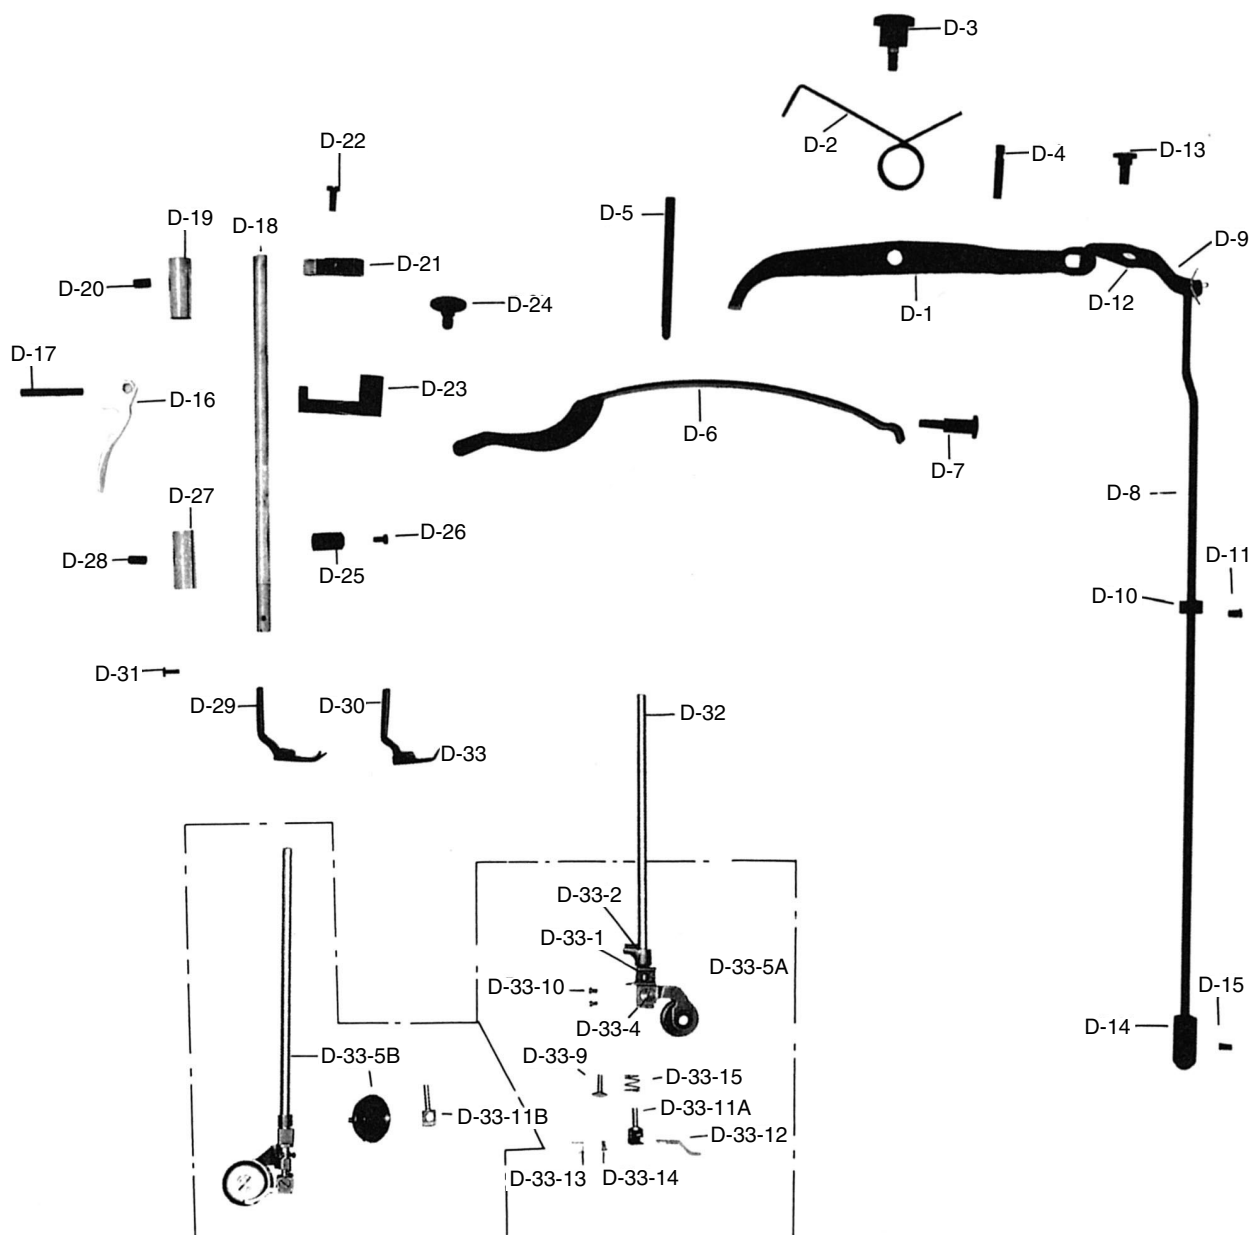

Ref. No.	Parts No.	Name of Parts	품 명	Q' ty				비 고
				KM-817	KM-827	KM-816	KM-826	
D-1	05-011A-7400	Knee Lifting Lever	무릎 올림 레버	1	1	1	1	
D-2	05-014G-7400	Return Spring for D-1	무릎 올림 레버 스프링	1	1	1	1	
D-3	05-013S-7400	Stud Screw for D-1	무릎 올림 레버 힌지 나사	1	1	1	1	
D-4	05-012S-7400	Stopper for D-2	무릎 올림 레버 스프링 걸이 나사	1	1	1	1	
D-5	05-015S-7400	Presser Adjusting Screw	압력 조절나사	1	1	1	1	
D-6	05-116G-7400	Presser Bar Plate Spring	누름대 판 스프링	1	1	1	1	
D-7	05-017S-7400	Hinge Screw for D-6	누름대 판 스프링 단나사	1	1	1	1	
D-8	05-001C-8270	Knee Lifting Rod	무릎 올림봉	1	1	1	1	
D-9	05-020P-2302	Pin for D-8	분할핀	1	1	1	1	
D-10	05-021A-7400	Collar for D-8	무릎 올림봉 카라	1	1	1	1	
D-11	SC-0128-7400	Screw(11/64" n=40)	인봉카라 쥘나사 (11/64" n=40)	1	1	1	1	
D-12	05-018C-7400	Knee Lifter Link	무릎 올림 레버 연결 링크	1	1	1	1	
D-13	05-019S-7400	Stud Screw for D-12	연결 링크 단나사	1	1	1	1	
D-14	05-022A-7400	Knee Lifting Roller Bracket Assembly	로올러(조)	1Set	1Set	1Set	1Set	
D-15	SC-0542-1230	Screw(11/64" n=40)	실늑추기 고정나사(11/64" n=40)	1	1	1	1	
D-16	05-006A-7400	Presser Bar Lifter	누름대 올리기	1	1	1	1	
D-17	05-007S-7400	Hinge Pin for D-16	누름대 올리기 힌지나사	1	1	1	1	
D-18	05-101A-7400	Flat Presser Bar	누름대	1	1			
D-19	05-102A-7400	Presser Bar Bushing(U)	누름대 붓싱(上)	1	1	1	1	
D-20	SC-0507-1230	Screw(15/64" n=28)	상축 붓싱 고정나사(15/64" n=28)	1	1	1	1	
D-21	05-103A-7400	Presser Bar Holder	누름대 잡이 (K3300)	1	1	1	1	
D-22	SC-A174-4122	Screw(11/64" n=40)	홈볼이 납작 작은나사(11/64" n=40)	1	1	1	1	
D-23	05-104A-7400	Presser Bar Lifter Bracket	누름대 올리기 브라켓(K008)	1	1	1	1	
D-24	05-005S-7400	Stud Screw for D-23	누름대 올리기 단나사	1	1	1	1	
D-25	05-008A-7400	Hook for Presser Bar Plate Spring	누름대 판 스프링 걸이(K009)	1	1	1	1	
D-26	SC-0158-3710	Screw(9/64" n=40)	면판 쥘나사 (15/64" n=40)	1	1	1	1	
D-27	05-009A-7400	Presser Bar Bushing(L)	누름대 붓싱(下)	1	1	1	1	
D-28	SC-0507-1230	Screw(15/64" n=28)	상축붓싱 고정나사(15/64" n=28)	1	1	1	1	
D-29	05-001A-8170	Flat Presser Foot	노루발	1		1		
D-30	05-210A-7400	Flat Presser Foot	노루발		1		1	
D-31	SC-0315-2302	Screw(9/64" n=40)	노루발 쥘나사(9/64" n=40)	1	1	1	1	
D-32	05-101A-8260	Roller Presser Bar	누름대			1	1	
D-33-1	81-004A-8260	Roller Presser Bracket	로올러 노루발 브라켓			1	1	D-33A Roller Presser Foot(S) Assembly
D-33-4	SC-0199-2700	Screw(11/64" n=40)	솔레노이드 부착 카바나사(11/64" n=40)			1	1	
D-33-5A	81-011A-8260	Roller Presser Foot(S)	노루발(로올러) ϕ 23			1	1	
D-33-5B	05-017A-8150	Roller Presser Foot(L)	로올러 노루발 ϕ 32			1	1	
D-33-9	04-005P-8260	Stopper Pin for D-33-1	브라켓 스톱퍼 핀			1		D-33B Roller Presser Foot(L) Assembly
D-33-10	SC-0160-5607	Screw(9/64" n=40)	바늘 쥘나사(9/64" n=40)			2	2	
D-33-11A	81-017A-8260	Needle Guide Holder(S)	로올러 노루발 바늘안내 홀더(小)				1	
D-33-11B	81-007A-8260	Needle Guide Holder(L)	로올러 노루발 바늘안내 홀더(大)				1	
D-33-12	81-006A-8260	Needle Guide	로올러 노루발 바늘안내 (3/32)				1	
D-33-13	81-005W-8260	Washer for D-33-12	로올러 노루발 홀더 와셔				1	
D-33-14	SC-0130-1230	Screw(1/8" n=44)	톱니 쥘나사 (1/8" n=44)				1	
D-33-15	04-004G-8260	Spring for D-33-1	브라켓 스프링			1	1	

Feed Mechanism

피이드 관계

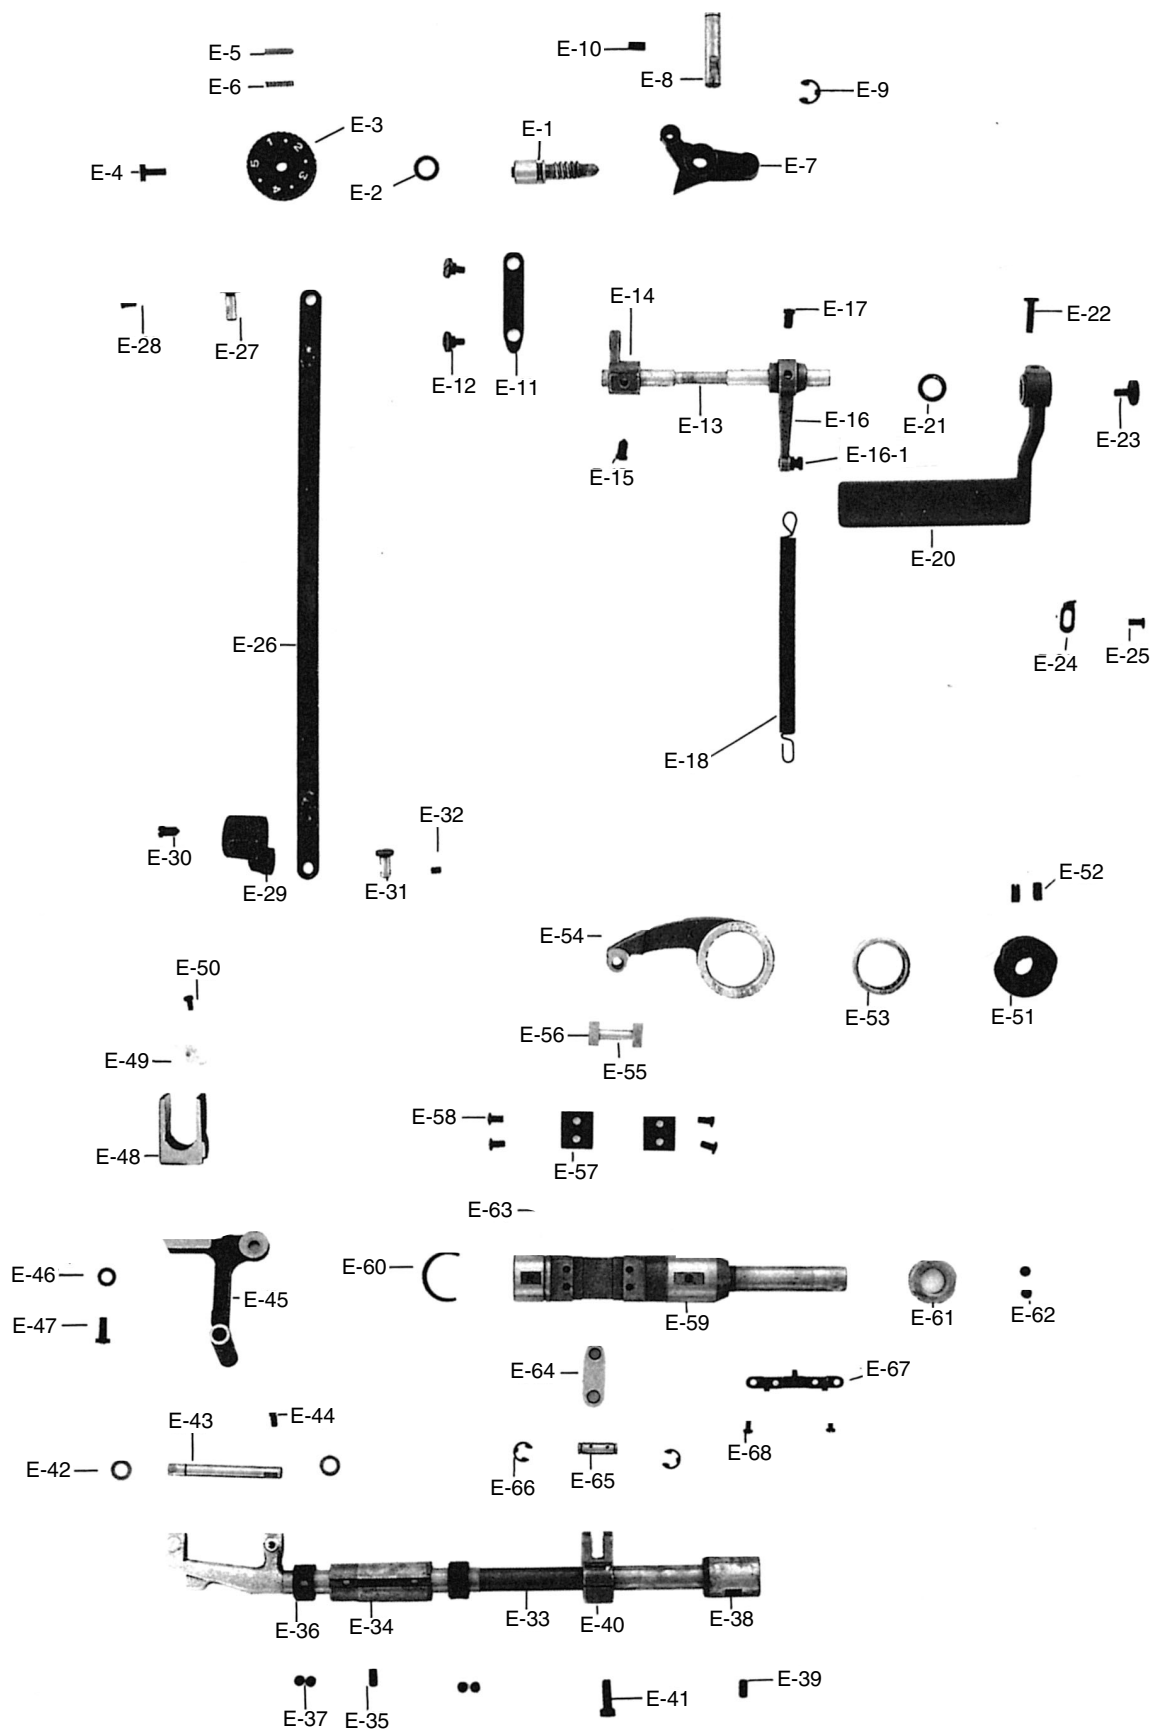




Ref. No.	Parts No.	Name of Parts	품명	Q' ty				비고
				KM-817	KM-827	KM-816	KM-826	
E-1	06-010A-7400	Feed Regulator Dial Shaft	다이알 축	1	1	1	1	
E-2	06-010R-1230	O-Ring For E-1	다이알 축 오링	1	1	1	1	
E-3	06-001A-7500	Length Control Dial Plate	다이알 문자판(5)	1	1	1	1	
E-4	SC-0193-1230	Screw(3/16" n=28)	다이알 판 쥘나사(3/16" n=28)	1	1	1	1	
E-5	06-012P-7400	Pin For E-3	다이알 핀	1	1	1	1	
E-6	06-027G-7400	Spring For E-3	다이알 스프링	1	1	1	1	
E-7	06-104A-7400	Feed Regulator	피이드 조절기	1	1	1	1	
E-8	06-002P-7400	Feed Regulator Stud	피이드 조절기 힌지핀	1	1	1	1	
E-9	06-003C-7400	E-Ring(φ 7)	피이즈 조절기 힌지핀 E링 7	1	1	1	1	
E-10	SC-0507-1230	Screw(15/64" n=28)	상축 볼트 고정나사(15/64" n=28)	1	1	1	1	
E-11	06-005C-7400	Feed Regulator Connecting Link	피이드 조절기 연결링크	1	1	1	1	
E-12	06-006S-7400	Stud Screw For E-11	피이드 조절기 연결링크 단나사	2	2	2	2	
E-13	06-102A-8270	Reverse Lever Shaft	역진 레버 축	1	1	1	1	
E-14	06-107A-7400	Reverse Lever Shaft Crank	역진 레버 크랭크	1	1	1	1	
E-15	SC-0330-7400	Screw(15/64" n=28)	역진 레버 크랭크 쥘나사(15/64" n=28)	1	1	1	1	
E-16	06-217A-7400	Link For Reverse Lever Spring	역진 레버 축 스프링걸이	1	1	1	1	
E-16-1	06-018P-7400	Roller For Spring Hook	역진 레버 축 스프링걸이 핀	1	1	1	1	
E-17	SC-0122-1230	Screw(15/64" n=28)	톱니 받침 축 고정나사(15/64" n=28)	1	1	1	1	
E-18	06-003G-8270	Reverse Lever Return Spring	역진 레버 스프링	1	1	1	1	
E-20	06-020A-7400	Reverse Lever	역진 레버	1	1	1	1	
E-21	06-021W-7400	Washer For E-20	역진 레버 와셔	1	1	1	1	
E-22	SC-0186-1230	Screw(3/16" n=32)	역진 레버 고정나사(3/16" n=32)	1	1	1	1	
E-23	SC-0185-1230	Screw(3/16" n=32)	레버 덮개 나사(3/16" n=32)	1	1	1	1	
E-24	06-022C-7400	Stopper For E-20	역진 레버 스톱퍼	1	1	1	1	
E-25	SC-0543-2302	Screw(11/64" n=40)	톱 카바 힌지 고정나사(11/64" n=40)	1	1	1	1	
E-26	06-004A-8270	Feed Regulator Connecting Rod	절환기 연결 로드	1	1	1	1	
E-27	06-026P-7400	Pin(A) For E-26	절환기 연결 로드 핀(A)	1	1	1	1	
E-28	SC-0128-7400	Screw(11/64" n=40)	인봉 카라 쥘나사(11/64" n=40)	1	1	1	1	
E-29	06-105A-8270	Feed Regulator Shaft Crank	절환기 크랭크	1	1	1	1	
E-30	SC-0330-7400	Screw(15/64" n=28)	역진 레버 크랭크 쥘나사(15/64" n=28)	1	1	1	1	
E-31	06-112A-7500	Pin(B) For E-26	피이드 조절기 편심축(B)	1	1	1	1	
E-32	SC-0542-1230	Screw(11/64" n=40)	실 늦추기 고정나사(11/64" n=40)	1	1	1	1	
E-33	06-179A-5607	Feed Rock Shaft	수평밀대	1	1	1	1	
E-34	06-143A-7400	Feed Rock Shaft Bushing(F)	수평밀대 전볼트	1	1	1	1	
E-35	SC-0514-7400	Screw(15/64" n=28)	상축 앞볼트 고정나사(15/64" n=28)	1	1	1	1	
E-36	06-142A-7400	Collar For E-33	수평밀대 카라	2	2	2	2	
E-37	SC-A129-4515	Screw(1/4" n=40)	흡볼이 멈춤나사(1/4" n=40)	4	4	4	4	
E-38	06-139A-7400	Feed Rock Shaft Bushing(R)	수평밀대 후볼트	1	1	1	1	
E-39	SC-0514-7400	Screw(15/64" n=28)	상축 앞볼트 고정나사(15/64" n=28)	1	1	1	1	
E-40	06-141A-7400	Feed Rock Shaft Crank	수평밀대 크랭크	1	1	1	1	
E-41	SC-0253-7400	Screw(1/4" n=28)	요동 크랭크 쥘나사(1/4" n=28)	1	1	1	1	
E-42	06-046W-7400	Washer For E-43	톱니 받침 와셔	2	2	2	2	
E-43	06-147A-7400	Feed Bar Shaft	톱니 받침 축	1	1	1	1	
E-44	SC-0128-7400	Screw(11/64" n=40)	인봉 카라 쥘나사(11/64" n=40)	1	1	1	1	
E-45	06-106A-8270	Feed Bar	톱니 받침	1	1	1	1	
E-46	06-051W-7400	Washer For E-48	포크 쥘나사 와셔	1	1	1	1	
E-47	SC-0106-7400	Screw(15/64" n=28)	포트 쥘나사(육각) (15/64" n=28)	1	1	1	1	
E-48	06-152A-7400	Feed Bar Fork	톱니 받침 포크(KSM004)	1	1	1	1	
E-49	06-053M-7400	Felt For E-48	포크 헬트	1	1	1	1	
E-50	SC-0531-2302	Screw(9/64" n=40)	톱 카바 고정판 고정나사(9/64" n=40)	1	1	1	1	
E-51	06-138A-7400	Feed Cam	피이드 캠	1	1	1	1	
E-52	SC-A308-4517	Screw(15/64" n=28)	육각구멍볼이 멈춤나사(15/64" n=40)	2	2	2	2	
E-53	06-036A-7400	Needle Bearing	니이들 베어링	1	1	1	1	
E-54	06-135A-7400	Feed Cam Connecting Rod	베어링 로드	1	1	1	1	
E-55	06-032P-7400	Slide Block Shaft	베어링 로드 연결핀	1	1	1	1	
E-56	06-131A-7400	Slide Block	슬라이드 블럭	2	2	2	2	
E-57	06-030C-7400	Slide Block Guide Plate	슬라이드 블럭 안내판	2	2	2	2	
E-58	SC-0543-2302	Screw(11/64" n=40)	톱 카바 고정판 고정나사(11/64" n=40)	4	4	4	4	
E-59	06-129A-7400	Feed Regulator Shaft	절환기 몸체	1	1	1	1	
E-60	06-034W-7400	Stop Ring C	절환기 와셔	1	1	1	1	
E-61	02-121A-1230	Collar For E-59	상축 카라	1	1	1	1	
E-62	SC-A129-4515	Screw(1/4" n=40)	흡볼이 멈춤나사(1/4" n=40)	2	2	2	2	
E-63	06-033M-7400	Felt	절환기 헬트	4	4	4	4	
E-64	06-137A-7400	Level Feed Connecting Link	수평 피이드 연결링크(KS007)	1	1	1	1	
E-65	06-040P-7400	Stud For E-40	연결핀	1	1	1	1	
E-66	06-020C-7400	E-Ring (φ 6)	E링 (φ 6)	2	2	2	2	
E-67	44-025C-7400	Wick Holder For E-59	절환기 유심잡이	1	1	1	1	
E-68	SC-0549-2302	Screw(1/8" n=44)	바늘대 후레임 실결이 나사(1/8" n=44)	2	2	2	2	

Post & Hook Mechanism

포스트 및 훅 관계

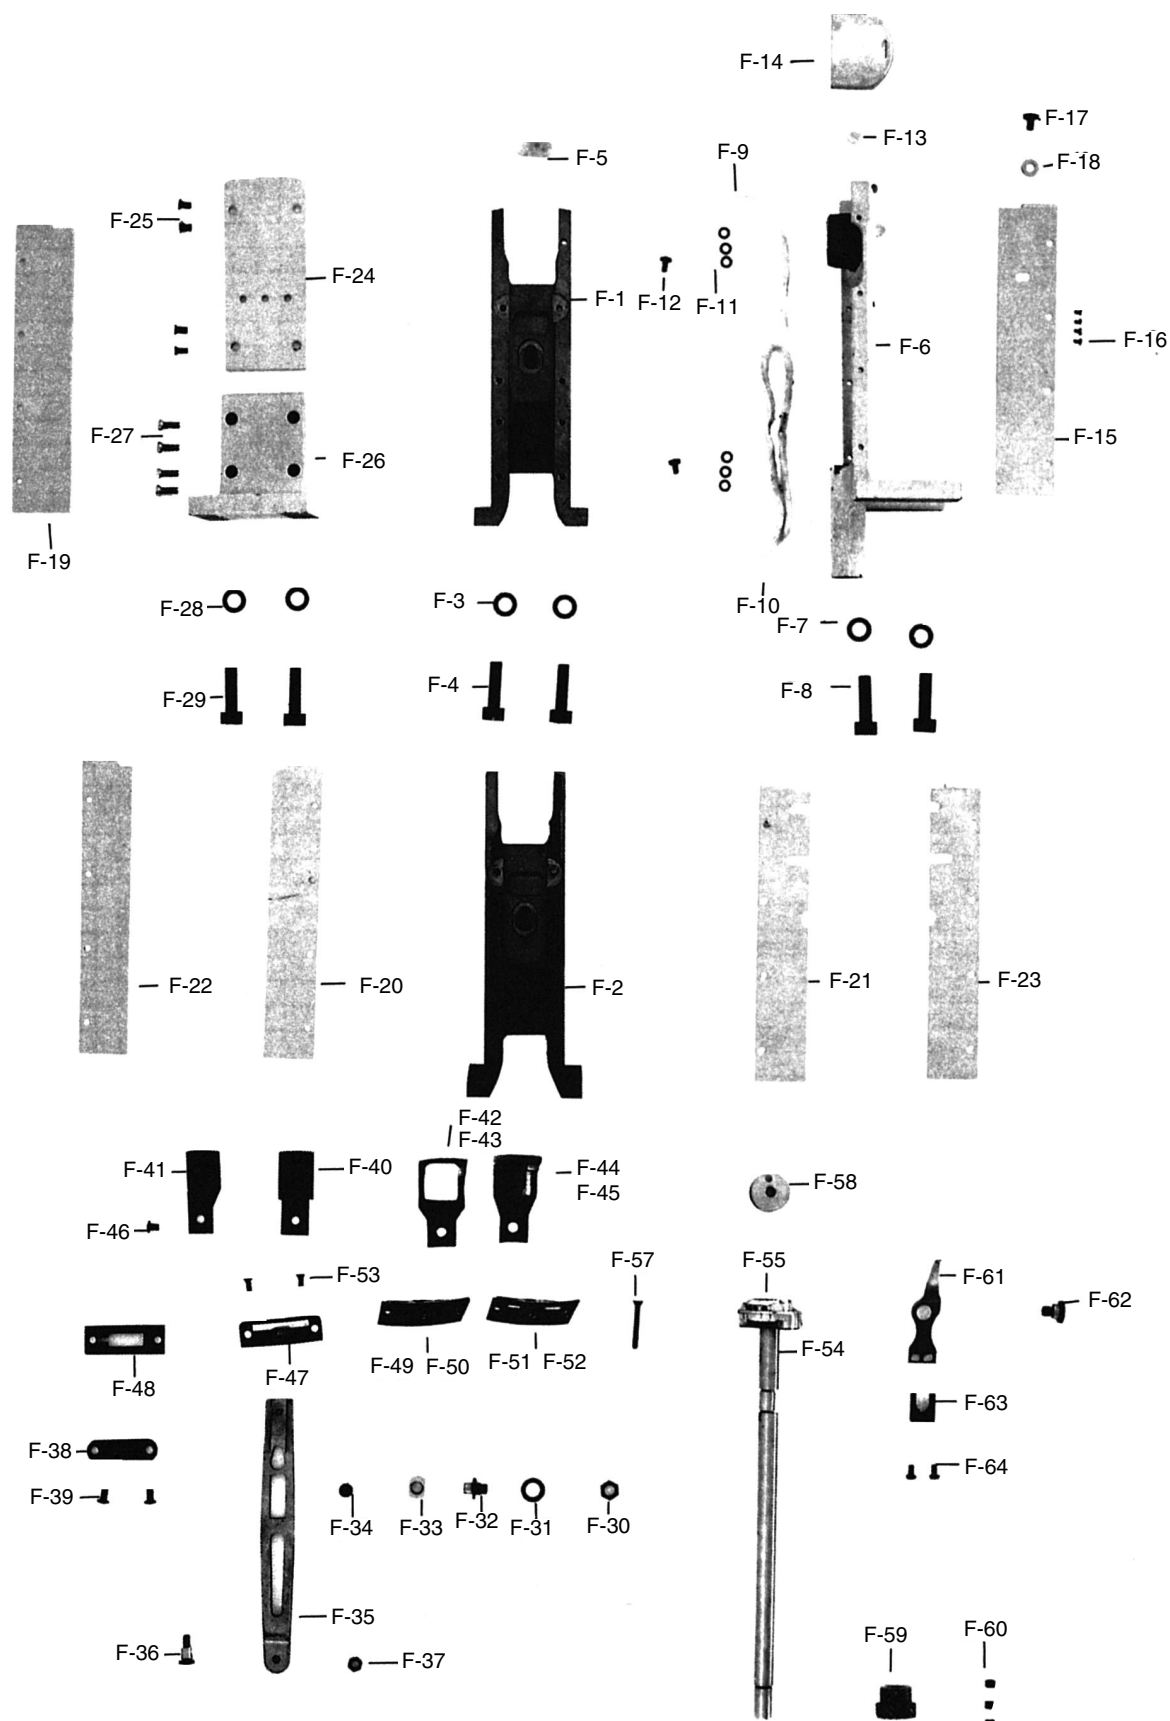


Ref. No.	Parts No.	Name of Parts	품 명	Q' ty				비 고
				KM-817	KM-827	KM-816	KM-826	
F-1	09-118A-8170	Post(KM-817, 816)	포스트	1		1		
F-2	09-118A-8270	Post(KM-827, 826)	포스트		1		1	
F-3	09-025W-8270	Washer for F-1, F-2	새들 쥘나사 와셔	2	4	2	4	
F-4	SC-0344-8160	Screw(5/16" n=24)	포스크 고정나사(5/16" n=24)	2	4	2	4	
F-5	06-053M-7400	Felt for Feed Dog Lever	포크 헬트	1	1	1	1	
F-6	09-020A-8270	Saddle	새들	1	2	1	2	
F-7	09-025W-8270	Washer for F-6	새들 쥘나사 와셔	2	4	2	4	
F-8	SC-0326-8260	Screw(5/16" n=24)	새들 쥘나사(5/16" n=24)	2	4	2	4	
F-11	02-019W-1230	Washer for F-10	상축 헬트 와셔	6	12	6	12	
F-12	SC-0365-3710	Screw(9/64" n=40)	면판 측면 카바나사(하) (9/64" n=40)	2	4	2	4	
F-13	02-009M-7400	Felt for F-6	상축 앞 붓싱 헬트	1	2	1	2	
F-14	GP-010492-00	Hook Cover	가마축 슬라이드	1	2	1	2	
F-15	09-123C-8170	Post Cover(F)	포스트 커버(前)	1		1		
F-16	SC-A301-4119	Screw(9/64" n=40)	홉블이 절시 작은나사(9/64" n=40)	8	16	8	16	
F-17	SC-0537-8260	Screw(3/16" n=32)	포스트 고정나사(대)(3/16" n=32)	1	3	1	3	
F-18	01-023C-3710	Washer for F-17	와셔5	1	4	1	4	
F-19	09-124C-8170	Post Cover(R)	포스트 커버(後)	1		1		
F-20	09-124C-8270	Post Lever Cover(F)	포스트 커버(후)		1		1	
F-21	09-121C-8270	Post Right Cover(F)	포스트 커버(좌)		1		1	
F-22	09-123C-8270	Post Left Cover(R)	포스트 커버(전)		1		1	
F-23	09-122C-8270	Post Right Cover(R)	포스트 커버(우)		1		1	
F-24	09-001A-8170	Post Cover	포스트 커버(좌)	1		1		
F-25	SC-0501-2302	Screw(11/64" n=40)	실채기 카바나사(11/64" n=40)	4		4		
F-26	09-002A-8170	Post Support	포스트 받침	1		1		
F-27	SC-0179-3710	Screw(11/64" n=40)	윗뚜껑 쥘나사(11/64" n=40)	4		4		
F-28	09-025W-8270	Washer for F-29	새들 쥘나사 와셔	2		2		
F-29	SC-0326-8260	Screw(5/16" n=24)	새들 쥘나사(5/16" n=24)	2		2		
F-30	SN-0116-3400	Nut(1/4" n=40)	수평 운동조절 축 너트(1/4" n=40)	1	1	1	1	
F-31	09-009W-8270	Washer for F-32	슬라이드 블럭 와셔	1	1	1	1	
F-32	09-006S-8270	Slide Block Shaft	슬라이드 블럭 나사	1	1	1	1	
F-33	09-107A-8270	Slide Block	톱니 레버 슬라이드 블럭	1	1	1	1	
F-34	09-008S-8270	Screw for F-33	슬라이드 블럭 마감 나사	1	1	1	1	
F-35	09-011A-8270	Feed Dog Lever	톱니 레버	1	1	1	1	
F-36	06-008S-8270	Stud Screw for Feed Bar	톱니 받침 나사	1	1	1	1	
F-37	SN-0115-7400	Nut(3/16" n=32)	오프너 너트(3/16" n=32)	1	1	1	1	
F-38	09-005C-8270	Guide Plate for F-35	톱니 레버 보강판	1	1	1	1	
F-39	SC-0543-2302	Screw(11/64" n=24)	톱 카바 한지 고정나사(11/64" n=40)	2	2	2	2	
F-40	06-001A-8170	Feed Dog(KM-817)	톱니	1				
F-41	06-012A-8270	Feed Dog(KM-827)	톱니(3/32)		1			
F-42	06-001A-8160	Feed Dog(Roller Presser Type)	톱니(로울러 노루발용)			1		
F-43	06-001A-8260	Feed Dog(Roller Presser Type)	톱니				1	
F-44	06-011A-8160	Feed Dog(Flat Presser Type)	톱니(평노루발용)			1		
F-45	06-001A-8260	Feed Dog(Roller Presser Type)	톱니				1	
F-46	SC-0543-2302	Screw(1/8" n=44)	톱 카바 한지 고정나사(1/8" n=44)	1	1	1	1	
F-47	01-005A-8170	Needle Plate(KM-817)	침판	1				
F-48	01-004A-8270	Needle Plate(KM-827)	침판(3/32)		1			
F-49	01-005A-8160	Needle Plate(Roller Presser Type)	침판(로울러 노루발용)			1		
F-50	01-005A-8260	Needle Plate(Roller Presser Type)	침판(3/32)				1	
F-51	01-015A-8160	Needle Plate(Flat Presser Type)	침판(평노루발용)	1				
F-52	01-015S-8260	Needle Plate(Flat Presser Type)	침판(3/16)		1			
F-53	SC-0310-8130	Screw(9/64" n=40)	침판 나사(9/64" n=40)	2	2	2	2	
F-54	09-113A-8270	Hook Shaft	훅 축	1	2	1	2	
F-55	09-036A-8570	Rotary Hook Assembly	가마	1Set	2Set	1Set	2Set	
F-57	SC-0147-8270	Screw(9/64" n=40)	가마 고정나사(9/64" n=40)	1	2	1	2	
F-58	09-130A-7400	Bobbin	보빈	1	2	1	2	
F-59	09-002A-7400	Rotary Hook Gear	기어(소)	1	2	1	2	
F-60	SC-A550-4517	Screw(1/4" n=40)	홉블이 멈춤나사(1/4" n=40)	3	6	3	6	
F-61	09-114A-8270	Opener	오프너	1	2	1	2	
F-62	09-015S-8270	Stud Screw for F-61	오프너 단나사	1	2	1	2	
F-63	09-116A-8270	Fork for F-61	오프너 블럭	1	2	1	2	
F-64	SC-0502-2302	Screw (9/64" n=40)	윗뚜껑 고정판 고정나사(대)(9/64" n=40)	2	4	2	4	



Lubrication

급유 관계

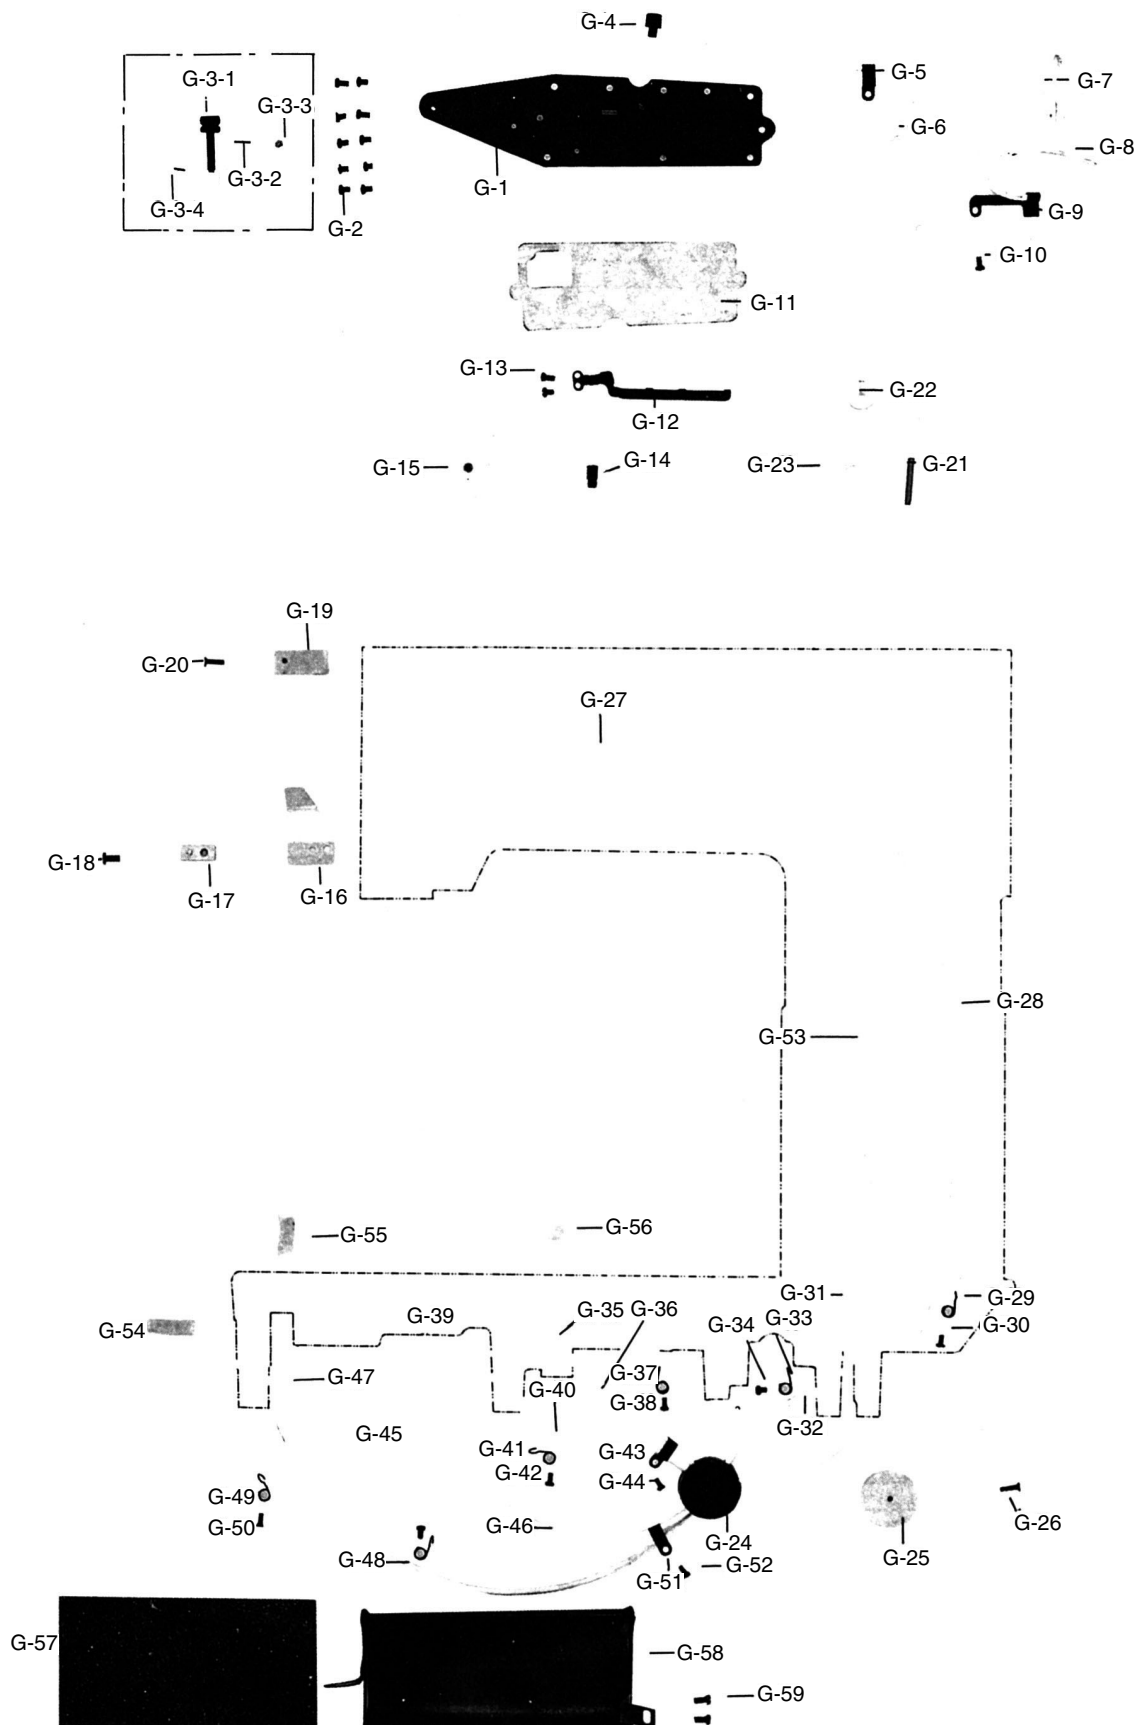




Ref. No.	Parts No.	Name of Parts	품 명	Q' ty				비 고
				KM-817	KM-827	KM-816	KM-826	
G-1	44-001A-7400	Oil Receive Plate	기름 받침판	1	1	1	1	
G-2	SC-0502-2302	Screw(9/64" n=40)	윗뚜껑 고정판 고정나사(대)(9/64" n=40)	10	10	10	10	
G-3-1	44-006A-7400	Oil Adjusting Knob	오일 조절축	1	1	1	1	
G-3-2	44-007P-7400	Pin(A) For G-3-1	오일 조절 축핀(대)	1	1	1	1	
G-3-3	44-008W-7400	Washer For G-3-2	오일 조절 축 와셔	1	1	1	1	
G-3-4	44-008P-7400	Pin(B) For G-3-1	오일 조절 축핀(소)	2	2	2	2	
G-4	44-012R-7400	Cap For Oil Inlet	주유구 마개(6-8)	1	1	1	1	
G-5	44-011C-7400	Felt Presser	유심 헬트 고정판(6-7)	1	1	1	1	
G-6	44-010M-7400	Felt	오일 탱크 헬트(6-6)	1	1	1	1	
G-7	44-0000-1230	Oil Wick	유심	1	1	1	1	
G-8	44-0000-1230	Oil Wick	유심	1	1	1	1	
G-9	44-009G-7400	Spring Plate	오일 조절판 스프링	1	1	1	1	
G-10	SC-0502-2302	Screw(9/64" n=40)	윗뚜껑 고정판 고정나사(대)(9/64" n=40)	1	1	1	1	
G-11	44-013R-7400	Packing For G-1	기름받침 판 박킹	1	1	1	1	
G-12	44-014C-7400	Wick Holder	오일 유심 안내(6-11)	1	1	1	1	
G-13	SC-0531-2302	Screw(9/64" n=40)	윗뚜껑 고정판 고정나사(소)(9/64" n=40)	2	2	2	2	
G-14	44-015C-7400	Oil Guide Tube	오일 안내	1	1	1	1	
G-15	02-014M-2302	Felt	상축 급유 헬트	1	1	1	1	
G-16	44-017C-7400	Oil Cover	기름막이 판	1	1	1	1	
G-17	44-018C-8130	Presser For G-16	기름막이 누름판	1	1	1	1	
G-18	06-024S-7400	Screw(3/16" n=32)	홈볼이 냄비 작은나사(3/16" n=32)	1	1	1	1	
G-19	44-016M-7400	Felt For Thread Take-Up Lever	실채기 급유 헬트(6-14)	1	1	1	1	
G-20	SC-A156-4118	Screw(9/64" n=40)	홈볼이 냄비 작은나사(9/64" n=40)	1	1	1	1	
G-21	01-017C-7400	Oil Pipe	오일 파이프(1-14)	1	1	1	1	
G-22	44-027C-7400	Oil Gauge Window	유창	1	1	1	1	
G-23	06-043R-1230	Facking For G-22	피이드 조절기 붓싱 오링	1	1	1	1	
G-24	44-022C-7400	Oil Tube Supporter	오일 파이프 고정캡	1	1	1	1	
G-25	44-023M-7400	Felt	베드 오일 헬트	1	1	1	1	
G-26	SC-0518-7400	Screw(9/64" n=40)	헬트 점나사(9/64" n=40)	1	1	1	1	
G-27	44-0000-1230	Oil Wick	유심	1	1	1	1	
G-28	44-012C-1230	Oil Tube For G-27	환류 파이프	1	1	1	1	
G-29	44-026G-7400	Tube Holder For G-28	헬트 잡이 스프링	1	1	1	1	
G-30	SC-0531-2302	Screw(9/64" n=40)	윗뚜껑 고정판 고정나사(소)(9/64" n=40)	1	1	1	1	
G-31	44-0000-1230	Oil Wick	유심	1	1	1	1	
G-32	44-012C-1230	Oil Tube For G-31	환류 파이프	1	1	1	1	
G-33	44-026G-7400	Tube Holder For G-32	헬트 잡이 스프링	1	1	1	1	
G-34	SC-0531-2302	Screw(9/64" n=40)	윗뚜껑 고정판 고정나사(소)(9/64" n=40)	1	1	1	1	
G-35	44-0000-1230	Oil Wick	유심	1	1	1	1	
G-36	44-012C-1230	Oil Tube For G-35	환류 파이프	1	1	1	1	
G-37	44-026G-7400	Tube Holder For G-36	헬트 잡이 스프링	1	1	1	1	
G-38	SC-0531-2302	Screw(9/64" n=40)	윗뚜껑 고정판 고정나사(소)(9/64" n=40)	1	1	1	1	
G-39	44-0000-1230	Oil Wick	유심	1	1	1	1	
G-40	44-012C-1230	Oil Tube For G-39	환류 파이프	1	1	1	1	
G-41	44-026G-7400	Tube Holder For G-40	헬트 잡이 스프링	1	1	1	1	
G-42	SC-0531-2302	Screw(9/64" n=40)	윗뚜껑 고정판 고정나사(소)(9/64" n=40)	1	1	1	1	
G-43	44-011C-7400	Oil Wick Setting Plate For G-36, 40	유심헬트 고정판(6-7)	1	1	1	1	
G-44	SC-0531-2302	Screw(9/64" n=40)	윗뚜껑 고정판 고정나사(소)(9/64" n=40)	1	1	1	1	
G-45	44-0000-1230	Oil Wick	유심	1	1	1	1	
G-46	44-012C-1230	Oil Tube For G-45	환류 파이프	1	1	1	1	
G-47	44-0000-1230	Oil Wick	유심	1	1	1	1	
G-48	44-012C-1230	Oil Tube For G-47	환류 파이프	1	1	1	1	
G-49	44-026G-7400	Tube Holder For G-48	헬트 잡이 스프링	2	2	2	2	
G-50	SC-0531-2302	Screw(9/64" n=40)	윗뚜껑 고정판 고정나사(소)(9/64" n=40)	2	2	2	2	
G-51	44-011C-7400	Oil Wick Setting Plate For G-36, 40	유심헬트 고정판(6-7)	1	1	1	1	
G-52	SC-0531-2302	Screw(9/64" n=40)	윗뚜껑 고정판 고정나사(소)(9/64" n=40)	1	1	1	1	
G-53	44-0000-1230	Oil Wick	유심	1	1	1	1	
G-54	44-019M-7400	Felt	앞 하축 붓싱 마개 헬트(5-3)	1	1	1	1	
G-55	44-019M-7400	Felt For Lower Shaft Bushing(F)	혹 몸체 전 붓싱 헬트(6-19)	1	1	1	1	
G-56	07-003M-7400	Felt For Lower Shaft Bushing(M)	혹 몸체 전 붓싱 헬트(6-19)	1	1	1	1	
G-57	44-001M-8270	Felt	헬트	1	1	1	1	
G-58	44-002A-8270	Cover For G-57	헬트 받침판	1	1	1	1	
G-59	SC-0543-2302	Screw(11/64" n=40)	톱카바 힌지 고정나사(11/64" n=40)	2	2	2	2	


Lower Shaft Mechanism

하축 관계

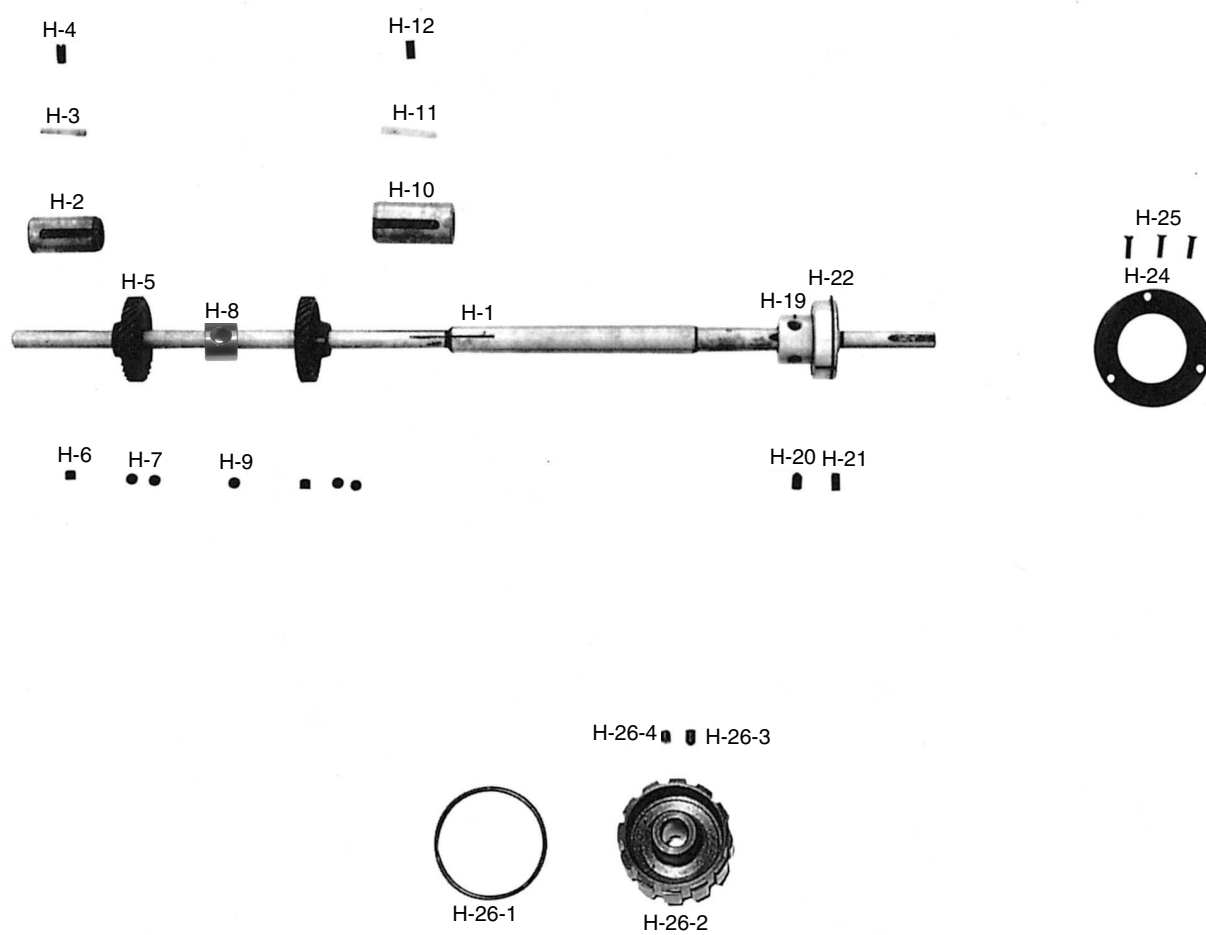

Ref. No.	Parts No.	Name of Parts	품 명	Q' ty				비 고
				KM-817	KM-827	KM-816	KM-826	
H-1	07-101A-8270	Lower Shaft	하축	1	1	1	1	
H-2	07-102A-8270	Lower Shaft Bushing(F)	하축 앞 붓싱	1	1	1	1	
H-3	07-004M-7400	Felt For H-2	하축 앞 붓싱 펠트(5-4)	1	1	1	1	
H-4	SC-0507-1230	Screw (15/64" n = 28)	상축 중 붓싱 고정나사(15/64" n=28)	1	1	1	1	
H-5	09-001A-7400	Lower Shaft Spiral Gear	기어(대)	1	2	1	2	
H-6	SC-A117-4417	Screw(1/4" n = 40)	흡불이 멈춤나사(1/4" n = 40)	1	2	1	2	
H-7	SC-A308-4517	Screw(1/4" n = 40)	흡불이 멈춤나사(1/4" n = 40)	2	4	2	4	
H-8	06-054A-5700	Vertical Feed Eccentric Cam	편심 캠	1	1	1	1	
H-9	SC-A550-4517	Screw(1/4" n = 40)	흡불이 멈춤나사(1/4" n = 40)	1	1	1	1	
H-10	07-103A-8270	Lower Shaft Bushing (M)	하축 중 붓싱	1	1	1	1	
H-11	07-004M-7400	Felt For H-10	하축 앞 붓싱 펠트(5-4)	1	1	1	1	
H-12	SC-0507-1230	Screw(15/64" n = 28)	상축 붓싱 고정나사(15/64" n=28)	1	1	1	1	
H-19	07-007A-7400	Bearing Bushing	베어링 홀다	1	1	1	1	
H-20	SC-A117-4417	Screw(1/4" n = 40)	육각구멍불이 멈춤나사(1/4" n = 40)	1	1	1	1	
H-21	SC-A308-4517	Screw(1/4" n = 40)	육각구멍불이 멈춤나사(1/4" n = 40)	1	1	1	1	
H-22	07-008A-7400	Bearing(6203NR)	하축 베어링(6203)	1	1	1	1	
H-24	07-009A-7400	Bearing Presser	베어링 카바	1	1	1	1	
H-25	SC-0155-7400	Screw(9/64" n = 40)	접시머리 보울트(9/64" n = 40)	3	3	3	3	
H-26-1	02-015C-7400	Belt Pulley Ring	후렌치	1	1	1	1	
H-26-2	80-002A-8270	Belt Pulley(L)	타이밍 폴리(하)	1	1	1	1	
H-26-3	SC-A117-4417	Screw(1/4" n = 40)	육각흡불이 멈춤나사(1/4" n = 40)	1	1	1	1	
H-26-4	SC-A308-4517	Screw(1/4" n = 40)	육각흡불이 멈춤나사(1/4" n = 40)	1	1	1	1	

Accessories 액세서리

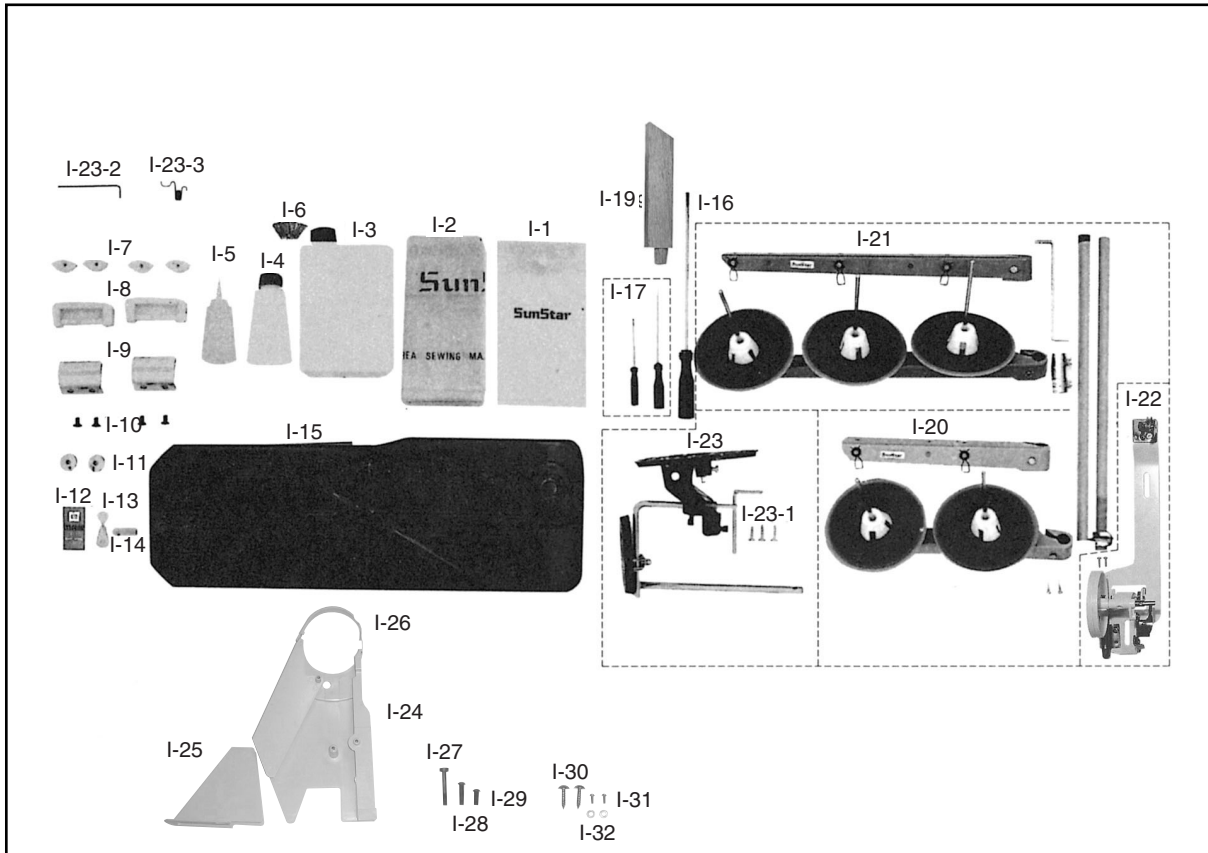

Ref. No.	Parts No.	Name of Parts	품명	Q' ty				비고
				KM-817	KM-827	KM-816	KM-826	
I-1	91-001C-1230	Accessory Bag	액세서리 박스	1	1	1	1	
I-2	91-001C-8270	Head Cover	미싱커버(소)	1	1	1	1	
I-3	91-108C-1230	Oil	오일캔	1	1	1	1	
I-4	91-002C-7400	Oiler	유차	1	1	1	1	
I-5	91-011C-1230	Oil Receiver	유차병	1	1	1	1	
I-6		Nail	못	6	6	6	6	
I-7	91-103R-7400	Head Cushion	힌지고무(소)	4	4	4	4	
I-8	91-106R-7400	Rubber Cushion For Hinge	힌지고무(대) <White>	2	2	2	2	
I-9	91-004C-7400	Head Hinge	힌지쇠	2	2	2	2	
I-10	SC-0118-7400	Screw(1/4" n=24)	힌지 콤파나사(1/4" n=24)	4	4	4	4	
I-11	09-130A-7400	Bobbin	보빈	2	2	2	2	
I-12		Needle	바늘	5	5	5	5	
I-13	91-007C-7400	Thread Inserting Guide	실끼기	1	1	1	1	
I-14	01-024M-7400	Felt	윗실 급유 헬트	1	1	1	1	
I-15	91-001A-7400	Oil Pan	오일 팬	1	1	1	1	
I-16	91-102C-1230	Driver (Large)	드라이버(大)	1	1	1	1	
I-17	91-103C-1230	Driver (Middle, Small)	드라이버(中, 小)	1	1	1	1	
I-19	90-003A-8670	Head Rest	두부 지지봉	1	1	1	1	
I-20	91-007A-2302	Thread Stand Assembly	실패꽃이(組)	1Set		1Set		
I-21	91-008A-7400	Thread Stand Assembly	3본 사립봉		1Set		1Set	
I-22	91-101A-2700	Bobbin Winder Assembly	실감기(組)	1Set	1Set	1Set	1Set	
I-23	43-007A-7400	Knee Lifting Assembly	무릎올림(組)	1Set	1Set	1Set	1Set	
I-23-1	91-002S-3400	Screw For I-23	목나사	3	3	3	3	
I-23-2	91-001C-2700	Wrench (3MM)	L-렌치(3MM)	1	1	1	1	
I-23-3	43-010G-3400	Spring for I-23	무릎 받침축 리턴 S/P	1	1	1	1	
I-24	60-003A-8270	Belt Cover "A"	벨트커버 "A"	1	1	1	1	
I-25	60-004A-8270	Belt Cover "B"	벨트커버 "B"	1	1	1	1	
I-26	60-004A-640L	Belt Cover "C"	벨트커버 "C"	1	1	1	1	
I-27	SC-0331-7400	Screw (15/16" n=28)	가마토대 슬리브 고정나사	1	1	1	1	
I-28	SC-0546-1230	Screw (15/16" n=28)	제어체 운동나사(대)	1	1	1	1	
I-29	SC-0545-1230	Screw (15/16" n=28)	제어체 운동나사(소)	1	1	1	1	
I-30	60-003S-7400	Screw For I-25	벨트커버B (하)고정나사	2	2	2	2	
I-31	SC-0196-2700	Screw M3.0×0.5	슬레노이드 부착 고정나사	2	2	2	2	
I-32	11-017W-2700	Washer For I-31	슬레노이드 부착 평washer	2	2	2	2	



KM-827

Gauge Size	(C-15)	(D-30)	(F-41)	(F-48)
	 Needle Clamp	 Presser Foot	 Feed Dog	 Needle Plate
1/16" (1.6mm)	02-221A-7400	05-210A-7400	06-113A-8270	01-204A-8270
3/32" (2.4mm)	02-121A-7400	05-210A-7400	06-012A-8270	01-004A-8270
1/8" (3.2mm)	02-521A-7400	05-510A-7400	06-013A-8270	01-304A-8270
3/16" (4.8mm)	02-321A-7400	05-310A-7400	06-112A-8270	01-104A-8270
1/4" (6.4mm)	02-021A-7400	05-010A-7400	06-115A-8270	01-404A-8270
1" (25.4mm)	02-921A-7400	05-910A-7400	06-116A-8270	01-504A-8270

KM-826 (Roller Presser Type)

Gauge Size	D-33-12	C-16	F-43	F-50
	 Needle Clamp	 Presser Foot	 Feed Dog	 Needle Plate
1" (25.4mm)	81-036A-8260	04-051A-8260	06-012A-8260	01-045A-8260
3/64" (1.2mm)	81-046A-8260	04-021A-8260	06-013A-8260	01-025A-8260
1/16" (1.6mm)	81-016A-8260	04-011A-8260	06-014A-8260	01-015A-8260
3/32" (2.4mm)	81-006A-8260	04-001A-8260	06-001A-8260	01-005A-8260
1/8" (3.2mm)	81-026A-8260	04-031A-8260	06-011A-8260	01-035A-8260

KM-826 (Flat Presser Type)

Gauge Size	C-15	D-30	F-45	F-52
	 Needle Clamp	 Presser Foot	 Feed Dog	 Needle Plate
1/8" (3.2mm)	02-521A-7400	05-510A-7400	06-011A-8260	01-035A-8260
1/4" (6.4mm)	02-021A-7400	05-010A-7400	06-021A-8260	01-155A-8260

수정 리스트 Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
1	I-3	91-108C-1230	Oil Tank	Substitution	98. 4	91-008C-1230	98. 3/4
2	E-7	06-004A-7400	Feed Regulator	Substitution	98. 5	06-040A-8270	
3	E-31	06-012A-7500	Pin(B) for E-26	Substitution	98. 5	06-027P-7400	
4	I-2	90-001C-8270	Head Cover	Substitution	98. 7	91-013C-1230	
5	I-23	43-007A-7400	Knee Lifting Assembly	Substitution	98. 7	91-002A-2302	
6	H-7	SC-A308-4517	Screw(1/4" n = 40)	Substitution	98. 5	SC-0129-4515	
7	H-6	SC-A117-4417	Screw(1/4" n = 40)	Substitution	98. 5	SC-0115-4215	
8	F-60	SC-A550-4517	Screw(1/4" n = 40)	Substitution	98. 5	SC-0129-4515	
9	H-9	SC-A550-4517	Screw(1/4" n = 40)	Substitution	98. 5	SC-0115-4215	
10	A-38		Maker Mark	Substitution	98. 8	01-035M-8130	98. 4/4
11	C-2	04-001A-7400	Needle Bar	Substitution	98. 9	04-001A-7500	
12	B-15		Thrust Ring	Deleted Parts	98. 10	02-007A-7400	
13	D-33-5B	05-017A-8150	Roller Presser Foot(L)	Change of Blue Point	98. 10	81-001A-8260	
14	F-55	09-036A-8570	Rotary Hook Assembly	Substitution	98. 10	09-001A-8270	
15	H-16		Ratchet Button	Deleted Parts	98. 10	06-010C-8270	
16	H-17		Ratchet Button Spring	Deleted Parts	98. 10	06-011G-8270	
17	H-18		E-Ring(ϕ 4)	Deleted Parts	98. 10	05-014C-1230	
18	H-23		Collar	Deleted Parts	98. 10	80-001A-8270	
19	I-23-2	91-003C-2700	L-Wrench(3MM)	Additional Parts	98. 7		
20	I-23-3	43-010G-3400	Spring for I-23	Additional Parts	98. 7		
21	A-9	01-013S-7400	Screw(11/64" n = 40)	Substitution	99. 3	SC-0179-4125	99. 1/4
22	A-11	SC-0171-4120	Screw(11/64" n = 40)	Substitution	99. 3	SC-0501-4120	
23	A-26	SC-0543-4525	Screw(11/64" n = 40)	Substitution	99. 3	SC-0175-4522	
24	A-28	SC-0543-4525	Screw(11/64" n = 40)	Substitution	99. 3	SC-0175-4522	
25	B-8	SC-A550-4517	Screw(1/4" n = 40)	Substitution	99. 3	SC-0129-4515	
26	E-25	SC-0543-4525	Screw(11/64" n = 40)	Substitution	99. 3	SC-0175-4522	
27	E-35	SC-0514-4515	Screw(15/64" n = 28)	Substitution	99. 3	SC-0507-4515	
28	E-37	SC-A129-4515	Screw(1/4" n = 40)	Substitution	99. 3	SC-0129-4515	
29	E-39	SC-0514-4515	Screw(1/4" n = 40)	Substitution	99. 3	SC-0129-4515	
30	E-52	SC-A308-4517	Screw(15/64" n = 28)	Substitution	99. 3	SC-0317-4517	
31	E-58	SC-0543-4525	Screw(11/64" n = 40)	Substitution	99. 3	SC-0175-4522	
32	F-39	SC-0543-4525	Screw(11/64" n = 40)	Substitution	99. 3	SC-0501-4120	
33	F-46	SC-0543-4525	Screw(11/64" n = 40)	Substitution	99. 3	SC-0142-4122	
34	G-59	SC-0543-4525	Screw(11/64" n = 40)	Substitution	99. 3	SC-0175-4522	
35	I-22	41-101A-1230	Bobbin Winder Ass'y	Substitution	99. 4	41-001A-1230	99. 2/4
36	G-18	06-024S-7400	Screw (3/16" n = 32)	Substitution	99. 4	SC-0173-4118	99. 4/4
37	G-54	44-019M-7400	Felt	Substitution	99. 4	07-003M-7400	
38	G-56	07-003M-7400	Felt	Substitution	99. 4	44-019M-7400	
39	D-33-4	SC-0199-4124	Screw (11/64" n = 40)	Substitution	00. 5	SC-0199-4118	00. 1/4
40	F-33	09-107A-8270	Slide Block	Substitution	01. 01	09-007A-8270	00. 1/4

NOTE)

수정 리스트 Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
41	A-6	SC-0322-7400	Screw(9/64" n = 40)	Substitution	01. 11	SC-0322-2125	
42	A-8	SC-0178-7400	Screw(11/64" n = 40)	Substitution	01. 11	SC-0178-4118	
43	A-11	SC-0171-2302	Screw (11/64" n = 40)	Substitution	01. 11	SC-0171-4120	
44	A-13	SN-0121-7400	Screw(15/64" n = 28)	Substitution	01. 11	SN-0121-4000	
45	A-14	SC-0114-1230	Screw(15/64" n = 28)	Substitution	01. 11	SC-0114-4515	
46	A-16	SC-0502-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0502-4125	
47	A-18	SC-0519-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0519-2120	
48	A-20	SC-0519-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0519-2120	
49	A-22	SC-0519-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0519-2120	
50	A-25	SC-0531-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0531-4125	
51	A-26	SC-0543-2302	Screw(11/64" n = 40)	Substitution	01. 11	SC-0543-4525	
52	A-28	SC-0543-2302	Screw(11/64" n = 40)	Substitution	01. 11	SC-0543-4525	
53	A-37	SC-0519-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0519-2120	
54	A-44	SC-0501-2302	Screw(11/64" n = 40)	Substitution	01. 11	SC-0501-4120	
55	B-1	02-104A-8270	Thread Take-Up Lever	Substitution	01. 11	02-004A-8270	
56	B-3	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 11	SC-0507-4515	
57	B-7	01-104P-7400	Needle Bar Crank Shaft	Substitution	01. 11	02-004P-7400	
58	B-11	02-110A-7400	Upper Shaft	Substitution	01. 11	02-101A-7400	
59	B-12	02-105A-7400	Link Cam	Substitution	01. 11	02-005A-7400	
60	B-13	SC-0123-1230	Screw(9/32" n = 28)	Substitution	01. 11	SC-0123-4422	
61	B-14	SC-0124-7400	Screw(9/32" n = 28)	Substitution	01. 11	SC-0124-4522	
62	B-18	SC-0514-7400	Screw(15/64" n = 28)	Substitution	01. 11	SC-0514-4515	
63	B-21	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 11	SC-0507-4515	
64	B-29	SC-0150-2500	Screw(15/64" n = 28)	Substitution	01. 11	SC-0150-4122	
65	B-30	SC-0188-1230	Screw(5/16" n = 24)	Substitution	01. 11	SC-0188-4124	
66	C-4	SC-0125-5607	Screw(3/32" n = 56)	Substitution	01. 11	SC-0125-4124	
67	C-6	SC-0110-1230	Screw(15/64" n = 28)	Substitution	01. 11	SC-0110-4115	
68	C-8	SC-0110-1230	Screw(15/64" n = 28)	Substitution	01. 11	SC-0110-4115	
69	C-12	SC-0497-1230	Screw(3/16" n = 28)	Substitution	01. 11	SC-0497-4122	
70	C-17	SC-0160-5607	Screw(9/64" n = 40)	Substitution	01. 11	SC-0160-4125	
71	C-22	04-110A-7400	Needle Bar Rock Shaft	Substitution	01. 11	04-010A-7400	
72	C-23	04-111A-7400	Needle Bar Rock Shaft Bushing(F)	Substitution	01. 11	04-011A-7400	
73	C-24	04-114A-7400	Needle Bar Rock Shaft Bushing(R)	Substitution	01. 11	04-014A-7400	
74	C-26	04-102A-7400	Needle Bar Clamp	Substitution	01. 11	04-002A-7400	
75	C-28	SC-0158-3710	Screw(9/64" n = 40)	Substitution	01. 11	SC-0158-4122	
76	C-32	SC-0116-7400	Screw(3/32" n = 56)	Substitution	01. 11	SC-0116-4120	
77	C-33	04-119A-7400	Needle Bar Rock Shaft Connecting Rod	Substitution	01. 11	04-019A-7400	
78	C-36	SC-0531-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0531-4125	
79	C-37	04-101A-8270	Needle Bar Rock Link	Substitution	01. 11	04-001A-8270	
80	C-39	SC-0109-3710	Nut(5/16" n = 24)	Substitution	01. 11	SN-0109-4000	

NOTE)

수정 리스트 Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
81	C-41	SC-0523-7400	Screw(1/4" n = 28)	Substitution	01. 11	SC-0253-4118	
82	D-11	SC-0128-7400	Screw(11/64" n = 40)	Substitution	01. 11	SC-0128-4118	
83	D-15	SC-0542-1230	Screw(11/64" n = 40)	Substitution	01. 11	SC-0542-4515	
84	D-18	05-101A-7400	Flat Presser Bar	Substitution	01. 11	05-001A-7400	
85	D-19	05-102A-7400	Presser Bar Bushing(U)	Substitution	01. 11	05-002A-7400	
86	D-20	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 11	S-0507-4515	
87	D-21	05-103A-7400	Presser Bar Holder	Substitution	01. 11	05-003A-7400	
88	D-23	05-104A-7400	Presser Bar Lifter Bracket	Substitution	01. 11	05-004A-7400	
89	D-26	SC-0158-3710	Screw(9/64" n = 40)	Substitution	01. 11	SC-0158-4122	
90	D-28	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 11	SC-0507-4515	
91	D-31	SC-0315-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0315-4122	
92	D-33-4	SC-0199-2700	Screw(11/64" n = 40)	Substitution	01. 11	SC-0199-4124	
93	D-33-10	SC-0160-5607	Screw(9/64" n = 40)	Substitution	01. 11	SC-0160-4125	
94	D-33-14	SC-0130-1230	Screw(1/8" n = 44)	Substitution	01. 11	SC-0130-4122	
95	E-4	SC-0193-1230	Screw(3/16" n = 28)	Substitution	01. 11	SC-0193-4122	
96	E-7	06-104A-7400	Feed Regulator	Substitution	01. 11	06-004A-7400	
97	E-10	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 11	SC-0507-4515	
98	E-13	06-102A-8270	Reverse Lever Shaft	Substitution	01. 11	06-002A-8270	
99	E-14	06-107A-7400	Reverse Lever Shaft Crank	Substitution	01. 11	06-007A-7400	
100	E-15	SC-0330-7400	Screw(15/64" n = 28)	Substitution	01. 11	S-0330-4422	
101	E-16	06-117A-7400	Link For Reverse Lever Spring	Substitution	01. 11	06-017A-7400	
102	E-17	SC-0122-1230	Screw (15/64" n = 28)	Substitution	01. 11	SC-0122-4522	
103	E-22	SC-0186-1230	Screw (3/16" n = 32)	Substitution	01. 11	SC-0186-4118	
104	E-23	SC-0185-1230	Screw (3/16" n = 32)	Substitution	01. 11	SC-0185-4124	
105	E-25	SC-0543-2302	Screw (11/64" n = 40)	Substitution	01. 11	SC-0543-4525	
106	E-28	SC-0128-7400	Screw (11/64" n = 40)	Substitution	01. 11	SC-0128-4118	
107	E-30	SC-0330-7400	Screw (15/64" n = 28)	Substitution	01. 11	SC-0330-4422	
108	E-31	06-112A-7500	Pin(B) For E-26	Substitution	01. 11	06-012A-7500	
109	E-32	SC-0542-1230	Screw (11/64" n = 40)	Substitution	01. 11	SC-0542-4515	
110	E-33	06-179A-5607	Feed Rock Shaft	Substitution	01. 11	06-079A-5607	
111	E-34	06-143A-7400	Feed Rock Shaft Bushing(F)	Substitution	01. 11	06-043A-7400	
112	E-35	SC-0514-7400	Screw (15/64" n = 28)	Substitution	01. 11	SC-0514-4515	
113	E-36	06-142A-7400	Collar For E-33	Substitution	01. 11	06-042A-7400	
114	E-38	06-139A-7400	Feed Rock Shaft Bushing(R)	Substitution	01. 11	06-039A-7400	
115	E-39	SC-0514-7400	Screw (15/64" n = 28)	Substitution	01. 11	SC-0514-4515	
116	E-40	06-141A-7400	Feed Rock Shaft Crank	Substitution	01. 11	06-041A-7400	
117	E-41	SC-0253-7400	Screw (1/4" n = 28)	Substitution	01. 11	SC-0253-4118	
118	E-43	06-147A-7400	Feed Bar Shaft	Substitution	01. 11	06-047A-7400	
119	E-44	SC-0128-7400	Screw (11/64" n = 40)	Substitution	01. 11	SC-0128-4118	
120	E-45	06-106A-8270	Feed Bar	Substitution	01. 11	06-006A-8270	

NOTE)

수정 리스트 Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
121	E-47	SC-0106-7400	Screw(15/64" n = 28)	Substitution	01. 11	SC-0106-4111	
122	E-48	06-152A-7400	Feed Bar Fork	Substitution	01. 11	06-052A-7400	
123	E-50	SC-0531-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0531-4125	
124	E-51	06-138A-7400	Feed Cam	Substitution	01. 11	06-038A-7400	
125	E-58	SC-0543-2302	Screw(11/64" n = 40)	Substitution	01. 11	SC-0543-4525	
126	E-59	06-129A-7400	Feed Regulator Shaft	Substitution	01. 11	06-029A-7400	
127	E-61	02-121A-1230	Collar for E-59	Substitution	01. 11	02-021A-1230	
128	E-64	06-137A-7400	Lever Feed Connecting Link	Substitution	01. 11	06-037A-7400	
129	E-68	SC-0549-2302	Screw(1/8" n = 44)	Substitution	01. 11	SC-0549-2125	
130	F-1	09-118A-8170	Post(KM-817, 826)	Substitution	01. 11	09-108A-8170	
131	F-2	09-118A-8270	Post(KM-817, 826)	Substitution	01. 11	09-018A-8270	
132	F-4	SC-0344-8160	Screw(5/16" n = 24)	Substitution	01. 11	SC-0344-4125	
133	F-8	SC-0326-8260	Screw(5/16" n = 24)	Substitution	01. 11	SC-0326-4122	
134	F-12	SC-0365-3710	Screw(9/64" n = 40)	Substitution	01. 11	SC-0365-4118	
135	F-17	SC-0537-8260	Screw(3/16" n = 32)	Substitution	01. 11	SC-0537-4125	
136	F-25	SC-0501-2302	Screw(11/64" n = 40)	Substitution	01. 11	SC-0501-4120	
137	F-27	SC-0179-3710	Screw(11/64" n = 40)	Substitution	01. 11	SC-0179-4125	
138	F-29	SC-0326-8260	Screw(11/64" n = 24)	Substitution	01. 11	SC-0326-4122	
139	F-30	SC-0116-3400	Nut(1/4" n = 40)	Substitution	01. 11	SN-0116-4000	
140	F-37	SC-0115-7400	Nut(3/16" n = 32)	Substitution	01. 11	SN-0115-4000	
141	F-39	SC-0543-2302	Screw(11/64" n = 24)	Substitution	01. 11	SC-0543-4525	
142	F-46	SC-0543-2302	Screw(1/8" n = 44)	Substitution	01. 11	SC-0543-4525	
143	F-53	SC-0310-8130	Screw(9/64" n = 40)	Substitution	01. 11	SC-0310-4119	
144	F-54	09-113A-8270	Hook Shaft	Substitution	01. 11	08-013S-8270	
145	F-57	SC-0147-8270	Screw(9/64" n = 40)	Substitution	01. 11	SC-0147-4114	
146	F-58	SC-130A-7400	Bobbin	Substitution	01. 11	09-030A-7400	
147	F-61	09-114A-8270	Opener	Substitution	01. 11	09-014A-8270	
148	F-63	09-116A-8270	Fork for F-61	Substitution	01. 11	09-016A-8270	
149	F-64	SC-0502-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0502-4125	
150	G-2	SC-0502-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0502-4125	
151	G-10	SC-0502-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0502-4125	
152	G-13	SC-0531-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0531-4125	
153	G-26	SC-0518-7400	Screw(9/64" n = 40)	Substitution	01. 11	SC-0518-4119	
154	G-30	SC-0531-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0531-4125	
155	G-34	SC-0531-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0531-4125	
156	G-38	SC-0531-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0531-4125	
157	G-42	SC-0531-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0531-4125	
158	G-44	SC-0531-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0531-4125	
159	G-50	SC-0531-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0531-4125	
160	G-52	SC-0531-2302	Screw(9/64" n = 40)	Substitution	01. 11	SC-0531-4124	

NOTE)

수정 리스트 Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
161	G-59	SC-0543-2302	Screw(11/64" n = 40)	Substitution	01. 11	SC-0543-4525	
162	H-1	07-101A-8270	Lower Shaft	Substitution	01. 11	07-001A-8270	
163	H-2	07-102A-8270	Lower Shaft Bushing(F)	Substitution	01. 11	07-002A-8270	
164	H-4	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 11	SC-0507-4515	
165	H-10	07-103A-8270	Lower Shaft Bushing(M)	Substitution	01. 11	07-003A-8270	
166	H-12	SC-0507-1230	Screw(15/64" n = 28)	Substitution	01. 11	SC-0507-4515	
167	I-10	SC-0118-7400	Screw(1/4" n = 24)	Substitution	01. 11	SC-0118-4119	
168	I-11	09-130A-7400	Bobbin	Substitution	01. 11	09-030A-7400	
169	C-11	04-103A-8260		Substitution	03. 02	04-003A-8260	03. 1/4
170	C-2	04-101A-7500		Substitution	03. 06	04-101A-7500	03. 2/4
171	E-54	06-135A-7400		Substitution	03. 06	06-035A-7400	03. 2/4
172	I-16	91-102C-1230		Substitution	03. 06	91-002C-1230	03. 2/4
173	I-17	91-103C-1230		Substitution	03. 06	91-003C-1230	03. 2/4
174	H-8	06-054C-5700		Change of Blue Point	03. 08	07-005A-7400	03. 3/4
175							
176							
177							
178							
179							
180							
181							
182							
183							
184							
185							
186							
187							
188							
189							
190							
191							
192							
193							
194							
195							
196							
197							
198							
199							
200							

NOTE)

수정 리스트
Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
201							
202							
203							
204							
205							
206							
207							
208							
209							
210							
211							
212							
213							
214							
215							
216							
217							
218							
219							
220							
221							
222							
223							
224							
225							
226							
227							
228							
229							
230							
231							
232							
233							
234							
235							
236							
237							
238							
239							
240							

NOTE)

수정 리스트
Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
241							
242							
243							
244							
245							
246							
247							
248							
249							
250							
251							
252							
253							
254							
255							
256							
257							
258							
259							
260							
261							
262							
263							
264							
265							
266							
267							
268							
269							
270							
271							
272							
273							
274							
275							
276							
277							
278							
279							
280							

NOTE)

수정 리스트
Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
281							
282							
283							
284							
285							
286							
287							
288							
289							
290							
291							
292							
293							
294							
295							
296							
297							
298							
299							
300							
301							
302							
303							
304							
305							
306							
307							
308							
309							
310							
311							
312							
313							
314							
315							
316							
317							
318							
319							
320							

NOTE)

수정 리스트
Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
321							
322							
323							
324							
325							
326							
327							
328							
329							
330							
331							
332							
333							
334							
335							
336							
337							
338							
339							
340							
341							
342							
343							
344							
345							
346							
347							
348							
349							
350							
351							
352							
353							
354							
355							
356							
357							
358							
359							
360							

NOTE)

수정 리스트
Changed Parts List

No.	Ref. No.	Parts No.	Name of Parts	Contents	Date	Old Parts No.	Remarks
361							
362							
363							
364							
365							
366							
367							
368							
369							
370							
371							
372							
373							
374							
375							
376							
377							
378							
379							
380							
381							
382							
383							
384							
385							
386							
387							
388							
389							
390							
391							
392							
393							
394							
395							
396							
397							
398							
399							
400							

NOTE)



По вопросам приобретения или с целью консультации
вы можете обращаться по телефону: (495) 989-22-97
или по e-mail: info@krung.ru

Также предлагаем вам посетить
наш информационный сайт
www.krung.ru